

salton®

CITRUS JUICER

MODEL CJ-5

**salton®
salton
salton**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use and before cleaning.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Salton for examination, repair or adjustment. See Warranty.
6. The use of accessories or attachments not recommended by Salton may cause hazards.
7. Do not use outdoors.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. This appliance is for Household Use Only. Do not use appliance for other than its intended use.
11. Do not leave unit unattended while in use.


SAVE THESE INSTRUCTIONS

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

DESCRIPTION OF PARTS

1. Cover
2. Reamer
3. Pulp Scrapers
4. Pulp Selector
5. Upper Strainer
6. Lower Strainer
7. Pitcher
8. Base

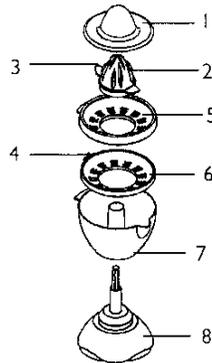

BEFORE FIRST USE

To disassemble see the Care and Cleaning Section. Wash the Cover, Reamer, Upper Strainer, Lower Strainer and Pitcher in warm soapy water. Wipe the Base with a damp cloth. NEVER IMMERSE THE BASE IN WATER OR ANY OTHER LIQUID.

HOW TO USE

1. Plug Citrus Juicer into a 120 V outlet.
2. Roll fruit between the palm of your hand and the counter top to break down fibers. Cut fruit in half crosswise. NOTE: Fruit at room temperature will yield more juice.
3. Slide the Pulp Selector to the desired position, large dot for more pulp, smaller dots for less pulp.
4. Press the cut side of the fruit down on the Reamer. The Reamer will begin to turn. Altering the pressure on the reamer may cause the Reamer to automatically change direction. This is a normal operating feature. Move the fruit from side to side to get the maximum amount of juice. NOTE: The Reamer is designed for every kind of citrus fruit.
5. If pulp begins to build up in the strainer, remove the Reamer and Strainer and remove pulp. Replace the Strainer and Reamer and continue juicing. NOTE: Do not operate for longer than 6 minutes without interruption.
6. When finished juicing, unplug unit from outlet, remove Reamer and Strainer. Remove Pitcher by holding the Base and turning counterclockwise. Pour juice into glasses.

CARE AND CLEANING

1. Unplug from outlet.
2. The Cover, Reamer, Strainer Assembly and Pitcher can be washed in warm soapy water or in the top rack of the dishwasher. Wipe Base with a damp cloth. **DO NOT IMMERSE THE BASE IN WATER OR ANY OTHER LIQUID.** To separate the Upper and Lower Strainer, push on the Pulp Selector button and grasp tab on Lower Strainer and gently pull apart. To re-assemble, line up the inner circles of both the Upper and Lower Strainer making sure that the Pulp Selector button in the Lower Strainer is in line with the slot for the Pulp Selector in the Upper Strainer. Snap parts together. To remove the Pitcher, hold Base and turn the Pitcher counterclockwise.
3. To reassemble, position the Pitcher so that the center hole fits over the shaft of the Base. Turn clockwise until it clicks into position. Place the Strainer Assembly on the Base so that the Pulp Selector is positioned over the handle on the Pitcher. Position the Reamer on the Strainer so that the shaft from the Base fits into the center hole in the bottom of the Reamer. Place cover on top of unit.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be of the grounding-type 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

SALTON warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During that period these defects will be repaired or the product will be replaced at SALTON's option without charge. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use, or improper maintenance.

TO RETURN FOR SERVICE

1. Securely package and return the product PREPAID to: SALTON CANADA, 81A Brunswick, Dollard-des-Ormeaux, Quebec, H9B 2J5
2. Be sure to enclose your name, address, postal code and description of defect.
3. To ensure prompt "In-Warranty" service, be sure to include a proof of purchase. We recommend you take the necessary precaution of insuring the parcel.
4. For repairs not covered by the Warranty, you will be advised of the cost of repair in advance, and upon receipt of your cheque or money order, the repairs will be completed and the product returned to you.

SALTON CANADA
81A Brunswick
Dollard-des-Ormeaux
Quebec H9B 2J5
Website: www.salton.com
Service: service@salton.com