

salton®

coffee maker/dispenser 10 cup



Instruction Booklet

Model: FC-1104

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Salton for examination, repair or adjustment. See Warranty.
7. The use of accessories or attachments not recommended by Salton may result in fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use.
12. Do not leave unit unattended while in use.
13. Extreme caution must be used when moving an appliance containing hot liquids.
14. The appliance is equipped with a removable water tank. During operation, never remove the water tank.
15. Any maintenance other than cleaning should be performed by an authorized service facility.


SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

DESCRIPTION OF PARTS

- 1) Lid
- 2) Inner Lid (Water Spreader)
- 3) Removable Filter Basket
- 4) Water Tank Lid
- 5) Removable Water Tank
- 6) Coffee Dispense Button
- 7) Coffee Reservoir
- 8) `Keep Warm` Heating Element
- 9) Coffee Reservoir Cover
- 10) Drip Tray
- 11) On/Off Button

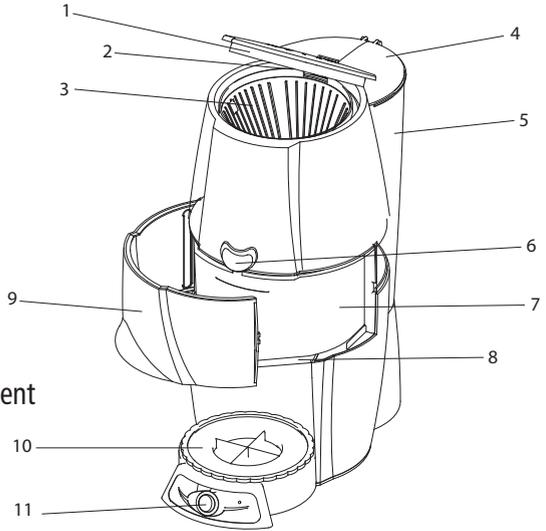

BEFORE FIRST USE

Wash the Removable Filter Basket, Water Tank, Coffee Reservoir and Drip Tray in warm soapy water. Rinse thoroughly and dry. Wipe the Main Housing with a soft damp cloth. Do not immerse Main Housing in water or any other liquid.

Prior to brewing coffee for the first time run the machine with water only. Follow the directions in the HOW TO USE section omitting the coffee and the #4 cone-shaped paper filter. When all the water has dripped into the Coffee Reservoir, press the On/Off Button to the 'Off' position. Wait a few minutes, then press the the Coffee Dispense Button to let the water flow into a mug. Discard the water from the mug. Repeat until all the water has been discarded.

HOW TO USE

1. Fill the Water Tank with fresh cold water for the desired number of cups. Fill the Water Tank by removing the Water Tank and filling under the tap.
NOTE: Do not fill above the MAX line or less than the MIN line indicated on the Water Tank.
2. Lift the Lid and the Inner Lid and place a #4 cone-shaped paper filter in the Filter Basket. Fill the coffee filter with the desired amount of ground coffee.
NOTE: Use coffee ground specifically for automatic drip coffee makers. Usually one Coffee Measuring Scoop or a level tablespoon of ground coffee is used for each cup of coffee. Adjust the amount to your personal taste.
3. Close the Inner Lid and the Lid.
4. Make sure that the Coffee Reservoir is in its place and close the Coffee Reservoir Cover.
5. Plug into a 120 Volt AC outlet.
6. Press the ON/OFF Button and the Indicator Light will illuminate and the brew cycle will start.
NOTE: The brew cycle can be interrupted by pressing the ON/OFF Button at any time. If you press the ON/OFF button again the brew cycle will continue.
7. If you wish to serve a cup of coffee before the brew cycle is complete, place a mug on the Drip Tray and press the Coffee Dispense Button. The coffee will flow directly into your mug.
NOTE: The height of the Drip Tray can be adjusted to accommodate a variety of different mug sizes. Grasp the cross of the Drip Tray and turn counter clockwise to raise the height of the Drip Tray or turn clockwise to lower the height of the Drip Tray.
8. Once the brew cycle is complete, the 'Keep Warm' Heating Element (located under the Coffee Reservoir) will automatically keep the coffee warm as long as the coffee maker is in the 'On' position.
NOTE: When the coffee is being kept warm, make sure that there is coffee in the Coffee Reservoir.
9. Press the On/Off button to the 'Off' position when the Coffee Reservoir is empty or when the unit is not in use.
10. To brew more coffee, turn the unit off and allow to cool for 10 minutes before making a new batch of coffee.
CAUTION: If the unit is not cooled, before immediately reusing, water placed in the Water Reservoir may become overheated and a spray of steam may be released when the Lid is opened, creating a risk of burn.

CARE AND CLEANING

- 1) Unplug unit and let cool before cleaning.
- 2) Remove and discard the paper coffee filter from the Filter Basket.
- 3) Remove the Coffee Reservoir.

CAUTION: The Coffee Reservoir gets very hot during use. Make sure that the unit has cooled completely before removing the Coffee Reservoir.

- 4) Wash the Removable Filter Basket, Water Tank, Coffee Reservoir and Drip Tray in warm soapy water. Rinse thoroughly and dry.
- 5) Wipe the Main Housing with a soft damp cloth.

NEVER IMMERSE THE MAIN HOUSING IN WATER OR ANY OTHER LIQUID.

Descaling

Over a period of time, minerals and calcium found in water will accumulate in your Coffee Maker and may affect its operation. The appliance should be cleaned approximately every six months, depending on water conditions. Use distilled vinegar in the following manner to remove the mineral deposits.

1. Fill the Water Tank to the MAX level with equal parts of white vinegar and cold water. Close the Inner Lid and the Lid.
2. Place the Coffee Reservoir in its place and close the Coffee Reservoir Cover.
3. Press the ON/OFF Button and the Coffee Dispenser will start.
4. Let the whole quantity of the vinegar/water solution run through the machine, then turn the Coffee Dispenser off by pressing the ON/OFF Button. (The red On Indicator Light will turn off.)
5. Press the Coffee Dispense Button to let the water flow into a mug. Discard the water from the mug. Repeat until all the water has been discarded.
6. Repeat the above steps using cold water to rinse away any residual vinegar. Repeat twice.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During this 'in-warranty' period, defective products will be repaired or replaced at the discretion of the retailer and/or Salton Canada. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use or improper maintenance.

A defective product should be returned to the original place of purchase within the retailer's stipulated return/exchange period*. If you are unable to have a defective product replaced under warranty by the retailer, please check our website at "www.salton.com" for the service centre nearest you. You may also contact us for assistance by mail, e-mail, fax or telephone as listed below.

To ensure prompt 'in-warranty' service securely package and return the product to us prepaid. Be sure to include the original proof of purchase and a description of the defect along with your address and postal code.

For repairs not covered by the warranty, please contact us for assistance.

SALTON CANADA

Customer Service Department
81A Brunswick,
Dollard-des-Ormeaux,
Quebec, Canada H9B 2J5
website: www.salton.com
E-mail: service@salton.com
Fax: 514-685-8300
Tel: 514-685-3660

* Return/exchange policies at each retailer vary and may differ from the SALTON Canada 1 year limited warranty period.