

salton®

ELECTRONIC COFFEE MACHINE

MODEL FC-120E

**salton®
salton
salton**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Salton for examination, repair or adjustment. See Warranty.
7. The use of accessories or attachments not recommended by Salton may cause hazards.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot liquids.
12. Prior to connecting or disconnecting plug from wall outlet, turn any control to "off".
13. This appliance is for Household Use Only. Do not use appliance for other than its intended use.
14. The Carafe is designed for use with this appliance. It must never be used on a range top.
15. Do not set the hot Carafe on a wet or cold surface.
16. Do not use a cracked Carafe or a Carafe having a loose or weakened handle.
17. Do not clean Carafe with cleansers, steel wool pads or other abrasive material.


SAVE THESE INSTRUCTIONS

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

DESCRIPTION OF PARTS

- 1) Water Reservoir Lid
- 2) Filter Basket Holder
- 3) Filter Basket (inside of Holder)
- 4) Main Housing
- 5) Water Level Window
- 6) Keep Warm Plate
- 7) Carafe
- 8) Carafe Water Level Markings
- 9) Digital Clock Display
- 10) Hour Advance Button
- 11) Minute Advance Button
- 12) Delay Brew Button
- 13) Start/Stop Button
- 14) Delay Brew Indicator Light
- 15) On/Off Indicator Light

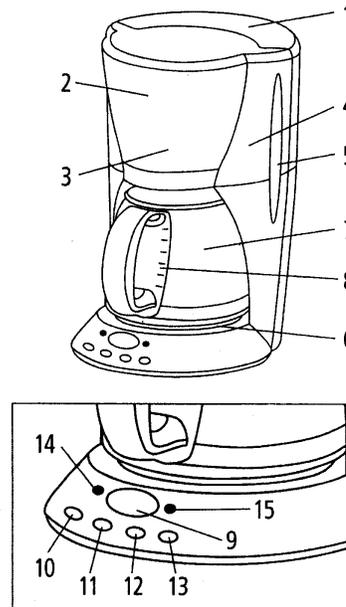

BEFORE FIRST USE

Wash the Carafe, Lid and Filter Basket in warm soapy water. Rinse thoroughly and dry. Wipe the base of the unit with a soft damp cloth. Do not immerse base in water or any other liquid.

Prior to brewing coffee for the first time run the machine with water only. Follow the directions in the HOW TO USE section omitting the coffee and coffee filter.

HOW TO USE

- 1) Plug into a 120 Volt AC outlet.
- 2) Swing the Filter Basket Holder outward to the left. Place a #4 cone-shaped paper filter, a permanent filter (SwissGold model KF-4 or a Jasi Goldtone model KF-4T) in the Filter Basket. Fill the coffee filter with the desired amount of ground coffee. See Recommended Amount of Coffee chart below. NOTE: Use coffee ground specifically for automatic drip coffee makers.
- 3) Close the Filter Basket Holder and snap into place. NOTE: If the door does not close completely, check to see that the Filter Basket is properly seated in the Filter Holder then snap the door into place.
- 4) Fill the carafe with cold water for the desired amount of cups of coffee. NOTE: Do not make less than 4 cups. Open the Water Reservoir Lid and pour the water from the Carafe. Close the Water Reservoir Lid. NOTE: Use only cold water.
- 5) Place the Carafe with Lid on the Keep Warm Plate. NOTE: The Lid must be placed on the Carafe.

- 6) If you want to brew coffee immediately, press the 'Start/Stop' button TWICE and the green 'On' Indicator Light will illuminate indicating that the brewing cycle has started. (To use Timed Brewing follow the directions in the section "Timed Brew")
- 7) In a few minutes the coffee will be brewed and the Coffee Maker will automatically switch over to 'Keep Warm' mode for the next two hours. The 'Keep Warm Cycle' will shut off automatically and the 'On' Indicator Light will go out at the end of the 2 hours. If you wish to turn off the Coffee Maker before 2 hours has elapsed, press the Start/Stop Button once.

RECOMMENDED AMOUNT OF COFFEE

Number of Cups	Ground Coffee Tbsp. (ml)
4	9 - 12 (135-180)
6	12 - 14 (180 - 210)
8	12 - 16 (180 - 240)
10	15 - 20 (225 - 300)
12	18 - 24 (270 - 360)

Delayed Brew Cycle

- 1) Plug Coffee Maker into a 120 Volt AC outlet.
- 2) Set the clock to the correct hour by pressing the Hour Advance Button until the desired hour is reached. (NOTE: There is an AM and PM indicator on the left side of the digital read out.) Set the minutes by pressing the Minute Advance Button until the desired minutes are reached.
- 3) Swing the Filter Basket Holder outward to the left. Place a #4 cone-shaped paper filter or permanent filter (SwissGold model KF-4 or a Jasi Goldtone model KF-4T) in the Filter Basket. Fill the coffee filter with the desired amount of ground coffee. NOTE: Use coffee ground specifically for automatic drip coffee makers.
- 4) Close the Filter Basket Holder and snap into place. NOTE: If the door does not close completely, check to see that the Filter Basket is properly seated in the Filter Holder then snap the door into place.
- 5) Fill the carafe with cold water needed for the desired amount of cups of coffee. NOTE: The minimum number of cups is 4. Open the Water Reservoir Lid and pour the water from the Carafe. Close the Water Reservoir Lid. NOTE: Use only cold water.
- 6) Place the Carafe on the Keep Warm Plate. NOTE: The Lid must be placed on the Carafe.
- 7) To set the brewing time, press and hold the Brew Button and at the same time press the Hour Advance Button until the desired hour is reached. While continuing to hold the Brew Button press the Minute Advance Button until the desired minutes are reached. Once you have reached the selected brew time, release the Brew Button.

- 8) Press the Start/Stop Button ONCE and the red 'Auto' light will illuminate indicating that the Coffee Maker is now waiting for the preset brew time to be reached before starting the brewing cycle.
- 9) Once the preset time has been reached the brewing cycle will start. The Coffee Maker will switch to 'Keep Warm' for two hours once the brewing cycle is complete and will then shut off automatically. If you wish to turn off the Coffee Maker before the automatic shut off press the Start/Stop Button once.

NOTE: Unplugging the unit will reset the clock to 12:00.

'PAUSE & SERVE' FEATURE

The 'Pause & Serve' feature allows you to pour a cup of coffee before the brew cycle has finished. Remove the Carafe slowly to temporarily stop the flow of coffee. Quickly pour a cup of coffee and reposition the Carafe securely on the Keep Warm Plate. NOTE: Do not remove the Carafe for longer than 30 seconds.

CARE AND CLEANING

- 1) Unplug unit and let cool before cleaning.
- 2) Remove the Filter Basket from the Filter Basket Holder.
- 3) Remove Lid from Carafe by grasping the Carafe by its handle, opening the Lid and lifting up.
- 4) The Filter Basket, Carafe and Lid can be washed in warm soapy water or placed in the upper rack of the dishwasher.
- 5) The Filter Basket Holder can be removed by opening completely, placing your right hand on top of the Coffee Maker to hold steady and use your left hand to grasp the Filter Basket Holder underneath the hinged area, lift up and pull towards you. Wash in warm soapy water, rinse and dry. Replace by inserting the longer top pin into the top hinge. While pressing the Filter Basket Holder upwards slightly, fit the bottom pin into the bottom hinge. Close Filter Basket Holder and snap into position.
- 6) Wipe the Housing and Warming Plate with a soft damp cloth. NEVER IMMERSSE THE MAIN HOUSING IN WATER OR ANY OTHER LIQUID.
- 7) DO NOT clean the inside of the Water Reservoir with a cloth as this will leave a residue of lint and may clog the Coffee Maker. Rinse with cold water periodically.

Descaling

Over a period of time, minerals and calcium found in water will accumulate in your Coffee Maker and may affect its operation. The appliance should be cleaned approximately every six months, depending on water conditions. Use distilled vinegar in the following manner to remove the mineral deposits.

1. Fill the Filter Coffee Carafe with equal parts of white vinegar and cold water.
2. Open the Lid of the Water Reservoir and pour in the vinegar/water solution. Close the Lid.
3. Snap the Filter Basket and Filter Basket Holder into position.
4. Place the Carafe with Lid on the Keep Warm Plate.
5. Press the Start/Stop Button twice and the Coffee Maker will start.
6. Let the whole quantity of the vinegar/water solution run through the machine, then turn the Coffee Maker off by pressing the Start/Stop button once.
7. Repeat the above steps using cold water to rinse away any residual vinegar. Repeat twice.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be of the grounding-type 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

SALTON warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During that period these defects will be repaired or the product will be replaced at SALTON's option without charge. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use, or improper maintenance.

TO RETURN FOR SERVICE

1. Securely package and return the product PREPAID to: SALTON CANADA, 81A Brunswick, Dollard-des-Ormeaux, Quebec, H9B 2J5
2. Be sure to enclose your name, address, postal code and description of defect.
3. To ensure prompt "In-Warranty" service, be sure to include a proof of purchase. We recommend you take the necessary precaution of insuring the parcel.
4. For repairs not covered by the Warranty, you will be advised of the cost of repair in advance, and upon receipt of your cheque or money order, the repairs will be completed and the product returned to you.

SALTON CANADA
81A Brunswick
Dollard-des-Ormeaux
Quebec H9B 2J5
Website: www.salton.com
Service: service@salton.com