



salton®

single serve
travel coffee maker



Instruction Booklet

Model FC1438

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. **DO NOT** touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
8. The use of accessories or attachments not recommended by Toastess may result in fire, electric shock or injury.
9. **DO NOT** use outdoors.
10. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
11. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
13. **DO NOT** use appliance for other than intended use.
14. **DO NOT** leave unit unattended while in use.
15. Extreme caution must be used when moving an appliance containing hot liquids.
16. Any maintenance other than cleaning should be performed by an authorized service facility.


SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

DESCRIPTION OF PARTS

1. Water Reservoir Cover
2. Permanent Nylon Filter
3. Filter Basket
4. Dispenser
5. Thermal Travel Mug
6. Thermal Travel Mug Cover
7. Open/Close Tab on Mug Cover
8. "ON" Switch with Indicator Light
9. Base

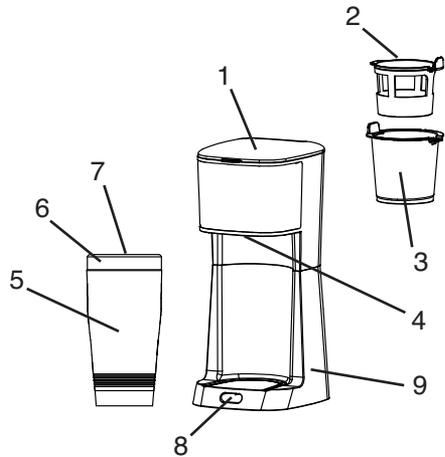

BEFORE FIRST USE

1. Wash the Travel Mug and its Cover, Permanent Nylon Filter and Filter Basket in warm soapy water. Rinse and dry.
2. Wipe the unit with a soft damp cloth.

NEVER IMMERSE THE MOTOR BASE IN WATER OR ANY OTHER LIQUID.

DO NOT use harsh detergents or abrasive cleaners on any part of the appliance.

3. Prior to brewing coffee for the first time, run the machine with water only. Follow the directions in the "How to Use" section. **Do not** use coffee and remove the Permanent Nylon Filter.

HOW TO USE

1. Ensure that the unit is unplugged from the wall outlet.
2. Open the Cover of the Water Reservoir and fill with fresh cold water up to the MAX level mark indicated inside the water reservoir.
3. Place the Travel Mug under the Dispenser. The Travel Mug Cover can be taken off or left on. **IMPORTANT: If the cover is left on, be sure that the sipping hole is open so coffee can flow into the Travel Mug.**
4. Plug the unit into a 120 Volt A.C. wall outlet.
5. If the Indicator Light is already on then the coffee maker will start automatically. If the Indicator Light is not on, press the "START" button and the light will illuminate and the coffee maker will start.
6. When the coffee has finished brewing, the indicator light will go out. Unplug from the wall outlet.

NOTE: Wait 30 seconds before brewing another cup of coffee.

CAUTION: Be very careful when opening the Water Reservoir Cover after brewing as this area is hot and steamy.

IMPORTANT: Once the START button is pushed, it cannot be turned off. The unit must run its cycle. Wait for the Indicator Light to go off, then unplug from the wall outlet.

NOTE: The START button has an internal memory. Once the indicator Light goes off and the unit is unplugged from the wall outlet, be careful not to push the START button, otherwise the next time the unit is plugged, the Indicator Light will be illuminated and the brewing cycle will begin.

How to Heat Water for Tea, Hot Chocolate, etc.

1. Open the Cover of the Water Reservoir and fill with fresh cold water up to the MAX level mark indicated inside the water reservoir.
2. Place tea, hot chocolate, etc. into the Travel Mug and place under the Dispenser. The Travel Mug Cover can be taken off or left on.
If left on, be sure that the sipping hole is in the open position so coffee can flow through into the Travel Mug.
3. Plug the unit into a 120 Volt A.C. outlet.
4. Press the "START" button and the Indicator Light will illuminate.
5. **Important:** Once the water has finished dripping into the Travel Mug, the Indicator Light will go out and the unit must be unplugged from the wall outlet.

CARE AND CLEANING

1. Unplug the unit from the wall outlet and allow to cool completely.
2. Remove the Permanent Nylon Filter and Filter Basket.
3. Wash the Permanent Nylon Filter, Filter Basket, Thermal Travel Mug and its cover in warm soapy water. Rinse and dry.
4. Wipe the Base with a soft damp cloth.

NEVER IMMERSER THE MOTOR BASE IN WATER OR ANY OTHER LIQUID.

DO NOT use harsh detergents or abrasive cleaners on any part of the appliance.

5. **DO NOT** clean the inside of the Water Reservoir with a cloth as this will leave a residue of lint and may clog the Coffee Maker.

Descaling

Over a period of time, minerals and calcium found in water will accumulate in your Coffee Maker and may affect its operation. The appliance should be cleaned approximately every six months, depending on water conditions. Use distilled vinegar in the following manner to remove the mineral deposits.

1. Fill the Travel Mug 2/3 full with white vinegar and then to the top with cold water.
2. Pour into the Water Reservoir.
3. Remove the Permanent Nylon Filter.
4. Place the Travel Mug, without the Cover under the dispenser.
5. Plug the unit into a 120 Volt A.C. outlet.
6. Press the "START" button down and the Indicator Light will come on.
7. Once the water and vinegar solution has finished dripping in the Travel Mug, remove the plug from the wall outlet.
8. Wash the Travel Mug in warm soapy water.
9. If necessary, repeat the descaling directions above.

CAUTION: Be very careful when opening the Water Reservoir Cover after brewing as this area is hot and steamy.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

****The original sales receipt is the only acceptable proof of purchase****

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Canada, at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Canada will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

SALTON CANADA
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660 (Ext. 226)
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com