



salton®
cordless frother



Instruction Booklet

Model FR1416

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. **DO NOT** touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
6. **DO NOT** overfill the frother. Filling past the maximum levels indicated inside the unit can cause overflowing during operation.
7. Avoid contacting moving parts.
8. Keep hands and utensils out of interior while frothing/blending to reduce the risk of severe injury to persons or damage to the frother.
9. Switch the frother off before attaching or removing accessories.
10. Only use the product with the provided base.
11. Always operate the frother with the cover in place.
12. **DO NOT** pour liquids (soups, sauces, etc.) other than milk into the interior of the frother.
13. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
14. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
15. The use of accessories or attachments not recommended by Salton may result in fire, electric shock or personal injury.
16. **DO NOT** use outdoors.
17. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.

18. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
19. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “OFF”, then remove plug from wall outlet.
20. **DO NOT** use appliance for other than intended use.
21. **DO NOT** leave unit unattended while in use.
22. Extreme caution must be used when moving an appliance containing hot liquids.

SAVE THESE INSTRUCTIONS

 
HOUSEHOLD USE ONLY

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

DESCRIPTION OF PARTS

1. Clear viewing lid
2. Measurement lines (the top one for heating, the lower one for frothing)
3. Pouring spout
4. Stainless steel interior with non stick coating
5. Handle
6. Stainless steel housing
7. Cold button
8. Heat button
9. Base
10. Whisk for frothing milk
11. Whisk for heating milk

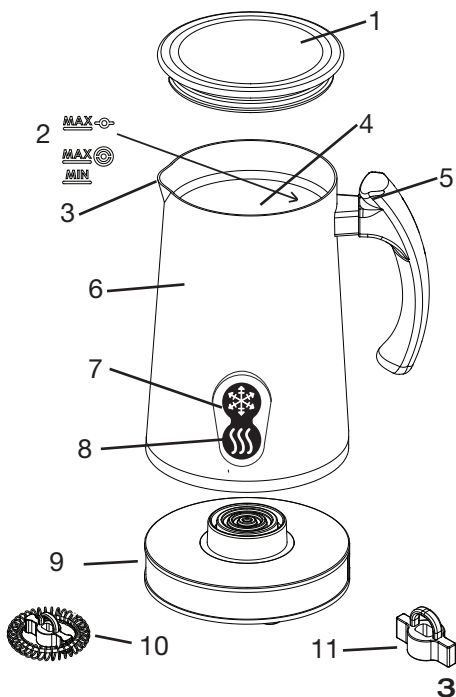

BEFORE FIRST USE

 
Wash the Lid, Whisks and inside of Frother in warm soapy water. Dry thoroughly with a soft cloth. Wipe outside of Frother with a damp cloth and dry.

NOTE: DO NOT immerse Frother in water.

ASSEMBLY


 
The Frother includes two magnetic Whisks, one for frothing and one for heating milk.

One Whisk is stored on the underside of the lid and the other Whisk is stored inside the Frother. Use the Frother with one of these Whisks to achieve heating and/or frothing milk.

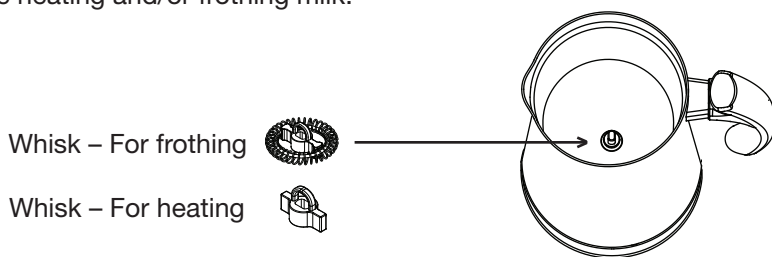

INSTRUCTION FOR USE

1. Choose the appropriate Whisk and insert into Frother.

Whisk	Function	Max capacity
	- Frothing only - Frothing and heating	150 ml
	- Heating (small amount of froth)	220 ml

2. Pour cold milk into the Frother making sure not to exceed the maximum measurement lines marked on the inside of the jug.
REMINDER: The lower MIN/MAX marking is for frothing milk, the top marking closest to the rim of the Frother is the MAX marking for heating milk.

DO NOT fill past the MAX level indicators located inside the jug. Overfilling may cause milk to overflow.

3. Place the lid securely on top of the Frother.

4. Plug power cord into 120V AC wall outlet. NEVER plug the Frother in while empty into wall outlet.

5. a) **Frothing only (without heat)**

Press the Cold button; the blue indicator light will illuminate and frothing will begin. Once milk is frothed the blue indicator light will go off.

b) **Frothing and Heating / Heating only**

Press the Heat button; the red indicator light will illuminate and frothing and/or heating will begin. Once milk is frothed and/or heated the red indicator light will go off.

6. After frothing or heating, allow the unit to cool for a few minutes before reusing.
7. If the Frother is accidentally plugged in dry and turned on, the unit will automatically shut off after 30 seconds to prevent overheating. If this situation occurs, unplug power cord and let the Frother cool before using.
8. The power cord must be disconnected from the wall outlet when the Frother is not in use.

CARE AND CLEANING

1. Unplug the power cord from wall outlet and allow the Frother to cool before cleaning.
2. Wash the Lid, Whisks and inside of the Frother in warm soapy water. **DO NOT** place in the dishwasher. Wipe the outside of Frother with a damp cloth.
DO NOT USE ABRASIVE CLEANERS ON ANY PART OF THE UNIT INCLUDING THE LID AND THE INSIDE WALLS OF THE FROTHER.
DO NOT IMMERSE FROTHER OR THE BASE IN WATER OR ANY OTHER LIQUID.
3. Store Whisks inside of Frother to avoid loss.
4. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

****The original sales receipt is the only acceptable proof of purchase****

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Canada, at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Canada will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....
Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

SALTON CANADA
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660 (Ext. 226)
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com