

salton®

Stainless Steel Portable Cooking Range



Instruction Booklet

Model: HP1213

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, DO NOT immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Salton for examination, repair or adjustment. See Warranty section.
7. The use of accessories or attachments not recommended by the manufacturer may cause hazards.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
12. Extreme caution must be used when moving an appliance containing hot liquids.
13. This appliance is for Household Use Only. Do not use appliance for other than its intended use.
14. Do not leave unit unattended while in use.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug. (2 blades and 1 pin) If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

HOW TO USE YOUR SALTON PORTABLE COOKING RANGE

Any flat-bottomed pot or container that can be used on a conventional electric stove element can also be used on the Salton Portable Cooking Range. For maximum heat transfer, cookware that has a solid perfectly flat bottom is recommended. Cookware made from solid aluminum or some other material with an encapsulated aluminum base will provide the best results. Any cookware can be used to reheat but if maximum energy is required, such as boiling water, please use the recommended cookware.

1. Place the Portable Cooking Range onto a smooth, dry, flat surface. Be sure that the knobs are in the '0' position and plug into any 120 Volt A.C. outlet. Once the unit is plugged into the wall outlet the red indicator light will glow until it is unplugged.
2. Place filled cookware on element. Each element is equipped with it's own Temperature Control Knob and Indicator Light.
3. Turn Control Knob (s) clockwise to desired setting. The green Indicator Light (s) will glow and go 'on' and 'off' as the selected temperature is automatically maintained.

IMPORTANT:

- DO NOT preheat before using.
- DO NOT switch on before cookware is placed on the element.
- The wattage of the small element is 600 watts and the large element is 900 watts.

CARE AND CLEANING

1. Unplug unit and allow to cool.
2. Both the outside of the unit and the drip pan should be cleaned with a cloth or sponge dampened in warm soapy water.
3. NEVER USE ABRASIVE CLEANSERS.
4. NEVER IMMERSE THIS UNIT IN WATER.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During this 'in-warranty' period, defective products will be repaired or replaced at the discretion of the retailer and/or Salton Canada. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use or improper maintenance.

A defective product should be returned to the original place of purchase within the retailer's stipulated return/exchange period*. If you are unable to have a defective product replaced under warranty by the retailer, please check our website at "www.salton.com" for the service centre nearest you. You may also contact us for assistance by mail, e-mail, fax or telephone as listed below.

To ensure prompt 'in-warranty' service securely package and return the product to us prepaid. Be sure to include the original proof of purchase and a description of the defect along with your address and postal code.

For repairs not covered by the warranty, please contact us for assistance.

SALTON CANADA

Customer Service Department

81A Brunswick,

Dollard-des-Ormeaux,

Quebec, Canada H9B 2J5

website: www.salton.com

E-mail: service@salton.com

Fax: 514-685-8300

Tel: 514-685-3660 Ext. 226

* Return/exchange policies at each retailer vary and may differ from the SALTON Canada 1 year limited warranty period.