

salton®

Portable Cooking Range



Modèle : HP-20C

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Salton for examination, repair or adjustment. See Warranty.
7. The use of accessories or attachments not recommended by Salton may cause hazards.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot liquids.
12. Prior to connecting or disconnecting plug from wall outlet, turn any control to 'Off'.
13. This appliance is for Household Use Only. Do not use appliance for other than its intended use.
14. Do not leave unit unattended while in use.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug. (2 blades and 1 pin) If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

HOW TO USE YOUR SALTON PORTABLE COOKING RANGE

Any flat-bottomed pot or container that can be used on a conventional electric stove element can also be used on the Salton Portable Cooking Range. For maximum heat transfer, cookware that has a solid perfectly flat bottom is recommended. Cookware made from solid aluminum or some other material with an encapsulated aluminum base will provide the best results. Any cookware can be used to reheat but if maximum energy is required, such as boiling water, please use the recommended cookware.

1. Place the Portable Cooking Range onto a smooth, dry, flat surface. Be sure that the Knobs are in the 'Off' position. Plug into any 120 Volt A.C. outlet.
2. Place filled cookware on the element. **Note: Do not preheat before using.**
3. Turn Knob clockwise to desired setting. Each element is equipped with it's own 'On/Off' temperature Control Knob and Indicator Light. The Indicator Light will glow and go 'on' and 'off' as the selected temperature is automatically maintained.

CARE AND CLEANING

1. Unplug unit and allow to cool.
2. Both the outside of the unit and the drip pan should be cleaned with a cloth or sponge dampened in warm soapy water. Clean the drip pan by raising the element slightly. NEVER USE ABRASIVE CLEANSERS.
3. **NEVER IMMERSE THIS UNIT IN WATER.**

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During this 'in-warranty' period, defective products will be repaired or replaced at the discretion of the retailer and/or Salton Canada. A defective product should be returned to the original place of purchase within the retailer's stipulated return/exchange period*. If you do not wish or are unable to have a defective product replaced under warranty by the retailer, Salton Canada will repair or replace the defective product without charge. You may contact us for assistance by mail, e-mail, fax or telephone as listed below.

This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use or improper maintenance.

To ensure prompt 'in-warranty' service be sure you have an original proof of purchase. You may be asked to return the product to us along with a description of the defect and your address, zip/postal code.

For repairs not covered by the warranty, please contact us for assistance.

salton[®] **SALTON CANADA**

Customer Service Department
81A Brunswick, Dollard-des-Ormeaux
Québec, Canada H9B 2J5

website: www.salton.com
E-mail: service@salton.com
Fax: 514-685-8300
Tel: 514-685-3660

* Return/exchange policies at each retailer vary and may differ from the Salton Canada 1 year limited warranty period.