



**salton**<sup>®</sup>  
portable cooktop



## **Instruction Booklet**

Model HP1210

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, DO NOT immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Salton for examination, repair or adjustment. See Warranty section.
7. The use of accessories or attachments not recommended by the manufacturer may cause hazards.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
12. Extreme caution must be used when moving an appliance containing hot liquids.
13. This appliance is for Household Use Only. Do not use appliance for other than its intended use.
14. Do not leave unit unattended while in use.

**SAVE THESE INSTRUCTIONS**  
HOUSEHOLD USE ONLY

## **GROUNDING PLUG**

To reduce the risk of electric shock this appliance has a grounded plug. (2 blades and 1 pin) If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

## **HOW TO USE YOUR PORTABLE COOKING RANGE**

Any flat-bottomed pot or container that can be used on a conventional electric stove element can also be used on the Salton Portable Cooking Range. For maximum heat transfer, cookware that has a solid perfectly flat bottom is recommended. Cookware made from solid aluminum or some other material with an encapsulated aluminum base will provide the best results. Any cookware can be used to reheat but if maximum energy is required, such as boiling water, please use the recommended cookware.

1. Place the Portable Cooking Range onto a smooth, dry, flat surface. Be sure that the knobs are in the '0' position and plug into any 120 Volt A.C. outlet. Once the unit is plugged into the wall outlet the red indicator light will glow until it is unplugged.
2. Place filled cookware on element. Each element is equipped with it's own Temperature Control Knob and Indicator Light.
3. Turn Control Knob (s) clockwise to desired setting. The green Indicator Light (s) will glow and go 'on' and 'off' as the selected temperature is automatically maintained.

### **IMPORTANT:**

- DO NOT preheat before using.
- DO NOT switch on before cookware is placed on the element.
- The wattage of the small element is 600 watts and the large element is 900 watts.

## **CARE AND CLEANING**

1. Unplug unit and allow to cool.
2. Both the outside of the unit and the drip pan should be cleaned with a cloth or sponge dampened in warm soapy water.
3. NEVER USE ABRASIVE CLEANSERS.
4. NEVER IMMERSE THIS UNIT IN WATER.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

**LIMITED WARRANTY**

**\*\*The original sales receipt is the only acceptable proof of purchase\*\***

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of five (5) years from the date of original purchase. Salton Canada, at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

## TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website  
[www.salton.com/customer-care](http://www.salton.com/customer-care)

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Canada will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_ Prov/State \_\_\_\_\_ Postal/Zip Code \_\_\_\_\_

Daytime Phone No. \_\_\_\_\_ Email \_\_\_\_\_

Product defect: \_\_\_\_\_

Type of payment      Cheque/Money Order       Visa       MasterCard

Name on card \_\_\_\_\_ Expiry Date \_\_\_\_\_ CSV No \_\_\_\_\_

Card No. \_\_\_\_\_

To contact our Customer Service Department:

SALTON CANADA  
81A Brunswick,  
Dollard-des-Ormeaux, Quebec H9B 2J5  
Canada

Telephone: 514-685-3660 (Ext. 226)  
E-mail: [service@salton.com](mailto:service@salton.com)  
Fax: 514-685-8300  
[www.salton.com](http://www.salton.com)