

salton®

The Northern Lights

Cordless Electric Kettle

1.7 litres/quarts



Model : JK-200

salton®
salton
salton

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Salton for examination, repair or adjustment. See Warranty.
7. The use of accessories or attachments not recommended by Salton may cause hazards.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
12. Extreme caution must be used when moving an appliance containing hot liquids.
13. This appliance is for Household Use Only. Do not use appliance for other than intended use.
14. Do not leave unit unattended while in use.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug. (2 blades and 1 pin) If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

BEFORE FIRST USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packaging.
3. Water boiled for the first time should be discarded.

HOW TO USE

1. Install the Filter, if not already in place. Do not attempt to install or remove the filter if the kettle is hot.

2. Open the Lid and fill the Kettle with a minimum of .5 litres of water.

NOTE: The Kettle cannot be filled to the maximum level unless the Filter is in place.

DO NOT attempt to fill the Kettle while it is on the Power Base.

DO NOT use for other than boiling water. Other liquids will contaminate the interior of the Kettle.

DO NOT fill past the MAX level indicated inside of the Kettle. Overfilling may cause water to spill out when boiling.

3. Close the Lid.
4. Place the Kettle on the Base making sure it is correctly engaged on its base.
5. Plug Power Base cord into a 120V AC wall outlet. Note: Never plug power base with empty Kettle into the electrical outlet.
6. Lift the On/Off switch to the 'On' position, denoted by '1' and it will light up to indicate that the Kettle is in the boil cycle. Once the water has boiled, the On/Off Switch will switch to the 'Off' position, denoted by '0' and the light will go out.

7. If you want to use the Kettle again, allow the thermal safety switch to cool down for 15 to 20 seconds then lift the On/Off Switch to the On position. If the On/Off Switch does not remain in the On position, the water is hot enough to use without reheating.
8. Unplug cord from wall outlet before lifting Kettle from Power Base. Only grip the Kettle by the handle as all other surfaces and the Lid will be hot.
9. Return the Kettle to the Power Base or place on a heat resistant surface after use.
10. If the Kettle is accidentally switched on when empty, the thermostat will automatically shut it off to prevent the Kettle from overheating. If this situation occurs, unplug the Power Base and let the Kettle cool before refilling.
11. It is recommended that the Power Cord be disconnected from the wall outlet when not in use. DO NOT attempt to connect any other appliance to the Power Base or tamper with the connector in any way.

CARE AND CLEANING

Use a soft, damp cloth to clean the exterior of the kettle. DO NOT use abrasive cleaners. Dry thoroughly before use.

DO NOT ALLOW WATER TO ENTER THE POWER BASE

DO NOT IMMERSE THE KETTLE OR POWER BASE IN WATER OR OTHER LIQUID.

Descaling

Under normal use, a deposit of scale may form on the inside of the Kettle. This build-up can be delayed by pouring out old water and refilling before each use.

1. Unplug power cord from wall outlet and allow Kettle to cool before cleaning.
2. Remove Filter and wash under running water.
3. Scale which has accumulated inside the Kettle can be removed by boiling equal parts of white vinegar and water (2 cups of each is recommended). Once the water has boiled, allow mixture to stand overnight. Empty out mixture and fill Kettle to the MAX level with fresh water. Bring water to a boil and discard. For heavy scale build-up, repeat this process.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be of the grounding-type 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During this 'in-warranty' period, defective products will be repaired or replaced at the discretion of the retailer and/or Salton Canada. A defective product should be returned to the original place of purchase within the retailer's stipulated return/exchange period*. If you do not wish or are unable to have a defective product replaced under warranty by the retailer, Salton Canada will repair or replace the defective product without charge. You may contact us for assistance by mail, e-mail, fax or telephone as listed below.

This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use or improper maintenance.

To ensure prompt 'in-warranty' service be sure you have an original proof of purchase. You may be asked to return the product to us along with a description of the defect and your address, zip/postal code.

For repairs not covered by the warranty, please contact us for assistance.

salton[®]
salton
salton

SALTON CANADA

81A Brunswick, Dollard-des-Ormeaux
Quebec Canada H9B 2J5
website: www.salton.com

E-mail: service@salton.com

Fax: 514-685-8300

Tel: 514-685-3660

* Return/exchange policies at each retailer vary and may differ from the Salton Canada 1 year limited warranty period.