

# salton®

## cordless kettle

with variable temperature control

1.2L



## Instruction Booklet

Model: JK1277

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. **DO NOT** touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Salton for examination, repair or adjustment. See "Warranty" section.
7. The use of accessories or attachments not recommended by the manufacturer may result in fire, electric shock or personal injury.
8. **DO NOT** use outdoors.
9. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
10. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
12. **DO NOT** use appliance for other than intended use.
13. **DO NOT** leave unit unattended while in use.
14. Extreme caution must be used when moving an appliance containing hot liquids

**SAVE THESE INSTRUCTIONS**  
HOUSEHOLD USE ONLY

## GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

## BEFORE FIRST USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packaging.
3. Water boiled for the first time should be discarded.

## INSTRUCTION FOR USE

1. Open lid and fill the kettle through the lid opening, with a minimum of 0.5 litres of water. (MIN level)

### NOTE:

**DO NOT** attempt to fill while the kettle is on the power base.

**DO NOT** use for other than boiling water. Other liquids will contaminate the interior of the kettle.

**DO NOT** fill past the MAX level indicated on the water level window of the kettle. Overfilling may cause water to spill out when boiling.


2. Place kettle on power base making sure it is engaged properly.
3. Plug power base cord into a 120V AC wall outlet. The unit will beep, the display screen will flash 'C' twice and then display the current water temperature in Celsius.

**NOTE:** If the power base cord is plugged into the wall outlet without the kettle placed on its base, or at any time the kettle is lifted off the base, the display screen will display 'E' until the kettle is engaged back on the power base.

**NOTE:** Never plug power base with empty Kettle into the electrical outlet.

4. Press the PROGRAM button (which will illuminate in blue) to select one of the 6 pre-programmed temperatures. Each touch of the button will show one of the 6 pre-programmed settings which are 40°C, 60°C, 80°C, 90°C, 100°C and Keep Warm function which is preset at 70°C. This setting can be changed.

**Please see Keep Warm/Manual temperature selection section.**

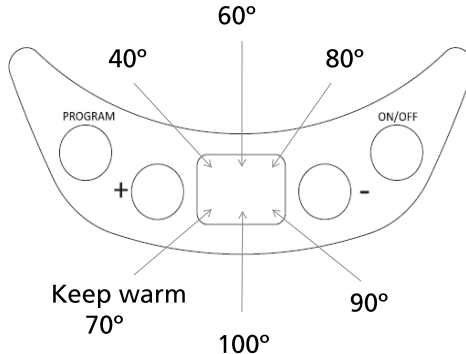

5. Once you have selected the desired temperature press the On/Off button which will illuminate in red . After 2 seconds, the blue light on the PROGRAM button will go off and the kettle will cycle on. The temperature selected in the display will disappear and the current water temperature will be displayed.
6. When the water reaches the selected temperature, the unit will beep, the kettle will switch off and the red light on the On/Off button will go off.
7. At any time if you want to cancel the heating cycle, press and hold the On/Off button for 3 seconds. The power base will shut off.  
**NOTE:** To turn the power base back on, press and hold the On/Off button again for 3 seconds. The unit will beep and the display screen will indicate the current water temperature.
8. Unplug cord from wall outlet. Grip the kettle by the handle only, as the surface and lid will be hot. Pour out water.
9. Return the kettle to the power base.

10. If the kettle is accidentally switched on when empty, the thermostat will automatically shut off the kettle to prevent it from overheating. Unplug the power base and let the kettle cool before refilling.

**NOTE:** The display screen works independently from the kettle. Once the thermostat is shut off, the display screen on the power base will continue to function until the selected temperature is reached. The unit will beep indicating the unit (without water) has reached the selected temperature. This is normal.

11. The power base must be turned off once the water has reached the selected temperature (hold the On/Off button for 3 seconds) and the power cord be disconnected from the wall outlet when not in use.

**DO NOT** attempt to connect any other appliance to the Power Base or tamper with the connector in any way.

**IMPORTANT:** If the power base is not turned off immediately after use, the kettle will continue to display the current temperature of the water.

**DO NOT** leave kettle unattended and remember to shut off the base when finished using.

### **Keep Warm/Manual temperature selection**

You can manually select the desired temperature by selecting the pre-programmed setting of 70°C and then pressing either the + or - buttons to increase or decrease the temperature between 50°C to 95°C by increments of 5°C.

While using this setting, the kettle will 'Keep Warm' the selected temperature for 2 hours. During this time the On/Off light will remain illuminated and the kettle will cycle on an off in order to keep the current temperature chosen. After 2 hours the kettle will switch off automatically and the red light on the On/Off button will go off.

After the kettle has switched off remember to press and hold the On/Off button for 3 seconds to turn off the Power Base and unplug from the wall outlet.

The following is a general guide for brewing different types of tea. Brand and freshness of tea including each individuals taste and preference differs. If your tea box/container has brewing instructions, follow those as they are probably ideal for that specific tea.

Type of Tea	Water Temperature	Steep Time
Black tea	100°C	3-5 minutes
Herbal tea	100°C	5-8 minutes
Green tea	70°C	1-3 minutes
White tea	80°C	4-8 minutes
Oolong tea	90°C	1-8 minutes

Your kettle can also be used for bringing the water to the perfect temperature for the following. Please remember that these are guidelines only.

Others:	Water Temperature
Baby formula preparation	36°C (water should have been previously boiled)
French press/instant coffee	95°C
Instant soup mixes	90°C
Hot chocolate	85°C
Oatmeal	97°C

## CARE AND CLEANING

1. Unplug power cord from wall outlet. Empty out remaining water and allow Kettle to cool before cleaning.
2. Under normal use, a deposit of scale may form on the inside of the Kettle and cause some discolouration. Scale, which has accumulated inside the Kettle, can be removed by boiling equal parts of white vinegar and water (500 ml / 2 cups of each is recommended). Once the water has boiled, allow mixture to stand several hours or overnight. Empty out mixture and fill Kettle to the MAX level with fresh water. Bring water to a boil and discard. For heavy scale build-up, repeat this process.

**NOTE:** This build-up can be delayed by pouring out old water and refilling before each use.

3. **DO NOT USE ABRASIVE CLEANERS.**
4. **DO NOT ALLOW WATER TO ENTER THE POWER BASE.**
5. **DO NOT IMMERSE KETTLE OR POWER BASE IN WATER OR OTHER LIQUID.**

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

## **LIMITED WARRANTY**

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During this 'in-warranty' period, defective products will be repaired or replaced at the discretion of the retailer and/or Salton Canada. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use or improper maintenance.

A defective product should be returned to the original place of purchase within the retailer's stipulated return/exchange period\*. If you are unable to have a defective product replaced under warranty by the retailer, please check our website at "www.salton.com" for the service centre nearest you. You may also contact us for assistance by mail, e-mail, fax or telephone as listed below.

To ensure prompt 'in-warranty' service securely package and return the product to us prepaid. Be sure to include the original proof of purchase and a description of the defect along with your address and postal code.

For repairs not covered by the warranty, please contact us for assistance.

**salton®**

### **SALTON CANADA**

Customer Service Department  
81A Brunswick,  
Dollard-des-Ormeaux,  
Quebec, Canada H9B 2J5  
website: [www.salton.com](http://www.salton.com)  
E-mail: [service@salton.com](mailto:service@salton.com)  
Fax: 514-685-8300  
Tel: 514-685-3660 Ext. 226

\* Return/exchange policies at each retailer vary and may differ from the SALTON Canada 1 year limited warranty period.