



salton[®]
electric kettle
1 litre/pinte



Instruction Booklet

Model JK1286

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. **DO NOT** touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, **DO NOT** immerse cord, plugs, or the appliance in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
6. If the kettle is overfilled, boiling water may be ejected.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
8. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
9. The use of accessories or attachments not recommended by Salton may result in fire, electric shock or personal injury.
10. **DO NOT** use outdoors.
11. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
12. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
13. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
14. **DO NOT** use appliance for other than intended use.
15. **DO NOT** leave unit unattended while in use.
16. Extreme caution must be used when moving an appliance containing hot liquids.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

BEFORE FIRST USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packaging.
3. Water boiled for the first time should be discarded.

INSTRUCTION FOR USE

1. Fill kettle with water. Do not attempt to fill while kettle is plugged into wall outlet.
2. Ensure that the kettle is filled with a minimum of 1 cup (250 ml) of water. The 1 litre maximum is indicated by the triangle shown inside the spout.

DO NOT use for other than boiling water. Other liquids will contaminate the interior of the Kettle.

DO NOT fill past the MAX level indicator located inside the spout. Overfilling may cause water to spill out when boiling.

3. Plug power cord into 120V AC wall outlet. NEVER plug empty kettle into wall outlet.

NOTE: Direct kettle spout away from cabinets, walls, etc to prevent possible steam damage.

4. Water is boiled when you hear the kettle whistling.

NOTE: Loudness of kettle whistling will vary with amount of water in kettle. The fuller the kettle, the louder the whistling.

5. Water will boil until plug is removed from wall outlet.
6. Care should be taken when pouring the hot water to avoid personal injury. Pour slowly.

7. If kettle is plugged in dry or is allowed to boil dry, the thermostat will automatically cycle the element off to prevent the kettle from overheating. If this situation occurs, unplug power cord and let kettle cool before refilling.
8. Power cord must be disconnected from wall outlet when kettle is not in use.

CARE AND CLEANING

1. Unplug power cord from wall outlet. Empty out remaining water and allow Kettle to cool before cleaning.

2. Use a soft damp cloth to clean the outside of the Kettle.

DO NOT USE ABRASIVE CLEANERS.

DO NOT IMMERSE KETTLE IN WATER OR OTHER LIQUID.

3. Under normal use, a deposit of scale may form on the inside of the Kettle and cause some discoloration. Scale, which has accumulated inside the Kettle, can be removed by boiling equal parts of white vinegar and water (250 ml/1 cup of each is recommended). Once the water has boiled, allow mixture to stand several hours or overnight. Empty out mixture and fill Kettle to the MAX level with fresh water. Bring water to a boil and discard. For heavy scale build-up, repeat this process.

NOTE: This build-up can be delayed by pouring out old water and refilling before each use.

4. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

****The original sales receipt is the only acceptable proof of purchase****

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Canada, at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Canada will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....

Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

SALTON CANADA
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660 (Ext. 226)
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com