

salton®

'HENRIETTA' THE HEN

Egg Cooker/Poacher

MODEL SEC-2

**salton®
salton
salton**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed:

1. Read all instructions.
2. Do not touch hot surfaces, use handles or knobs.
3. To protect against electrical shock, do not immerse any part of the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Always unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to Salton for examination repair or adjustment.
7. The use of accessory attachments not recommended by Salton may cause injuries.
8. Do not use outdoors or while in damp area.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot liquids.
12. To disconnect, remove plug from wall outlet.
13. **CAUTION:** This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires or other damage to persons or property.
14. Do not leave this appliance unattended during use.
15. **THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.** Do not use appliance for other than intended use.


SAVE THESE INSTRUCTIONS

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

KNOW YOUR "HENRIETTA" EGG COOKER

1. Lid
2. Poaching Tray
3. Egg Piercing Pin
4. Cooking Rack
5. Heating Plate
6. Base
7. Indicator Light

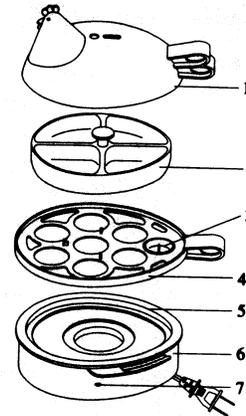

BEFORE FIRST USE

Wash the Lid, the Cooking Rack and the Poaching Tray in hot soapy water, rinse and dry thoroughly. Wipe the Base with a damp cloth or sponge. **DO NOT IMMERSE BASE IN WATER OR OTHER LIQUID. CARE MUST BE TAKEN WHEN HANDLING OR WASHING THE COOKING RACK TO AVOID TOUCHING THE PIERCING PIN.**

IMPORTANT NOTES

The cooking times indicated in the Guide may vary and are affected by factors such as:

1. Number and size of eggs cooked
2. Temperature of eggs prior to cooking
3. Temperature and amount of water used
4. Altitude
5. Length of time eggs remain in Egg Cooker following cooking cycle

TO COOK (Soft/Medium/Hard)

1. Place the Base on a dry, level surface.
2. Pour appropriate amount of cold water into the Base, as follows:
 - a. to ↓ (level 1) for soft cooked eggs
 - b. to ↓↓ (level 2) for medium cooked eggs
 - c. to ↑↑↑ (level 3) for hard cooked eggs
3. Place the Cooking Rack on a flat counter surface.
4. Pierce the large end of each egg with the Piercing Pin incorporated into the Cooking Rack. This will prevent the egg shell from cracking while the eggs are cooking.
5. Place eggs pierced end up in the Cooking Rack. Place Rack on Base and cover with Lid.
6. Plug the unit into a 120 volt electrical outlet. The Indicator Light will glow, indicating the eggs are cooking.
7. Once all the water has evaporated the unit will "chirp" signalling that the eggs are ready.
8. Unplug the unit.

9. While eggs are still on the Cooking Rack, rinse briefly under cold water and serve immediately.

| Guide | Number of Eggs | Approximate Cooking Time |
|------------------------------------|-----------------------|---------------------------------|
| Soft Cooked Eggs (Level 1) ↓ | 1 | 5-1/2 min |
| | 4 | 6-1/2 min |
| | 7 | 8 min |
| Medium Cooked Eggs (Level 2) ↓↓ | 1 | 7-1/2 min |
| | 4 | 9-1/2 min |
| | 7 | 12 min |
| Hard Cooked Eggs (Level 3) ↑↑↑ | 1 | 13 min |
| | 4 | 15 min |
| | 7 | 18-1/2 min |

TO POACH

1. Place Base on a dry, level surface.
2. Pour cold water to ↓↓ (level 2) of the Base.
3. Lightly butter or oil the poaching sections to be used.
4. Place Cooking Rack on the Base, place Poaching Tray on Cooking Rack and break one egg into each section of the Poaching Tray.
5. Cover Egg Cooker and plug the unit into a 120 volt electrical outlet. The Indicator Light will glow, indicating the eggs are cooking.
6. Once all the water has evaporated the unit will "chirp" signalling that the eggs are ready.
7. Unplug the unit and serve eggs immediately to avoid overcooking.

| Number of Eggs | Approximate Cooking Time |
|-----------------------|---------------------------------|
| 1 - 2 | 7 min |
| 3 - 4 | 8 min |

CARE AND CLEANING

Wash Lid, Poaching Tray and Cooking Rack in hot soapy water or in a dishwasher (top rack only). Rinse thoroughly and dry. Let the Base cool and wipe it with a damp cloth or sponge. **DO NOT IMMERSE BASE IN WATER OR OTHER LIQUID.** Place Cooking Rack and Poaching Tray inside Egg Cooker for storage.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be of the grounding-type 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

SALTON warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During that period these defects will be repaired or the product will be replaced at SALTON's option without charge. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use, or improper maintenance.

TO RETURN FOR SERVICE

1. Securely package and return the product PREPAID to: SALTON CANADA, 81A Brunswick, Dollard-des-Ormeaux, Quebec, H9B 2J5
2. Be sure to enclose your name, address, postal code and description of defect.
3. To ensure prompt "In-Warranty" service, be sure to include a proof of purchase. We recommend you take the necessary precaution of insuring the parcel.
4. For repairs not covered by the Warranty, you will be advised of the cost of repair in advance, and upon receipt of your cheque or money order, the repairs will be completed and the product returned to you.

SALTON CANADA

81A Brunswick

Dollard-des-Ormeaux

Quebec H9B 2J5

Website: www.salton.com

Service: service@salton.com