

**salton®**

## **ELECTRIC SLICER**

**Multi-Purpose Household Slicer**

**MODEL SL-16**

**salton®  
salton  
salton**

## **IMPORTANT SAFEGUARDS**

1. Read all instructions.
2. **DO NOT IMMERSE APPLIANCE IN WATER OR OTHER LIQUID.**
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, when removing or putting on parts, and before cleaning.
5. Avoid contacting moving parts. Never attempt to feed food by hand. Always assemble Slicer completely before use; with Food Pusher, Food Platform and guide in place.
6. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance has been damaged in any manner. Return appliance to Salton for examination, repair or adjustment. See Warranty.
7. The use of accessories or attachments not recommended by Salton may cause hazards.
8. **DO NOT** use outdoors.
9. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
10. The Blade is very sharp. Handle with care when cleaning.
11. **DO NOT** place in dishwasher.
12. This appliance is for Household Use Only. Do not use appliance for other than its intended use.



## **SAVE THESE INSTRUCTIONS**

### **POLARIZED PLUG**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

## DESCRIPTION OF PARTS

1. Thickness Knob
2. Adjustable Guide
3. Safety Switch
4. On/Off Switch
5. Locking Knob for Folding Table
6. Slot for Power Cord
7. Power Cord Storage
8. Food Platform
9. Food Pusher
10. Tray
11. Folding Table
12. Tray Storage Space
13. Stainless Steel Blade
14. Blade Cover

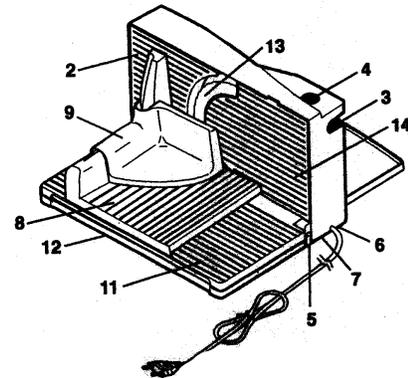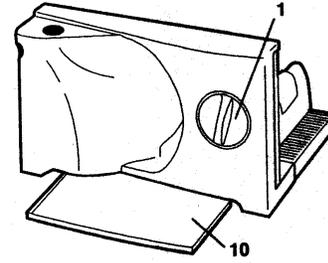

## HOW TO USE

1. Remove Tray from underneath the Folding Table.
2. Place Slicer on a smooth, dry, flat surface. Position Slicer in front of you so that the Thickness Knob is on your left and the Folding Table is on your right. The 2 suction cups underneath the appliance will help secure the Slicer to the surface.
3. Position the Food Platform onto the front edge of the Folding Table by tilting it slightly so that the tab underneath the Food Platform hooks onto the front edge of the table. Then lower the Platform onto the table making sure that the glide slot fits into the groove in the top of the Table.
4. Pull the Food Platform toward you and place food on Platform. Slide Food Pusher over edge of Platform. Cut food to smaller size if Pusher does not fit properly.
5. Adjust thickness Knob to desired setting.
6. Unwind cord to the desired length, run it through the Exit slots and plug it into a 120 Volt AC outlet.
7. Position the Tray at the back of the Slicer to receive sliced food.
8. Grasp Food Pusher with right hand. Hold down the Safety Switch with your left middle finger and at the same time press the On/Off Switch with your left thumb. Slide Food Platform toward Blade while applying gentle but steady pressure with the Pusher. Repeat for additional slices.
9. Release the On/Off Switch to stop the Blade from turning.  
**NOTE:** The safety system will allow the Slicer to operate only if the Safety Switch is first depressed and held before depressing the On/Off Switch.

10. The Slicer can be operated continuously for 5 minutes after which it should be turned off and allowed to cool.
11. Unplug when not in use.
12. For safety reasons, always reset the Adjustable Guide to the "O" position after use.

## **HELPFUL HINTS**

1. Do not slice anything containing bones, large seeds or other extremely hard materials.
2. Remove all wrapping material from food before slicing.
3. Do not attempt to override the safety system or slice without using both the Platform and Pusher.
4. Remove thick rind from slab of bacon before slicing.
5. Slicing sticky cheese may be made easier by first unplugging the Slicer, removing and moistening Blade with warm water.

## **CARE AND MAINTENANCE**

1. Unplug and clean Slicer after each use.
2. Remove Food Pusher and Platform from Slicer
3. Remove Blade Cover by pressing upwards and pulling tab out.
4. Remove the Adjustable Guide by turning the Thickness Knob clockwise until the Guide is released.
5. To remove the folding Table turn the small Locking Knob counterclockwise until the line is in the "O" position.
6. The Folding Table, the Guide, the Platform the Pusher and the Blade Cover may be washed in warm soapy water. Do not wash in dishwasher.
7. Wipe the Blade with a damp cloth. Occasionally, clean the back of the Blade. To do so, remove the Blade by turning the hub clockwise as far as it will go and pull out. CAUTION: The Blade is very sharp. Handle with care.
8. Wipe the unit with a damp cloth. Do not immerse in water or other liquids. Make sure all parts are dry before re-assembling and storing the Slicer.
9. Re-assemble the Slicer, omitting the Platform and the Pusher.
10. Place the Tray into the space provided under the Table, fold the Table and store the Slicer, Pusher and Platform separately.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be of the grounding-type 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

### **LIMITED WARRANTY**

SALTON warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During that period these defects will be repaired or the product will be replaced at SALTON's option without charge. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use, or improper maintenance.

#### **TO RETURN FOR SERVICE**

1. Securely package and return the product PREPAID to: SALTON CANADA, 81A Brunswick, Dollard-des-Ormeaux, Quebec, H9B 2J5
2. Be sure to enclose your name, address, postal code and description of defect.
3. To ensure prompt "In-Warranty" service, be sure to include a proof of purchase. We recommend you take the necessary precaution of insuring the parcel.
4. For repairs not covered by the Warranty, you will be advised of the cost of repair in advance, and upon receipt of your cheque or money order, the repairs will be completed and the product returned to you.

#### **SALTON CANADA**

81A Brunswick

Dollard-des-Ormeaux

Quebec H9B 2J5

Website: [www.salton.com](http://www.salton.com)

Service: [service@salton.com](mailto:service@salton.com)