

salton®

Wine Cellar

Stores up to 8 Bottles



Instruction Booklet

Model: WC2002

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Use this appliance only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury.
2. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
3. Unplug before servicing.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
6. Unplug from outlet when not in use or moving from one location to another and before cleaning.
7. To disconnect the appliance, grip the plug and pull it from the wall outlet. Never pull by the cord.
8. Do not place the appliance or any of its parts near an open flame, cooking or other heating appliance.
9. DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
10. The use of attachments not recommended by the manufacturer may be hazardous.
11. Place the unit on a dry level surface.
12. Do not operate if the housing is removed or damaged.
13. A loose fit between the AC outlet (receptacle) and plug may cause overheating or distortion of the plug. Contact a qualified electrician to replace a loose or worn outlet.
14. This appliance is designed to be free standing only. DO NOT recess or build into a cabinet.
15. Do not place heavy objects on top of the Wine Cellar.
16. Do not place the Wine Cellar in a moist area.

17. Do not place the Wine Cellar in direct sunlight and sources of heat (stove, heater, radiator, etc.). (See the Important Note in the Installation section).
18. Always remove all bottles before moving the Wine Cellar.
19. **WARNING:** Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
20. **CAUTION: Risk of child entrapment:**
Before disposing of an appliance take off the doors. Leave the shelves so children may not easily climb inside. Never allow children to operate, play with or crawl inside the appliance.

SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug. (2 blades and 1 pin) If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

DESCRIPTION OF PARTS

1. LCD Display
2. Raise Temperature ▲
3. Lower Temperature ▼
4. Light Switch & C/F Selector ☀
5. Bottle Racks (4)
6. Leveling Feet
7. Air Filter
8. Light

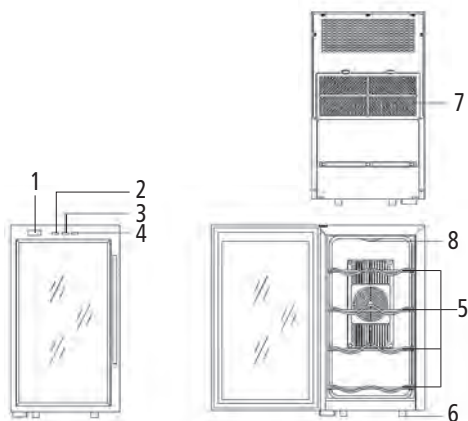

BEFORE FIRST USE

1. Remove all packaging.
2. Check to be sure you have all the following parts:
 - 4 removable Wine Racks - Gently slide the racks into the Wine Cellar.
 - 1 Air Filter - If not already in place, slide the Air Inlet filter into the guides on the back of the Wine Cellar.

Installation

1. Place the Wine Cellar on a flat level surface that is strong enough to support it when fully loaded. If needed, adjust the leveling feet under the unit so that the appliance sits perfectly level. The Wine Cellar will fit on a kitchen countertop under cabinets that have a minimum clearance of 18" (45 cm).
2. The Wine Cellar is designed for indoor use only. The thermoelectric cooling system operates efficiently in an ambient temperature up to 25°C (77°F).
3. Allow 5" (13 cm) of space at the rear and both sides of the Wine Cellar to allow for proper ventilation.
4. DO NOT place next to any appliance that emits a large amount of heat, such as a dishwasher, oven, microwave, toaster, etc. or in direct sunlight.
IMPORTANT NOTE: This Wine Cellar is intended to be used indoors. It is designed to maintain an interior temperature that is, at most, 18°C (32°F) lower than the temperature of the room in which it is situated. Therefore, if the ambient temperature is higher than 25°C (77°F) the Wine Cellar might not be able to maintain the lowest interior temperature that can be set on the control panel.
5. DO NOT build into a wall, cabinet or any enclosed area.
6. Plug into a 120 volt wall outlet. This outlet should not be shared with a refrigerator.

HOW TO USE

Control Panel Overview

- ▲ – Raise temperature in increments of 1°C or 1°F.
- ▼ – Lower temperature in increments of 1°C or 1°F.
- ☀ (C/F) – Light switch and °C or °F selector.

1. The LCD display will turn on when any of the 3 control buttons are pressed. After 60 seconds the display will dim but remain on so long as the Cellar is operating.
2. Press the Light Switch once to turn the interior light 'On' or 'Off'. The LCD display will indicate the actual temperature inside the Cellar.
3. To change the temperature scale between C and F, press and hold the light switch for approximately 10 seconds.
4. To set or change the temperature of the Wine Cellar, press the (▲) button to raise the temperature or the (▼) button to lower the temperature until the desired setting is reached. The temperature range is 7°C - 18°C (44.6°F - 64.4°F).

Recommended Temperature Settings

Red Wine	12°C - 18°C (53.6°F - 64.4°F)
White/Rose	8°C - 12°C (46.4°F - 53.6°F)
Port/Sherry	10°C - 12°C (50°F - 53.6°F)

CARE AND CLEANING

1. Always unplug unit from wall outlet before cleaning.
2. Remove the Air Filter and the Wine Racks and wash in mild soap and water. Rinse and dry before replacing.
3. Wash the inside cavity with a warm water and baking soda solution. Mix approximately 2 tbsp. (30 ml) of baking soda with 1 quart (litre) of water.
4. The outside of the Wine Cellar can be wiped with a cloth dampened in a mild soap solution. Rinse with a cloth dampened in clean water.
5. DO NOT use any abrasive cleaning products on the inside or outside of the Wine Cellar.
6. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
7. This Wine Cellar features a self-evaporation system. An external drip tray is not required. If water forms under/around the unit, the humidity in the room is too high. Either try to lower the humidity or place the Wine Cellar in another location.
8. IMPORTANT NOTE:
The Air Filter should be cleaned every 6 months to keep the cooling system running efficiently.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE/SOLUTIONS
Vibrations	<ul style="list-style-type: none"> • Place Cellar on a level surface
The door will not close properly	<ul style="list-style-type: none"> • The appliance is not level. • The gasket is dirty. • The racks are out of position.
Wine Cellar doesn't have power	<ul style="list-style-type: none"> • Check if the Wine Cellar is plugged in. • Check if there is power at the AC outlet by checking the circuit breaker or fuse. • Ensure that the outlet is not controlled by a wall switch.
Fan runs constantly	<ul style="list-style-type: none"> • The room temperature is hotter than normal. • The door is opened too often. • The door is not closed completely. • The door gasket does not seal properly.
Cellar interior temperature does not seem correct	<ul style="list-style-type: none"> • Room temperature is above 25°C (77°F) • Ensure that the cooling vents on the sides and back of the Cellar are not obstructed. • Unit is not designed to cool more than 18°C (32°F) below the ambient temperature • When first plugged in it can take up to 24 hours to reach the desired temperature.
There is a puddle of water under/around the base	<ul style="list-style-type: none"> • The humidity in the room is too high. Either try to lower the humidity or place the Wine Cellar in another location.
Cellar is ON but not cooling in the unit.	<ul style="list-style-type: none"> • Make sure that there are at least 3-5 bottles • Allow at least 24 hours for the desired internal temperature to be reached • To achieve accurate temperature control, the Cellar should not be operated in the following locations: <ul style="list-style-type: none"> - In direct sunlight - In a room with poor air circulation, such as a garage - Near a heat producing appliance (dish washer, oven, etc.). - Plugged into an outlet shared with a refrigerator - Built into a wall recess or niche; closet or cabinet.

The appliance should always be plugged into its own individual electrical outlet to prevent overloading of house wiring circuits. Overloading of house wiring circuits could cause a fire hazard if they overheat.

It is recommended that you do not connect your wine cooler to extension cords. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance. If you must use an extension cord, it must have a rating at least as high as indicated on the appliance. Please ensure that it is an approved 3 wire grounded type appliance extension cord

LIMITED WARRANTY

SWG Canada warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During this 'in-warranty' period, defective products will be repaired or replaced at the discretion of the retailer and/or SWG Canada. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use or improper maintenance.

A defective product should be returned to the original place of purchase within the retailer's stipulated return/exchange period*. If you are unable to have a defective product replaced under warranty by the retailer, please check our website at "www.salton.com" for the service centre nearest you. You may also contact us for assistance by mail, e-mail, fax or telephone as listed below.

To ensure prompt 'in-warranty' service securely package and return the product to us prepaid. Be sure to include the original proof of purchase and a description of the defect along with your address and postal code.

For repairs not covered by the warranty, please contact us for assistance.

salton®

SWG CANADA

Division of Salton Appliances (1985) Corp.

Customer Service Department

81A Brunswick,

Dollard-des-Ormeaux,

Quebec, Canada H9B 2J5

Website: www.salton.com

E-mail: service@salton.com

Fax: 514-685-8300

Tel: 514-685-3660 (Ext. 226)

* Return/exchange policies at each retailer vary and may differ from the SWG Canada 1 year limited warranty period.