

salton®

Dual zone Wine Cellar



Instruction Booklet

Model: WC-2031

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Use this appliance only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury.
2. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
3. Unplug before servicing.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use or moving from one location to another and before cleaning.
6. To disconnect the appliance, grip the plug and pull it from the wall outlet. Never pull by the cord.
7. **DO NOT** operate the appliance in the presence of explosive and/or flammable fumes.
8. **DO NOT** place the appliance or any of its parts near an open flame, cooking or other heating appliance.
9. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Salton for examination, repair or adjustment. See 'Warranty' section.
10. The use of attachments not recommended by the manufacturer may be hazardous.
11. Place the unit on a dry level surface.
12. **DO NOT** operate if the housing is removed or damaged.
13. A loose fit between the AC outlet (receptacle) and plug may cause overheating a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
14. This appliance is designed to be free standing only. **DO NOT** recess or build into a cabinet.
15. **DO NOT** place heavy objects on top of the Wine Cellar.
16. **DO NOT** place the Wine Cellar in a moist area.
17. **DO NOT** place the Wine Cellar in direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight will affect/alter the outside colour of the appliance.

18. Always removal all bottles before moving the Wine Cellar.

19. **CAUTION: Risk of child entrapment:**

Before disposing take off the doors. Leave the shelves so children may not easily climb inside. Never allow children to operate, play with or crawl inside the wine cellar.

SAVE THESE INSTRUCTIONS



HOUSEHOLD USE ONLY

GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

DESCRIPTION OF PARTS

1. Digital Controls
 - a) Upper Zone – decrease temperature
 - b) Upper Zone – increase temperature
 - c) Digital Display Upper Zone
 - d) Digital Display Lower zone
 - e) Lower Zone – decrease temperature
 - f) Lower zone – increase temperature
2. Wine Racks (4)
3. Leveling Leg

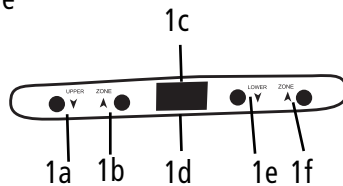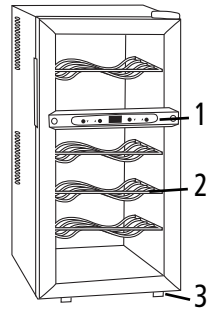

BEFORE FIRST USE

1. Remove the exterior and interior packing.
2. Check to be sure you have all of the following parts:
 - Wire Shelves
 - Instruction Manual
3. **IMPORTANT:** Before connecting the appliance to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
4. Clean the interior surface with lukewarm water using a soft cloth

INSTALLATION

1. This appliance is designed to be free standing only, and should not be recessed or built-in.
2. Place your appliance on a floor that is strong enough to support the appliance when it is fully loaded. To level your appliance, adjust the front leveling leg at the bottom of the appliance.
3. Allow 5 inches (13 cm) of space between the back and sides of the appliance, which allows for proper air circulation
4. Locate the appliance away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the appliance not to perform properly.
5. Avoid locating the appliance in moist areas.
6. Plug the appliance into an exclusive, properly installed-grounded wall outlet. **DO NOT** under any circumstances cut or remove the third (ground) prong from the power cord.

HOW TO USE

Setting the Temperature Control for each Zone

1. Your wine cellar has an electronic temperature control on the front of the unit. The two compartments are independently controlled. The upper compartment has a range of 7-12°C and the lower compartment 12-18°C.
2. When you first turn the unit on, the LCD will display the ambient room temperature. After you select your preferred cabinet temperatures, the set temperature numerals will flash and then revert to the original cabinet temperatures. The unit will then gradually work toward the temperature that you have set it at. The LCD will display the internal cabinet temperature of the upper compartment on the top of the display and the internal cabinet temperature of the lower compartment on the bottom of the display.

3. Pressing the up-arrow (▲) temperature button on the display will increase the temperature in 1° increments and pressing the down-arrow (▼) button will decrease the temperature in 1° increments. The left side of the control panel will allow you to adjust the temperature in the upper zone and the right side of the control panel will allow you to adjust the temperature in the lower zone. **NOTE:** The actual cabinet temperature in a thermoelectric unit is dependant on the ambient room temperature. When the ambient temperature is below the set temperature of the appliance, it will not operate until the ambient temperature increases to that above the set temperature. Thermoelectric wine cellars do not use a compressor and therefore create less noise and vibration. The minimized vibration will prevent bubbles from forming in stored wine, which helps to maintain its quality. These units offer a high level of reliability, lower maintenance, more accurate temperature control and an environmentally-friendly operation as no CFC or HCFC-type refrigerants are used in the cooling process.

Shelving & Storage

1. The bottle racks are plated in order to maintain their appearance and for ease of cleaning.
2. The unit can store a total of 18 standard size bottles – 6 in the upper compartment and 12 in the lower compartment. Many bottles may differ in size and dimensions. As such, the actual number of bottles you may be able to store may vary.
3. Ideal wine storage temperatures:

RED	16 – 18°C
WHITE	10 – 15°C
SPARKLING	7 – 9°C
ROSE	9 – 11°C

Interior Light

Your wine cellar has an interior light with and on/off switch for your viewing convenience. Under normal operation, it is best for the light to remain off.

CARE AND CLEANING

Cleaning

1. Unplug the appliance, and remove shelves.
CAUTION: Failure to unplug the appliance could result in electrical shock or personal injury.
2. Wash the inside surfaces with a warm water and baking soda solution. The solution should be about 2 tablespoons (30 ml) of baking soda to a quart/litre of water.
3. Wash the shelves with a mild detergent solution.
4. The outside of the appliance should be cleaned with mild detergent and warm water.
5. Wring excess water out of the sponge or cloth before cleaning the area of the controls, or any electrical parts.
6. Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.
7. **DO NOT** use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads when cleaning, as some of these items may damage the appliance.

Power Failure

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened.

Long-Term Absence

- Leave the appliance operating during absences of less than three weeks.
- If the appliance will not be used for a longer period, remove all items, unplug the power cord and clean and dry the interior thoroughly. To prevent odour and mold growth, leave the door open slightly; blocking it open if necessary.

Moving your Wine Cellar

1. Always maintain the unit in an upright position when moving.
2. Securely tape down all loose items inside your appliance.
3. Turn the leveling screw up to the base to avoid damage.
4. Tape the doors shut.
5. Protect the outside of appliance with a blanket or similar item.

Energy Saving

In order to maintain optimum operation and to minimize power consumption, the appliance should be located in the coolest area of the room, away from heat producing appliances and out of direct sunlight.

TROUBLESHOOTING

You can solve many common appliance problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem on your own.

PROBLEM	POSSIBLE CAUSE
Appliance does not operate.	<ul style="list-style-type: none">• Not plugged in.• The circuit breaker tripped or a fuse has blown.
Appliance is not cold enough.	<ul style="list-style-type: none">• Check the temperature control setting.• Determine possible external environmental factors.• The door is opened too often.• The door is not closed completely.• The door gasket does not seal properly.
Turns on and off frequently.	<ul style="list-style-type: none">• The room temperature is hotter than normal.• The door is opened too often.• The door is not closed completely.• The temperature control is not set correctly.• The door gasket does not seal properly.
The light does not work.	<ul style="list-style-type: none">• Not plugged in.• The circuit breaker tripped or fuse has blown.• The bulb has burned out.• The switch is in the "OFF" position.
Vibrations.	<ul style="list-style-type: none">• Check to assure that the appliance is level.
The appliance seems to make too much noise.	<ul style="list-style-type: none">• Contraction and expansion of the inside walls may cause popping and crackling noises.• The appliance is not level.
The door will not close properly.	<ul style="list-style-type: none">• The appliance is not level.• The door was reversed and not properly installed.• The gasket is dirty.• The shelves are out of position.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Because of potential safety hazards under certain conditions, it is strongly recommended that you do not use an extension cord with this appliance. However, if you must use an extension cord it is absolutely necessary that it be a UL/CUL-Listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord be 115 volts and at least 10 amperes. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

SWG Canada warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During this 'in-warranty' period, defective products will be repaired or replaced at the discretion of the retailer and/or SWG Canada. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use or improper maintenance.

A defective product should be returned to the original place of purchase within the retailer's stipulated return/exchange period*. If you are unable to have a defective product replaced under warranty by the retailer, please check our website at "www.salton.com" for the service centre nearest you. You may also contact us for assistance by mail, e-mail, fax or telephone as listed below.

To ensure prompt 'in-warranty' service securely package and return the product to us prepaid. Be sure to include the original proof of purchase and a description of the defect along with your address and postal code.

For repairs not covered by the warranty, please contact us for assistance.

salton[®]

SWG CANADA

Division of Salton Appliances (1985) Corp.

Customer Service Department

81A Brunswick

Dollard-des-Ormeaux

Quebec, Canada H9B 2J5

Website: www.salton.com

E-mail: service@salton.com

Fax: 514-685-8300

Tel: 514-685-3660

* Return/exchange policies at each retailer vary and may differ from the SWG Canada 1 year limited warranty period.