

salton®

Wine Cellar



Instruction Booklet

Model: WC-2033

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read all instructions. Use this appliance only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury.
2. To protect against electrical hazards, **DO NOT** immerse cord, plugs, or the appliance in water or other liquid.
3. This unit is designed to be freestanding only. **DO NOT** recess into cabinets. Follow the instructions in the "Installation" section.
4. It is recommended that a separate circuit, serving only this unit be provided. Use receptacles that cannot be turned off by a switch or pull chain.
5. Unplug from outlet when not in use and before moving, servicing or cleaning.
6. To unplug from the outlet, grip the plug and pull it from the wall outlet. Never pull by the cord.
7. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Salton for examination, repair or adjustment. See "Warranty" section.
8. The use of attachments not recommended by the manufacturer may be hazardous.
9. Close supervision is necessary when any appliance is used by or near children.
10. **DO NOT** operate the appliance in the presence of explosives and/or flammable fumes.
11. **DO NOT** place the appliance or any of its parts near an open flame, cooking or other heating appliance.
12. Place the unit on a dry level surface. Follow the instructions in the "Installation" section.
13. **DO NOT** place heavy objects on top of the unit.
14. Empty contents before moving the unit.

15. Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion. **DO NOT** store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
16. **CAUTION: Risk of child entrapment:**
Before disposing take off the doors. Leave the shelves so children may not easily climb inside. Never allow children to operate, play with or crawl inside the wine cellar.

SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

GROUNDING PLUG


To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. **DO NOT** modify the plug in any way or use an adaptor.

DESCRIPTION OF PARTS

1. Light switch
2. LCD display
3. Temperature adjustment buttons
 - ▲ – Increases temperature in increments of 1°C
 - ▼ – Decreases temperature in increments of 1°C

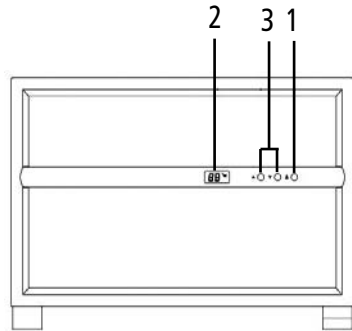

4. Light cover
5. Interior lights
6. Chrome shelves
7. Leveling Feet
8. Magnetic Seal
9. Door

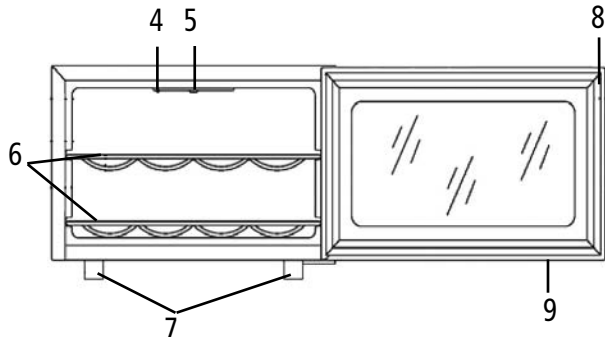

BEFORE FIRST USE

1. Remove all packaging and labels. If there is any glue residue rub a small amount of liquid dish soap with your fingers then wipe with warm water. Dry.
NOTE: DO NOT use any sharp instruments, rubbing alcohol, flammable fluids or abrasive cleaners to remove tape or glue.
2. Clean the wine cellar, following the instructions in the "Care and Cleaning" section.

INSTALLATION

1. The unit is designed to be free standing only. It should not be recessed or built-in.
2. To ensure that your wine cooler works at the maximum efficiency, follow the recommended clearances below:
 - rear and both sides 5" (12.5 cm)
 - top 2" (5 cm)
3. Place the Wine Cellar on a flat level surface that is strong enough to support it when fully loaded. **DO NOT** place the unit in direct sunlight and sources of heat (stove, heater, radiator, etc.).
4. **DO NOT** place next to any appliance that emits a large amount of heat, such as a dishwasher, microwave, oven, toaster, etc. or in direct sunlight. Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption.
5. Extreme cold ambient temperatures may also cause the appliance not to perform properly.
6. To help with door closure, position legs with a 1/8" (3 mm) tilt to the back. Adjust the leveling legs by turning clockwise to raise and counterclockwise to lower.
7. Gently slide the racks into the unit.

HOW TO USE

Setting the temperature

1. Plug in the Wine Cellar.
2. The temperature of the cellar is controlled by the temperature up (▲) and temperature down (▼) buttons. Press either of their buttons to increase or decrease the preferred temperature in increments of one degree. The temperature can be set anywhere between 7°C to 18°C (45°F to 64°F).
3. The temperature displayed on the control panel is always the actual interior temperature of the wine cellar. After inputting a desired temperature setting, the display will indicate the desired temperature then switch back to the actual interior temperature in approximately 3 seconds.
4. The wine cellar then will work towards the desired temperature.

NOTE: The LCD background light will turn on when any of the 3 buttons are press and turn off 1 minute after the last button is pressed.

NOTE:

The interior temperature can be set to between 7°C (45°F) and 18°C (64°F). The wine cellar has the ability to maintain a temperature that is 18°C (32°F) cooler than the ambient temperature. Therefore, if the ambient temperature is higher than 36°C (97°F), the wine cellar may not be able to reach the desired interior temperature.

Recommended temperatures:

Red wines	12 - 18°C (54 - 64°F)
Port / Sherry	10 - 14°C (50 - 57°F)
White / Rose wines	8 - 12°C (46 - 54°F)

CARE AND CLEANING

- Always unplug the wine cellar before cleaning.
- Wash the interior with a warm water and baking soda solution 2 tbsp. (30 ml) of baking soda to 1 quart (litre) of water.
- Wash the wine racks with water and a mild detergent.

- Clean the exterior of the wine cellar with water and a mild detergent.
- Dry all parts thoroughly with a clean, dry cloth, before plugging the unit back into the electrical outlet.

NOTE: Never use abrasive products (scouring pads, powders). They may permanently damage the surface finish of the wine cellar.

Cleaning the fan

It is recommended that the external fan be cleaned every 6 months, as dirt, dust and hair can build up causing the cooling system to not function as efficiently.

Use a vacuum cleaner and collect the dirt, dust and hair that may have accumulated on the fan.

NOTE: Always unplug the unit before cleaning the fan.

Power Failure

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened.

NOTE: If the unit is unplugged, has lost power, or is turned off; you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, damage may occur and or the appliance may not start.

Vacations

- **Short vacations:** Leave the appliance operating during vacations of less than three weeks.
- **Long vacations:** If the appliance will not be used for longer periods, remove all items and unplug the power cord. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly; blocking it open if necessary.

Moving your Wine Cellar

1. Remove all contents including shelves, etc.
2. Turn the leveling screw up to the base to avoid damage.

3. Tape the doors shut.
4. Be sure the appliance stays secure in the upright position during transportation. Also protect the outside of appliance with a blanket, or similar item.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE
Appliance does not operate.	<ul style="list-style-type: none"> • Not plugged in. • The circuit breaker tripped or a blown fuse.
Appliance is not cold enough.	<ul style="list-style-type: none"> • Check the temperature control setting. • The door is opened too often. • The door is not closed completely. • The door gasket does not seal properly. • Appliance is too close to a wall.
Appliance too cold.	<ul style="list-style-type: none"> • Check temperature setting. • The room temperature is too cold.
Turns on and off frequently.	<ul style="list-style-type: none"> • The room temperature is hotter than normal. • The door is opened too often. • The door is not closed completely. • The temperature control is not set correctly. • The door gasket does not seal properly.
Vibrations.	<ul style="list-style-type: none"> • Check to assure that the appliance is level. (See "Installation" section).
Condensation on front of door.	<ul style="list-style-type: none"> • Room environment is too humid.
Moisture on exterior of appliance.	<ul style="list-style-type: none"> • Normal during periods of high humidity – wipe dry.
The door will not close properly.	<ul style="list-style-type: none"> • The appliance is not level. (See "Installation" section). • The door was reversed and not properly installed. • The gasket is dirty. • The shelves are out of position.
Ice formation on the inner rear wall.	<ul style="list-style-type: none"> • The door gasket does not seal properly. • The door is opened too often or for too long.

Because of potential safety hazards under certain conditions, it is strongly recommended that you do not use an extension cord with this appliance. However, if you must use an extension cord it is absolutely necessary that it be a CSA-Listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord be 115 volts and at least 10 amperes.

LIMITED WARRANTY

SWG Canada warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During this 'in-warranty' period, defective products will be repaired or replaced at the discretion of the retailer and/or SWG Canada. A defective product should be returned to the original place of purchase within the retailer's stipulated return/exchange period*. If you do not wish or are unable to have a defective product replaced under warranty by the retailer, SWG Canada will repair or replace the defective product without charge. You may contact us for assistance by mail, e-mail, fax or telephone as listed below.

This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use or improper maintenance.

To ensure prompt 'in-warranty' service be sure you have an original proof of purchase. You may be asked to return the product to us along with a description of the defect and your address, zip/postal code.

For repairs not covered by the warranty, please contact us for assistance.

salton[®]

SWG CANADA

Division of Salton Appliances (1985) Corp.

Customer Service Department

81A Brunswick

Dollard-des-Ormeaux

Quebec, Canada H9B 2J5

Website: www.salton.com

E-mail: service@salton.com

Fax: 514-685-8300

Tel: 514-685-3660

* Return/exchange policies at each retailer vary and may differ from the Salton Canada 1 year limited warranty period.