

# salton®

## Wine Cellar



### Instruction Booklet

Model: WC-2037

# IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read all instructions. Use this appliance only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury.
2. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
3. It is recommended that a separate circuit, serving only this unit be provided. Use receptacles that cannot be turned off by a switch or pull chain.
4. Unplug from outlet when not in use, before moving, servicing or cleaning.
5. To unplug from the outlet, grip the plug and pull it from the wall outlet. Never pull by the cord.
6. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Salton for examination, repair or adjustment. See 'Warranty' section.
7. The use of attachments not recommended by the manufacturer may be hazardous.
8. Close supervision is necessary when any appliance is used by or near children.
9. **DO NOT** operate the appliance in the presence of explosive and/or flammable fumes.
10. **DO NOT** place the appliance or any of its parts near an open flame, cooking or other heating appliance.
11. Place the unit on a dry level surface. Follow the instructions in the 'Installation' section.
12. **DO NOT** operate if the housing is removed or damaged.
13. **DO NOT** place heavy objects on top of the unit.
14. **DO NOT** place the unit in a moist area.
15. Empty contents before moving the unit.
16. **CAUTION: Risk of child entrapment:**  
Before disposing take off the doors. Leave the shelves so children may not easily climb inside. Never allow children to operate, play with or crawl inside the wine cellar.

**SAVE THESE INSTRUCTIONS**  
HOUSEHOLD USE ONLY

 
## GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. **DO NOT** modify the plug in any way or use an adaptor. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance.

Because of potential safety hazards under certain conditions, it is strongly recommended that you do not use an extension cord with this appliance. However, if you must use an extension cord it is absolutely necessary that it be a UL/CUL-Listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord be 115 volts and at least 10 amperes.


## DESCRIPTION OF PARTS

1. Tempered Glass Door
2. Temperature Control Dial
3. Shelves
4. Magnetic Gasket

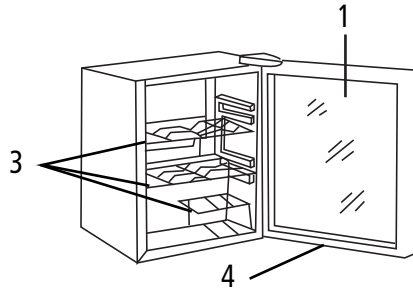


## BEFORE FIRST USE

 1. Remove the exterior and interior packing.
2. Check to be sure you have all of the following parts:
  - 4 Shelves
  - Door handle
  - 2 Screws



3. Before connecting the appliance to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
4. Follow the directions in the 'Care and Cleaning' section to clean the unit.
5. To avoid shipping damage, the door handle of this unit is shipped unassembled. Before using unit, please assemble the door as follows:
  - Locate the door handle and 2 screws attached inside the cabinet.
  - Fasten the door handle onto the frame of the door panel (See Ill. 1). Be sure that the screws point to the holes on the frame of the door panel.

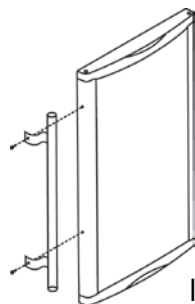 

## INSTALLATION

1. Remove all packaging materials.
2. This appliance is designed to be free standing only, and should not be recessed or built-in.
3. Place your appliance on a floor that is strong enough to support the appliance when it is fully loaded.
4. Locate the appliance away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Avoid locating the appliance in moist areas.
5. Extreme cold ambient temperatures may cause the appliance not to perform properly.
6. For proper air circulation, allow 3" (8 cm) of space at the back, 4" (10 cm) on each side and 2" (5 cm) at the top of the unit to cool the compressor.
7. Level the appliance by adjusting the legs at the front. Turn clockwise to raise and counterclockwise to lower.

8. The interior of the appliance is cooled with a cooling plate mounted in the rear wall. Under the plate there is a channel and an outlet drain for defrost water. Regularly check the defrost water outlet and the drain channel for blockage. They should always be kept free and clean of particles.

## HOW TO USE

### Setting the Temperature Control Dial

1. Plug the appliance in to the wall outlet.
2. Turn the Temperature Control Dial to the MAX setting and allow to cool for 2 – 3 hours. Turn the Temperature Control Dial to the desired setting.
3. The temperature range is between 10° - 15°C (50° - 59°F)
  - '1' or 'MIN' is the warmest
  - '2' or 'MED' is recommended setting
  - '3' or MAX is the coldest
4. In the '0' position the cooling system is switched off but the power supply is not disconnected.

### NOTE:

- Red wines should be stored between the MIN or MED setting. White or rose wines should be stored close to MAX setting.
- Temperature in the appliance depends on how often the door is opened and the ambient room temperature.

## CARE AND CLEANING

### Automatic Defrosting of the Appliance

1. There is no need to defrost the cellar, because ice depositing on the inner back wall is defrosted automatically. Ice build-up on the inner back wall during the compressor operation will defrost automatically when the compressor has cycled off. Defrost water will drain out passing through the drain outlet in the inner back wall into a drain pan situated above the compressor, from where it evaporates.
2. If ice formation remains on the inner back wall then the ice should be manually defrosted. Please follow directions below carefully.
3. Set thermostat knob to STOP (0) position and leave door open.

4. **DO NOT** use boiling water, electrical devices or sharp objects for defrosting.
5. The interior of the appliance is cooled with a cooling plate mounted in the rear wall. Under the plate there is a channel and an outlet drain for defrost water.
6. Check for any debris that may be blocking the drain outlet.
7. The defrosting process may take a few hours.
8. Once defrosting is complete, turn the Temperature Control Dial back to desired position.

## **Cleaning**

- Unplug the appliance, and remove the shelves.
- Wash the inside surfaces with a warm water and baking soda solution. The solution should be about 2 tbsp. (30 ml) of baking soda to a quart (litre) of water.
- Wash the shelves with a mild detergent solution.
- Wring excess water out of the sponge or cloth before cleaning the area of the controls, or any electrical parts.
- Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

**CAUTION:** Failure to unplug the appliance could result in electrical shock or personal injury.

## **Power Failure**

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened.

**NOTE:** If the unit is unplugged, has lost power, or is turned off; you must wait about 5 minutes before restarting the unit. If you attempt to restart before this time delay, damage may occur and or the appliance may not start.

## **Vacations**

- Short vacations: Leave the appliance operating during vacations of less than three weeks.
- Long vacations: If the appliance will not be used for several months, remove all items and unplug the power cord. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly: blocking it open if necessary.

## **Moving your Wine Cellar**

1. Remove all contents and store properly.
2. Securely tape down all loose items inside your appliance.
3. Turn the leveling screw up to the base to avoid damage.
4. Tape the doors shut.
5. Be sure the appliance stays secure in the upright position during transportation. Also protect the outside of appliance with a blanket, or similar item.

## **Energy Saving**

- The appliance should be located in the coolest area of the room, away from heat producing appliances, and out of the direct sunlight.
- Try not to open the door too often, especially when weather is hot and humid.
- Periodically check to make sure the appliance is sufficiently ventilated.
- Make sure door seal gasket is kept clean and is sealing properly.
- The interior of the appliance is cooled with a cooling plate mounted in the rear wall. Under the plate there is a channel and an outlet drain for defrost water. Regularly check the defrost water outlet and the drain channel for blockage. They should always be kept free and clean of particles. If this drain becomes blocked, ice could form and increase energy consumption.

## TROUBLESHOOTING

You can solve many common appliance problems easily. Try the suggestions below to see if you can solve the problem on your own.

PROBLEM	POSSIBLE CAUSE
Appliance does not operate.	<ul style="list-style-type: none"><li>• Not plugged in.</li><li>• The circuit breaker tripped or a fuse has blown.</li><li>• Check the thermostat.</li></ul>
Appliance is not cold enough.	<ul style="list-style-type: none"><li>• Check the temperature control setting.</li><li>• External environment may require a higher setting.</li><li>• The door is opened too often.</li><li>• The door is not closed completely.</li><li>• The door gasket does not seal properly.</li></ul>
Turns on and off frequently.	<ul style="list-style-type: none"><li>• The room temperature is hotter than normal.</li><li>• The door is opened too often.</li><li>• The door is not closed completely.</li><li>• The temperature control is not set correctly.</li><li>• The door gasket does not seal properly.</li></ul>
Vibrations.	<ul style="list-style-type: none"><li>• Check to assure that the appliance is level.</li></ul>
The appliance seems to make too much noise.	<ul style="list-style-type: none"><li>• The rattling noise may come from the flow of the refrigerant, which is normal.</li><li>• As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your appliance.</li><li>• Contraction and expansion of the inside walls may cause popping and crackling noises.</li><li>• The appliance is not level.</li><li>• Make sure the contents are not touching and are placed correctly on the shelves.</li></ul>
The door will not close properly.	<ul style="list-style-type: none"><li>• The appliance is not level.</li><li>• The door was reversed and not properly installed.</li><li>• The gasket is dirty.</li><li>• The shelves are out of position.</li></ul>
Ice formation on the inner rear wall.	<ul style="list-style-type: none"><li>• The door gasket does not seal properly.</li><li>• The door is opened too often or for too long.</li><li>• Check the defrost water outlet drain for debris.</li><li>• Refer to "Care and Cleaning" section of this manual for instruction on defrosting.</li></ul>
Water is leaking from appliance.	<ul style="list-style-type: none"><li>• Check the defrost water outlet drain for debris.</li></ul>



## LIMITED WARRANTY

SWG Canada warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During this 'in-warranty' period, defective products will be repaired or replaced at the discretion of the retailer and/or SWG Canada. A defective product should be returned to the original place of purchase within the retailer's stipulated return/exchange period\*. If you do not wish or are unable to have a defective product replaced under warranty by the retailer, SWG Canada will repair or replace the defective product without charge. You may contact us for assistance by mail, e-mail, fax or telephone as listed below.

This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use or improper maintenance.

To ensure prompt 'in-warranty' service be sure you have an original proof of purchase. You may be asked to return the product to us along with a description of the defect and your address, zip/postal code.

For repairs not covered by the warranty, please contact us for assistance.

# salton®

## SWG CANADA

Division of Salton Appliances (1985) Corp.

Customer Service Department

81A Brunswick

Dollard-des-Ormeaux

Quebec, Canada H9B 2J5

Website: [www.salton.com](http://www.salton.com)

E-mail: [service@salton.com](mailto:service@salton.com)

Fax: 514-685-8300

Tel: 514-685-3660

\* Return/exchange policies at each retailer vary and may differ from the Salton Canada 1 year limited warranty period.