

salton®

Wine Cooler



Instruction Booklet

Model: WC2091

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read all instructions. Use this appliance only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury.
2. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
3. This unit is designed to be freestanding only. Do not recess into cabinets. Follow the instructions in the Installation section.
4. It is recommended that a separate circuit, serving only this unit be provided. Use receptacles that cannot be turned off by a switch or pull chain.
5. Unplug from outlet when not in use, before moving, servicing or cleaning.
6. To unplug from the outlet, grip the plug and pull it from the wall outlet. Never pull by the cord. Do not connect or disconnect the plug when your hands are wet.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to SWG Canada for examination, repair or adjustment. See Warranty.
8. The use of attachments not recommended by the manufacturer may be hazardous.
9. Do not attempt to repair or replace any part of your appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.
10. Close supervision is necessary when any appliance is used by or near children.
11. Do not operate the appliance in the presence of explosives and/or flammable fumes.
12. Do not place the appliance or any of its parts near an open flame, cooking or other heating appliance.
13. Place the unit on a dry level surface. Follow the instructions in the Installation section.
14. Do not place heavy objects on top of the unit.
15. Empty contents before moving the unit.
16. **WARNING:** Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. 2
The fumes can create a fire hazard or explosion.

17. CAUTION: Risk of child entrapment:

Before disposing of an appliance take off the doors. Leave the shelves so children may not easily climb inside. Never allow children to operate, play with or crawl inside the appliance.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. **DO NOT** modify the plug in any way or use an adaptor.

INTRODUCTION

Your new wine cellar has no compressor and as such is environmentally friendly, needing no special disposal precautions other than those listed in the Safeguards section of this manual.



Cooling is done using 'superconductor technology'. This uses the ambient air around the unit which is cooled when drawn in. The warm air is exhausted through the vents. 'Superconductor' wine cellars create less noise and vibration than compressor units. The minimized vibration will prevent bubbles from forming in stored wine, which helps to maintain its quality. These units offer a high level of reliability, lower maintenance, more accurate temperature control and an environmentally friendly operation as no CFC or HCFC type refrigerants are used in the cooling process.

BOTTLE STORAGE

Many bottles differ in size and dimensions. As such the actual number of bottles you may be able to store may vary. This unit will store 16 standard bottles.

DESCRIPTION OF PARTS

1. Cabinet
2. Removable Wine Racks (4)
3. Fan Cover
4. Ventilation Holes
5. Leveling Legs (4)
6. Door Handle
7. Door Gasket
8. Control Panel:
 - a. Power
 - b. Interior Light
 - c. F / C Temperature Button
 - d. F / C Indicator
 - e. LED Display Window
 - f. Red Wine Indicator
 - g. White Wine Indicator
 - h. Raise Temperature
 - i. Lower Temperature
 - j. Set Button

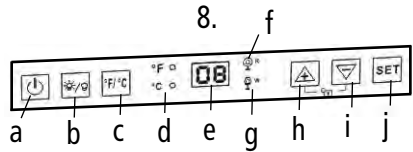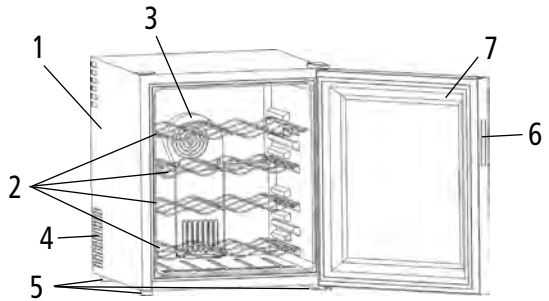

INSTALLATION

1. The unit is designed to be free standing only, it should not be recessed or built-in. **CAUTION:** Use two or more people to move and install the appliance. Failure to do so can result in back or other injuries.
2. Remove all exterior and interior packaging material.
3. To ensure that your wine cooler works at the maximum efficiency, follow the recommended clearances below for proper ventilation:
 - sides 5" (12.7 cm)
 - back 5" (12.7 cm)
4. Place the Wine Cellar on a flat level surface that is strong enough to support it when fully loaded.

NOTE:

DO NOT place the appliance in direct sunlight, this could affect the acrylic coating. DO NOT place the appliance near sources of heat such as a stove, heater, radiator, dishwasher, microwave oven, toaster, etc. DO NOT place the appliance in a moist humid area.

5. This Wine Cellar uses superconductor refrigeration technology and is not designed for storage in hot area like garages, warehouses or outdoors since it is designed to operate at a maximum of 17°C/30°F below the ambient temperature.











6. Extreme cold ambient temperatures may also cause the appliance not to perform properly.
7. To help with door closure, position leveling legs with a 1/8" (3 mm) tilt to the back. Adjust the leveling legs by turning clockwise to raise and counterclockwise to lower.
8. Gently slide the racks into the unit.
9. Plug the Wine Cooler into the outlet, set the temperature (see the How to Use section) and allow the appliance to cool down for 2 – 3 hours before placing items in the cavity.


HOW TO USE

Guidelines for cooling wines are as follows:


Red Wines	14 – 18°C	57 - 65°F
Dry White Wines	9 - 14°C	49 - 58°F
Rose Wines	10 - 11°C	51 - 53°F
Sparkling Wines	5 - 9°C*	40 – 49°F*

NOTE: The temperature range for this wine cooler is 8 - 18°C (46.4 – 64.4°F), which is at the top of the recommended range for sparkling wines.

1. The Wine Cellar has an electronic Temperature Control and can be set from 8° - 18°C (46.4° - 64.4°F). The temperature display can be switched from Fahrenheit to Celsius by touching the F/C Button.
2. Touch the Power Button  for 3 seconds to start your wine cooler.
3. IMPORTANT: To use the Raise  or Lower  Temperature Buttons the control panel must be unlocked. Touch the Raise  and Lower  temperature buttons simultaneously for 3 seconds to unlock the control panel.
4. Touch the Set Button  to set the temperature. NOTE: The Control Panel will lock automatically 12 minutes after the last time a button has been pressed.
5. To increase the temperature, touch the Raise Temperature Button . To lower the temperature, touch the Lower Temperature Button . The display will increase or decrease in 1° increments when touching the Raise Temperature  or Lower Temperature  Buttons.

6. The actual internal temperature in a 'Superconductor' appliance is affected by the ambient room temperature. The Wine Cooler should be placed where the ambient temperature is between 20 - 26°C (67 - 78°F). If the ambient temperature is above or below the recommended temperatures, the internal temperatures may fluctuate and the range of 8 – 18°C (46.4 – 64.4°F) may not be reached.
7. The Light Switch inside the unit can be activated by touching the Interior Light Button  on the control panel. Under normal operation it is best for the light to remain off.
8. When storing mostly red wines set the temperature according to the Guidelines on page 5. The Red Wine Indicator will light up in red beside the Display Window.
9. When storing White, Rose or Sparkling wines set the temperature according to the Guidelines on page 5 and the White Wine Indicator will light up in blue.

IMPORTANT NOTES:

- After a power failure, the control functions will be locked for approximately 5 minutes. To reset, after 5 minutes, touch the Power Button and start operation as normal. If you do not reset the temperature the unit will automatically turn on and revert to the factory default setting of 12.2°C (54°F).
- Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take the proper steps to protect the contents.
- One characteristic of superconductor appliances is the length of time it requires to recover from having the door opened and shut frequently. It may be necessary to wait longer for the temperature to return to its former level once the door has been opened for too long. This is normal for this type of appliance.
- If the light has been turned on, it will automatically turn off after 10 minutes. To turn it back on, touch the Light Button  on the control panel.



CARE AND CLEANING

1. ALWAYS unplug the unit from the wall outlet before cleaning. CAUTION: Failure to unplug the Wine Cellar could result in electric shock or personal injury.
2. Empty the cavity.
3. Wash the Wine Racks in mild soap and water. Rinse and dry.
4. Wash the inside cavity with a warm water and baking soda solution. Mix approximately 2 tbsp. (30 ml) of baking soda with 1 quart (litre) of water.
5. The outside of the Wine Cellar can be wiped with a damp cloth. Dry.
6. DO NOT use any abrasive cleaning products on the inside or outside of the Wine Cooler.

Moving your Wine Cellar

1. Remove all contents and store properly.
2. If anything is left inside the unit, securely tape down all loose items.
3. Tape the doors shut.
4. Protect the outside of appliance with a blanket, or similar item.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Wine Cellar does not operate	<ul style="list-style-type: none"> • Check if Wine Cellar is plugged in. • Check if there is power at the AC outlet by checking the circuit breaker • Ensure that the outlet is not controlled by a wall switch.
Control panel is not working	<ul style="list-style-type: none"> • Unlock the control panel by Touching the Raise Temperature  and Lower Temperature  simultaneously for 3 seconds to unlock the control panel • If there has been a power failure, wait 5 minutes then the Control Panel will work.
Vibrations	<ul style="list-style-type: none"> • Check to assure that the appliance is level
The door will not close properly	<ul style="list-style-type: none"> • The appliance is not level • The gasket is dirty • The shelves are out of position
Appliance is not cold enough	<ul style="list-style-type: none"> • Check the temperature control setting • External environment temperature is too low or too high • The door is opened too often • The door is not closed completely • The door gasket does not seal properly • The appliance does not have the recommended clearances. See the 'Installation' section
Turns on and off frequently	<ul style="list-style-type: none"> • The room temperature is hotter than normal • The door is opened too often • The door is not closed completely • The temperature control is not set correctly • The door gasket does not seal properly
The light does not work	<ul style="list-style-type: none"> • Not plugged in • The circuit breaker has tripped or the fuse has blown • Touch the Interior Light Button on the control panel

The appliance should always be plugged into its own individual electrical outlet to prevent overloading of house wiring circuits. Overloading of house wiring circuits could cause a fire hazard if they overheat.

It is recommended that you do not connect your wine cooler to extension cords. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance. If you must use an extension cord, it must have a rating at least as high as indicated on the appliance. Please ensure that it is an approved 3 wire grounded type appliance extension cord

LIMITED WARRANTY

SWG Canada warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During this 'in-warranty' period, defective products will be repaired or replaced at the discretion of the retailer and/or SWG Canada. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use or improper maintenance.

A defective product should be returned to the original place of purchase within the retailer's stipulated return/exchange period*. If you are unable to have a defective product replaced under warranty by the retailer, please check our website at "www.salton.com" for the service centre nearest you. You may also contact us for assistance by mail, e-mail, fax or telephone as listed below.

To ensure prompt 'in-warranty' service securely package and return the product to us prepaid. Be sure to include the original proof of purchase and a description of the defect along with your address and postal code.

For repairs not covered by the warranty, please contact us for assistance.

salton®

SWG CANADA

Division of Salton Appliances (1985) Corp.

Customer Service Department

81A Brunswick

Dollard-des-Ormeaux

Quebec, Canada H9B 2J5

Website: www.salton.com

E-mail: service@salton.com

Fax: 514-685-8300

Tel: 514-685-3660

* Return/exchange policies at each retailer vary and may differ from the SWG Canada 1 year limited warranty period.