



salton®
cotton candy
maker



Instruction Booklet
Model: CCM1779

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Always use this appliance on a dry, level surface.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid. Do not place on a wet surface.
4. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance. This appliance is NOT A TOY.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
6. Unplug from outlet when not in use before putting on or taking off parts and before cleaning.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to manufacturer for examination, repair or electrical or mechanical adjustment. See Warranty.
8. The use of accessories or attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Extreme caution must be used when moving any appliance especially if it contains hot liquids.
12. This appliance is for Household Use Only.
13. Do not use appliance for other than intended use.
14. Do not leave unit unattended while in use.
15. Always turn the appliance off and unplug from the outlet when left unattended or finished using.
16. Check to be sure that the switch is in the OFF position after each use.
17. Do not place on or near a hot gas or electric burner, or in a heated oven.
18. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
19. DO NOT place anything other than candies or flavored sugar in the Sugar/Candy Chamber.

20. DO NOT touch hot surfaces. NEVER put fingers on or near the Extractor Head or Heating Element while the unit is on or while it is still hot.

CAUTION: Both the Extractor Head and the Heating Element area will be very hot during and after use.

21. DO NOT put any part of the appliance in the dishwasher.

22. DO NOT pour water or any other liquid onto the Heating Element or any other part of the Motorized Base.

23. Always check inside the heating element compartment for foreign objects before switching the unit ON.

24. **CAUTION:** To avoid possible injury, keep hands, face and loose objects away from the Extractor Head, it spins at high speed.

25. This appliance generates heat. Do not operate while it is near or touching curtains, wall coverings, clothing or other flammable materials.

26. All servicing, other than cleaning, should be done by an authorized service representative. See warranty section.

SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

DESCRIPTION OF PARTS

1. Removable Bowl
2. Extractor Head
3. Heating Element
4. Extractor Head Stem
5. Sugar/Candy Chamber
6. Heating Element Stem
7. Motorized Base
8. On/Off Switch
9. 8 Reusable Sticks
10. Measuring Scoop

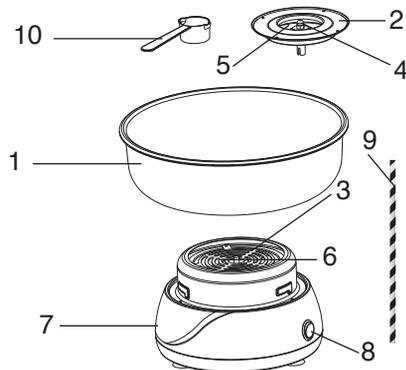

BEFORE FIRST USE

1. Lift the Extractor Head straight up and remove from the unit.
2. Turn the Bowl clockwise until it stops then lift from the Motorized Base.
3. Wash the Removable Bowl, Extractor Head, Reusable Sticks and the Measuring Scoop in warm soapy water. Rinse and dry thoroughly before using.
4. Wipe the Motorized Base with a damp cloth. Wipe with a dry cloth. **IMPORTANT:** Ensure that water does NOT enter the Base.
5. Reassemble the unit by placing the Bowl over the Base. Turn the Bowl counter-clockwise until it locks into position.
6. Align the notches in the Extractor Head stem over the tabs in the Heating Element stem and press the Extractor Head down gently. Turn the Extractor Head if the notches and tabs are not aligned.
7. Your Cotton Candy Maker is now ready to use.

HOW TO USE

1. Assemble the Cotton Candy Maker and place on a dry, stable, level surface.
2. Ensure that the On/Off Switch is in the OFF position.
3. Plug into a 120V AC electrical outlet.
4. Pour 1 scoop of flavored sugar or 2 hard candies, evenly spaced into the Sugar/Candy Chamber. **DO NOT** overfill the Sugar/Candy Chamber by adding more than two candies or 1 scoop (1 tbs/15ml) of sugar.
5. Press the On/Off Switch to the ON position.
IMPORTANT: The Extractor Head and Heating Element will be very hot during use. Never touch either of these parts until they have cooled completely.
6. When you see the cotton candy floss begin to form, collect the cotton candy on the provided sticks by holding the stick vertically and circle the bowl to collect the cotton candy.
NOTE: Wet the stick before starting to collect the cotton candy. This will allow the cotton candy to adhere to the stick.
7. Turn the unit off when all the sugar or candy has been dispensed. For additional batches allow the Extractor Head to come to a complete stop. Follow the directions in # 4 – 6 above. The Cotton Candy will form more quickly as the unit is already hot.

HELPFUL HINTS

1. Make sure the candies are evenly placed in the Sugar/Candy Chamber.
2. For faster results break up candies before placing in the Sugar/Candy Chamber.
3. Use only hard sugar-free or regular hard candies. Use fruit flavored, caramel, root beer, butterscotch, peppermint. Try your favorite flavors or a combination of two flavors.
4. Do not use the following:
 - Ball-shaped candies
 - Hard shell candies with a soft center
 - Gummy or chewy candies
 - Sugar-pressed candies
 - Instant drink mix packets

CARE AND CLEANING

1. Do not use abrasive cleansers or scouring pads.
2. NEVER immerse the base or cord in water or any other liquid.
3. Unplug and allow the cotton candy maker to cool completely before cleaning.
4. Remove the bowl by turning clockwise and lifting.
5. Grip the Extractor Head and lift straight up.
6. Wash the Extractor Head, Removable Bowl, Measuring Scoop and Reusable Sticks in warm soapy water. Rinse and dry.

NOTE: If sugar is stuck to the Extractor Head, allow it to soak in warm soapy water for several hours or overnight. Wash thoroughly, rinse and dry.

IMPORTANT: Never attempt to scrape hardened candy out of the Extractor Head, this could damage the coating.
7. Wipe the exterior of the Motorized Base with a damp cloth. Ensure that water does NOT enter the Motorized Base.
8. All servicing, other than cleaning, should be done by an authorized service representative. See warranty section.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

The original sales receipt is the only acceptable proof of purchase

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. Salton Canada, at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Canada will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....
Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

SALTON CANADA
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660 (Ext. 226)
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com