



salton®

smart coffee
grinder



Instruction Booklet

Model: CG1770

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions carefully before use.
2. Never leave the appliance unattended while plugged into the wall outlet.
3. To protect against electrical hazards, do not immerse cord, plug or appliance in water or any other liquid or place in the dishwasher.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use, when removing or putting on parts and before cleaning.
6. DO NOT operate any appliance with a damaged cord or plug or after the appliance has been damaged in any manner. Return appliance to manufacturer for examination.
7. The use of accessories or attachments not recommended by manufacturer may cause hazards.
8. DO NOT use outdoors.
9. DO NOT let cord hang over edge of table or counter, or touch hot surfaces.
10. DO NOT use appliance for other than intended use.
11. DO NOT place on or near a hot gas or electric burner or in a heated oven.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from the wall outlet.
13. To avoid overheating the motor, do not use the Grinder continuously for more than 30 seconds.
14. To avoid injury to persons and damage, always unplug the appliance and wait for the motor to stop completely, immediately after use and before assembling/disassembling or cleaning.
15. Never put your hands, wooden spoons or other foreign substances into the Grinding Bowl when the Grinding Bowl is assembled or the appliance is connected to the wall outlet.

16. Before using, ensure there are no foreign objects in the Grinder.

SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

DESCRIPTION OF PARTS

1. Cover Assembly
 - a. Inner Cover
 - b. Outer Cover
2. Grinding Bowl
3. Cleaning System ((inside grinding bowl)
4. Start Button
5. Cup Selector Button
6. Grind Selector Button
7. Base
8. Cleaning Brush (not shown)

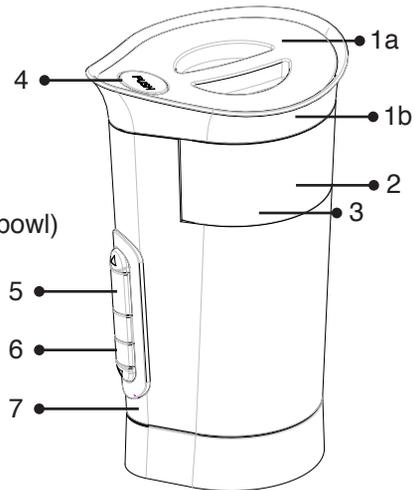

BEFORE FIRST USE

1. Remove all packaging.
2. Turn the Cover Assembly counterclockwise and remove.
3. Separate the Inner and Outer Cover.
4. Turn the Grinding Bowl counterclockwise and remove.
5. Wash the Cover and Bowl in warm soapy water. Rinse and dry thoroughly. **NOTE: DO NOT** place any parts of the appliance in the dishwasher. **IMPORTANT: Be careful when wiping out the Grinding Bowl, the blade is very sharp.**
6. Follow the instructions in the Care and Cleaning section to reassemble the appliance.

HOW TO USE

1. Place the Grinding Bowl and the Cover Assembly on the Grinder. See the assembly instructions in the Care and Cleaning section.
NOTE: The Coffee Grinder will only operate with the Cover and Grinding Bowl in the locked position.
2. Remove the Inner Cover by grabbing it by the finger tabs and lifting it straight up.
3. Ensure that the Grinding Bowl is empty and clean then pour whole coffee beans into the Grinding Bowl and fill to the desired amount. The minimum capacity is $\frac{1}{4}$ cup (60 ml) of coffee beans and maximum capacity $\frac{3}{4}$ cup (180 ml).
NOTE: NEVER fill above the MAX level.
4. Place the Inner Cover back onto the Grinder.
5. Plug the Grinder into the wall outlet.
6. Press the Selection Buttons to choose the desired number of cups and desired grind.
7. Press and HOLD the Start Button to begin grinding. The Grinder will stop automatically when the grinding cycle is complete.
NOTE: To stop the grinding cycle at any time, release the Start Button. If the Start Button is pressed again, the Grinder will start from the beginning of the timed cycle.
IMPORTANT: NEVER remove the Cover until the blades have stopped moving.
8. Remove the Grinding Bowl and Cover Assembly together by turning the Grinding Bowl counterclockwise and lifting it straight up.
9. Use the Cleaning System by gently twisting the Cover back and forth to remove the coffee grounds from the sides and bottom of the Grinding Bowl.
10. Remove the Inner Cover and shake out the coffee grounds.
11. Use the ground coffee immediately or place in an airtight container for storage.

GRIND SELECTOR CONTROL

The Grind Selector Control has 3 settings, fine medium and coarse. The setting that you choose will influence the strength of coffee.

- Fine: Use for turkish coffee, espresso, latte, macchiato and cappuccino
- Medium: Use for french press coffee makers and filter coffee makers
- Coarse: Use for percolators

Coffee Beans

Experimenting with the Grinder will enable you to get exactly the grind you prefer for your coffee. A fine grind exposes more surface to the water and therefore a more rapid rate of extraction of flavour. A coarser grind, which exposes little surface, is appropriate for the longer brewing cycle of percolators. Check your coffee maker instructions for the type of grind that is best.

For the freshest, most robust cup of coffee, grind only enough coffee for the pot you are making. If you are making a large pot, you may need to grind in two batches. Coffee beans will keep up to 2 months in the freezer (in an airtight container) and can be ground while still frozen. Fresh beans will yield the best flavour and aroma.

Tips for making espresso:

- a) The coffee must be finely ground but not too fine. The correct grind should look gritty like salt or sand.
- b) If the grind is too fine, the water will not flow through the coffee when brewing.
- c) If the grind is too coarse, the water will flow through too fast.

Use the chart below as a guide to the amount of coffee beans required for coffee.

Cups of Coffee (5 oz./150 ml)	Bean Quantity Tablespoons	Bean Quantity ML
4	4	60
6	4.5	67.5
8	6	90
10	7.5	112.5
12	9	135

Herbs and Spices

Herbs and spices take on a fresh, more flavourful taste when freshly ground. Dried herbs can be combined and ground for a few seconds giving them more flavour. Peppercorns, when freshly ground, taste totally different from canned pre-ground pepper. Spices such as allspice, cardamom, celery seed, mustard seed & coriander seed grind very well.

Not Recommended

The Grinder will grind most dry or brittle substances. It WILL NOT grind anything which is moist, gummy or extremely hard (chocolate, nuts, whole nutmet, candied ginger, etc.). It will not make pastes of any kind from seeds such as sunflower or sesame.

Grinding cinnamon, cloves and nutmeg is not advised as the oils and hardness can cause the plastic cover to pelt, discolor or crack. Grains such as corn, wheat, rice barley and rye may also cause damage to the Cover. Chopping, mincing or pureeing of soft foods is not recommended.

HELPFUL HINTS

1. Do not operate this appliance for longer than 30 seconds at a time as this could cause overheating. Allow to cool for at least a few minutes after each use. Allow the appliance to cool down for 10 – 15 minutes after 1 minute of continuous use.
2. Do not force when the blade stalls. Foreign substance might be wedged in the blade. Turn the appliance off, UNPLUG from the wall outlet and follow the instruction in the Care and Cleaning section.
3. For best flavour, store coffee beans in an airtight container.
4. Grind coffee beans immediately before brewing.
5. The coffee taste depends on the fineness of the grind and the amount of coffee grounds. The finer the coffee grinds and the more ground coffee that is used, the stronger the taste.
6. Coffee flavour and strength is a personal preference. Vary the type of coffee beans, the amount of coffee and the fineness of the grind to find the flavour you prefer.

CARE AND CLEANING

Assembly

WARNING: To avoid injury to persons, always unplug the appliance and wait for the motor to stop completely, immediately after operation and before assembling/disassembling or cleaning the appliance. **UNPLUG FROM THE WALL OUTLET.**

Before each use, ensure the Grinding Bowl is empty and all parts are clean.

1. Assemble the Grinding Bowl by aligning the arrows on the Bowl with the arrows on the Base. Turn the Bowl clockwise until it locks into position.
2. Place the Inner Cover onto the Outer Cover.
3. Place the Cover Assembly onto the Grinding Bowl by aligning the arrows on the Cover with the arrows on the Grinding Bowl. Turn the Cover clockwise.

NOTE: The Coffee Grinder will only operate with the Cover and Grinding Bowl in the locked position.

Power Cord

For packaging convenience the power cord may be wound underneath the base. To extend the cord unwind it from the cord storage.

Cleaning

1. Unplug from the wall outlet.
2. Turn the Cover Assembly counterclockwise and remove.
3. Separate the Inner and Outer Cover.
4. Turn the Grinding Bowl counterclockwise and remove.
5. Use the included cleaning brush to gently brush away any excess coffee grounds from the walls or bottom of the Grinding Bowl.
6. Wash the Cover and Bowl in warm soapy water. Rinse and dry thoroughly.

NOTE: Do not place any parts of the appliance in the dishwasher.

IMPORTANT: Be careful when wiping out the Grinding Bowl, the blade is very sharp.

7. If needed, wipe the outside of the appliance with a cloth dampened in warm soapy water. Ensure that water or any other liquids do not spill or drip on the Base. NEVER poke with anything into the Base. If necessary, use the included cleaning brush to clean the top of the Base. If water enters the Base, have the unit checked by an authorized service center. (See warranty) **NOTE:** Do not use abrasives.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

****The original sales receipt is the only acceptable proof of purchase****

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Canada, at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Canada will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....
Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

SALTON CANADA
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660 (Ext. 226)
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com