



salton®
**temperature
control kettle**
1.7 L/Q stainless steel



Instruction Booklet
Model: GK1758

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
8. The use of accessories or attachments not recommended by Salton may result in fire, electric shock or personal injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
13. Only use the Kettle with the base provided.
14. Do not use appliance for other than intended use.
15. Do not leave unit unattended while in use.
16. Extreme caution must be used when moving an appliance containing hot liquids.
17. Do not use the Kettle without the Lid in place. **WARNING:** Do not remove the lid while the Kettle is boiling.
18. Scalding may occur if the Lid is opened while the Kettle is hot.

19. Direct kettle spout away from cabinets, walls, etc. to prevent possible steam damage.
20. Do not use the Kettle if liquid is below the 0.5L/Q (MIN) or above 1.7L/Q (MAX) marking.
21. Do not attempt to remove any housing parts or insert foreign objects into the kettle.

SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

DESCRIPTION OF PARTS

1. Spout
2. Control Panel
 - a. Increase Temperature
 - b. Decrease Temperature
 - c. °C/°F Button
 - d. Power Button
3. Handle
4. Tea Infuser Assembly
 - a. Tea Infuser Handle
 - b. Tea Infuser Lid
 - c. Tea Infuser Basket
5. Power Base
6. Cord Wrap
7. Kettle Lid

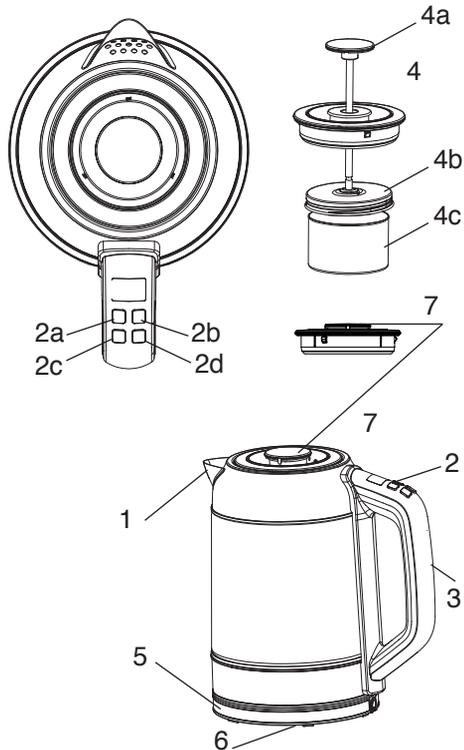

BEFORE FIRST USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packaging.
3. Gently wash the Tea Infuser Assembly in warm soapy water and allow to dry.
4. Fill the Kettle with 1 L (4 cups) of cold tap water and bring to a boil.
5. Add 500 mL (2 cups) of white vinegar and let stand for at least 1 hour or overnight. Discard.
6. Fill the kettle to the maximum fill line with cold tap water. Bring to a boil and discard. Repeat.
7. The kettle is ready to use.

HOW TO USE

1. Open the Lid by lifting it straight up. Fill the Kettle through the lid opening with a minimum of 500 mL (2 cups) of water.
2. **DO NOT** attempt to fill the Kettle while it is plugged into the wall outlet. **DO NOT** use for other than boiling water. Other liquids will contaminate the interior of the kettle. **DO NOT** fill past the MAX level printed on the glass. Overfilling may cause water to spit out when boiling.
3. Place the Lid back on the Kettle.
4. Place Kettle and Base on a flat, level, dry, heat resistant surface. Ensure that it is correctly engaged on the Base.
5. Plug into a 120V AC wall outlet. The display will show the actual water temperature. The Kettle is now in standby mode.
NOTE: If no selection has been made in 3 minutes, the display will shut off and the Kettle will enter Sleep Mode. Press any button once to "Wake up" the Kettle.
NOTE: Never plug kettle into an electrical outlet when the kettle is empty.
6. Direct kettle spout away from cabinets, walls, etc. to prevent possible steam damage.
7. The default temperature is 100°C (212°F). The variable temperature range is 40 to 100°C (105 - 212°F) in 10 degree Celsius increments.
8. **To boil water:**
 - Press the power button  once.
 - To switch between the Celsius and Fahrenheit display press the °F/°C button once.
 - The display will show 100°C (212°F) for 3 seconds then the display will switch to the actual water temperature. The display temperature will increase until the kettle reaches 100°C (212°F).
 - Once the water has boiled the Kettle will shut off and the kettle will beep three times.
 - The display will show 100°C (212°F) for 3 minutes then the display

will show the decreasing water temperature as it cools.

9. To use the variable temperature settings:

- Press the “-” or “+” buttons until you reach the desired temperature between 40 –100°C (104 – 212°F) in 10 degree Celsius increments.
- To switch between the Celsius and Fahrenheit display, press the °F/°C button once.
- The display will show the chosen temperature for 3 seconds then will shut switch to the actual water temperature. The display temperature will increase until it reaches the chosen temperature.
- Once the temperature has reached the set temperature the Kettle will shut off and beep three times, the display will show the decreasing water temperature as it cools.

10.IMPORTANT:

- a) The kettle shuts off automatically after the boiling cycle is complete.
- b) If the kettle is removed from the base before the boiling cycle is complete the boiling cycle will be cancelled.
- c) To turn the kettle off before the boiling cycle is complete press the Power Button.

11.The Lid should not be opened when the Kettle is hot.

12.Only grip the Kettle by the Handle as all other surfaces will be hot.

13.Return the Kettle to the Base or a heat resistant surface after use.

14.**IMPORTANT:** If the Kettle is accidentally switched on when empty, the thermostat will automatically cycle on and off to prevent the Kettle from overheating. If this situation occurs unplug the Kettle immediately and allow the Kettle to cool before refilling.

15.It is recommended that the Power Cord be disconnected from the wall outlet when not in use.

16.**DO NOT** attempt to connect any other appliance to the Power Base or tamper with the connector in any way.

KEEP WARM FUNCTION

1. Hold the Power Button  for 3 seconds, then press the ‘-’ or ‘+’ buttons until you reach one of the 7 desired ‘keep warm’ temperature settings between 40 - 95°C (104 – 203°F).

IMPORTANT: The Keep Warm Function cannot be used for the 100°C/212°F temperature setting.

2. The °C/°F on the display will flash when the Keep Warm function has been activated.

NOTE: The Keep Warm function will keep water at the preset temperature for 2 hours. The kettle can be removed from the Base for 2-3 minutes otherwise the Keep Warm function is cancelled and the display will show the current water temperature in the kettle.

3. The Keep Warm Function can be deactivated at any time by pressing the Power Button once.

HOW TO USE THE TEA STEEPER

1. Use this function with the Tea Infuser Assembly.
2. Fill the Kettle with water between the MIN and the MAX markings on the Kettle.
3. Remove the Tea Infuser Basket by holding the Basket in one hand and turning the Tea Infuser Handle counter-clockwise.
4. Add tea leaves or tea bags to the Basket. The amount of tea should be based on the amount of water in the Kettle.
NOTE: If you are using bagged tea the strings and tags should be removed.
5. Place the Basket back onto the Tea Infuser Assembly by turning the Tea Infuser Handle clockwise.
6. Insert the Tea Infuser Assembly in the raised position, onto the Kettle.
7. Follow steps #4 – 9 in the How to Use Section.
8. Lower the Tea Infuser Basket into the water once the Kettle has reached the desired temperature.
9. Follow the guide below for different tea steeping temperatures and times.

WATER TEMPERATURE GUIDE

The following is a general guide for brewing different types of tea. Brand and freshness of tea including each individuals taste and preference differs.

If your tea box/container has brewing instructions, follow those as they are probably ideal for that specific tea.

Type of Tea	Water Temperature	Steep Time
Green tea	80°C / 176°F	1-3 minutes
White tea	90°C / 194°F	4-8 minutes
Oolong tea	90°C / 194°F	1-8 minutes
Black tea	100°C / 212°F	3-5 minutes
Herbal tea	100°C / 212°F	5-8 minutes
Boil	100°C / 212°F	

Your kettle can also be used for bringing the water to the perfect temperature for the following. Please remember that these are guidelines only.

Others:	Water Temperature
Baby formula preparation	40°C / 104°F (water should have been previously boiled)
Hot Chocolate	80°C / 176°F
Instant soup mixes	90°C / 194°F
Oatmeal	90°C / 194°F

CARE AND CLEANING

1. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
2. Unplug Kettle from wall outlet. Empty the Kettle and allow it to cool before cleaning.

Exterior

- Use a soft, damp cloth to clean the exterior.
- **DO NOT** use abrasive cleaners. Dry exterior thoroughly before use.
- **DO NOT** immerse kettle or power base in water or other liquid.

3. Descaling

Under normal use, scale build-up will form on the inside of the kettle and will coat the stainless steel plate. Scale, which has accumulated inside the kettle must be removed by boiling equal parts of white vinegar and water (500ml/ 2 cups of each is recommended). Once the water has boiled, allow the mixture to stand several hours or overnight. Empty out mixture and fill kettle to the MAX level with fresh water. Bring water to a boil and discard. For heavy scale build-up, use pure vinegar and let stand overnight. Empty out vinegar and fill kettle to the MAX level with fresh water. Bring water to a boil and discard.

This descaling process should be repeated periodically.

NOTE: Scale build-up can be delayed by pouring out water after use then refilling the kettle when required.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

****The original sales receipt is the only acceptable proof of purchase****

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Canada, at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Canada will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....

Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

SALTON CANADA
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660 (Ext. 226)
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com