



**salton®**

**cordless electric  
glass kettle**

1.7 liters/quarts



## **Instruction Booklet**

Model: GK1842

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. **DO NOT** touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
8. The use of accessories or attachments not recommended by Salton may result in fire, electric shock or personal injury.
9. **DO NOT** use outdoors.
10. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
11. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
13. **DO NOT** use appliance for other than intended use.

14. **DO NOT** leave unit unattended while in use.
15. Extreme caution must be used when moving an appliance containing hot liquids.

# SAVE THESE INSTRUCTIONS

## HOUSEHOLD USE ONLY

### GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

### BEFORE FIRST USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packaging.
3. The Aquascreen® filter has been installed in the spout of the Kettle during production. If it has been dislodged during shipping check inside the Kettle or in the box. Install the Filter before using the Kettle.

### IMPORTANT NOTES:

- **DO NOT remove or install the filter when the Kettle is hot.**
  - **DO NOT use the kettle without the filter in position:**
    - This may allow water to spit out when boiling
    - The kettle may remain in the boil cycle too long once the water has boiled
    - The kettle may not shut off
4. Fill the Kettle with 1 Liter (Quart) of cold tap water and bring to a boil. Add 500 ml (2 cups) of white vinegar and let stand for at least 1 hour or overnight. Discard.
  5. Fill the kettle to the maximum fill line with cold tap water. Bring to a boil and discard. Repeat.
  6. The kettle is ready to use.

### HOW TO USE

1. Open the Kettle Cover by pressing the center button. Fill the Kettle with water between the MIN and MAX marking, through the lid opening.

#### NOTE:

**DO NOT** attempt to fill while the Kettle is on the Power Base.

**DO NOT** use for other than boiling water. Other liquids will contaminate the interior of the Kettle.

- DO NOT** fill past the MAX level indicated on the kettle. Overfilling may cause water to spill out when boiling.
2. Place Kettle on Power Base making sure it is correctly engaged on the Power Base.
  3. Plug Power Base cord into a 120V AC wall outlet.  
**NOTE:** Never plug Power Base with empty Kettle into the electrical outlet.
  4. Press the On/Off Switch to the 'On' position (I). The blue lights inside the Kettle will illuminate to indicate that the Kettle is in the boil cycle. Once the water has boiled, the On/Off Switch will automatically switch to the 'Off' position and the Lights will go out.  
**NOTE:** Direct kettle spout away from cabinets, walls, etc. to prevent possible steam damage.
  5. If you want to use the Kettle again, allow the thermal safety switch to cool down for 15 – 20 seconds then press the On/Off Switch to the 'On' position (I). If the On/Off Switch does not remain in the 'On' position, the water is hot enough to use without reheating.
  6. Unplug cord from wall outlet before lifting Kettle from Power Base. Grip the Kettle by the Handle only, as the surface and lid will be hot.
  7. Return the Kettle to the Power Base or place on a heat resistant surface after use.
  8. If the Kettle is accidentally switched on when empty, the thermostat will automatically shut it off to prevent the Kettle from overheating. If this situation occurs, unplug the Power Base and let the Kettle cool before refilling.
  9. It is recommended that the power cord be disconnected from the wall outlet when not in use. **DO NOT** attempt to connect any other appliance to the Power Base or tamper with the connector in any way.

## CARE AND CLEANING

1. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
2. Unplug the Base from the wall outlet. Empty the Kettle and allow it to cool before cleaning.

### Exterior

- Use a soft, damp cloth to clean the exterior.
- **DO NOT** use abrasive cleaners. Dry exterior thoroughly before use.
- **DO NOT** immerse kettle or power base in water or other liquid.

### **Filter**

Wash the filter in warm soapy water. Rinse and replace in the filter position.

### **Descaling**

Under normal use, scale build-up will form on the inside of the kettle and will coat the stainless steel plate. Scale, which has accumulated inside the kettle must be removed. Follow either of the 2 methods below:

A) Boil equal parts of white vinegar and water (500ml/2 cups of each is recommended). Once the water has boiled, allow the mixture to stand overnight. Empty out mixture and fill kettle to the MAX level with fresh water. Bring water to a boil and discard.

B) For heavy scale build-up, use a scale/lime remover and follow its manufacturer's instructions.

**This descaling process should be repeated periodically.**

### **IMPORTANT:**

Scale build-up can be delayed by pouring out water after use then refilling the kettle when required.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

#### **LIMITED WARRANTY**

**\*\*The original sales receipt is the only acceptable proof of purchase\*\***

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Canada, at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

**TO OBTAIN PROMPT WARRANTY SERVICE:**

Contact one of our many Service Centers found on our website  
[www.salton.com/customer-care](http://www.salton.com/customer-care)

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Canada will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....

Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_ Prov/State \_\_\_\_\_ Postal/Zip Code \_\_\_\_\_

Daytime Phone No. \_\_\_\_\_ Email \_\_\_\_\_

Product defect: \_\_\_\_\_

Type of payment      Cheque/Money Order       Visa       MasterCard

Name on card \_\_\_\_\_ Expiry Date \_\_\_\_\_ CSV No \_\_\_\_\_

Card No. \_\_\_\_\_

To contact our Customer Service Department:

SALTON CANADA  
81A Brunswick,  
Dollard-des-Ormeaux, Quebec H9B 2J5  
Canada

Telephone: 514-685-3660 (Ext. 226)  
E-mail: [service@salton.com](mailto:service@salton.com)  
Fax: 514-685-8300  
[www.salton.com](http://www.salton.com)