



salton®

bacon maker



Instruction Booklet

Model: BM1735

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Always use this appliance on a dry, level surface.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid. Do not place on a wet surface.
4. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety
6. Unplug from outlet when not in use before putting on or taking off parts and before cleaning.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to manufacturer for examination, repair or electrical or mechanical adjustment. See Warranty.
8. The use of accessories or attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Extreme caution must be used when moving an appliance containing hot liquids.
12. This appliance is for Household Use Only.
13. Do not use appliance for other than intended use.
14. Do not leave unit unattended while in use.
15. Always turn the appliance off and unplug from the outlet when left unattended or finished using.
16. Do not place on or near a hot gas or electric burner, or in a heated oven.
17. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.

18. Never touch hot surfaces. Always use pot holders or oven mitts.
19. To avoid serious burns, do not place your hand on the Stainless Steel Cover or on the Cooking Plate while the appliance is in use or while the appliance is still hot, even when unplugged.
20. Lift the appliance by the bottom when not in use. The Handle on top of the unit will only lift the cover.

SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

DESCRIPTION OF PARTS

1. Handle
2. Stainless Steel Cover
3. Non Stick Cooking Plate
4. Cooking Dial
5. Drip Tray

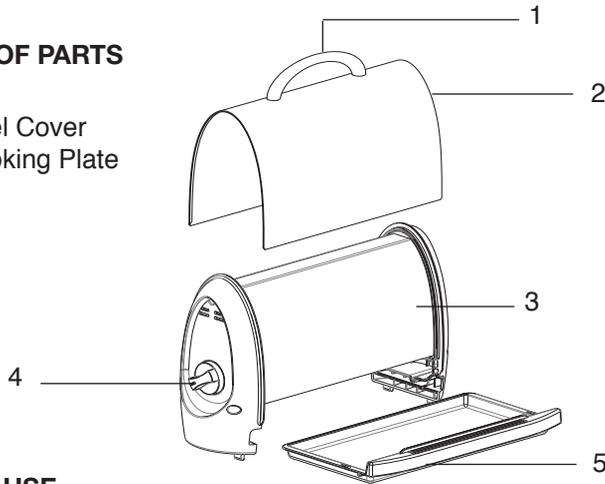

BEFORE FIRST USE

1. Remove all packaging.
2. Wash the Stainless Steel Cover and the Drip Tray in warm soapy water. Rinse and dry.
3. Wipe the Non Stick Cooking Plate with a damp cloth.
4. Place the Drip Tray back in its place.

NOTE: DO NOT use abrasive cleansers on any part of the unit.
DO NOT IMMERSE THE BASE IN WATER OR ANY OTHER LIQUID

HOW TO USE

1. Place the Bacon Maker on a dry and level surface and make sure the Drip Tray is securely in place. Plug the power cord into 120V AC wall outlet.
2. Turn the Cooking Dial to the PREHEAT setting. Slide Stainless Steel Cover over the Cooking Plate and let the unit preheat for 5 minutes. Once the unit is preheated, the Bacon Maker will chime once and the unit will turn off.
3. Remove the Stainless Steel Cover by the Handle and set aside on a heat resistant surface.
4. Carefully place 6 pieces of bacon evenly spaced on the Cooking Plate. For best results do not overlap bacon strips.
NOTE: Due to the variety of bacon on the market, the exact number of bacon strips that will fill fit on the Cooking Plate will depend on the width of each strip.
5. Slide the Stainless Steel Cover over the Cooking Plate and turn the Cooking Dial to the desired setting.
NEVER cook bacon without the Stainless Steel Cover in place. Grease from the bacon may spatter and cause serious burn or injury to individuals.
6. When the cooking cycle has ended, the Bacon Maker will chime once and the unit will turn off.
7. Using the Handle, carefully lift the Stainless Steel Cover and check the doneness. If desired, slide the Stainless Steel Cover back onto the Bacon Maker and cook for a few more minutes.
NOTE: Bacon comes in many different types and thicknesses so it is important to experiment to find the perfect cooking time & doneness.
IMPORTANT: Steam is generated during the cooking process. To avoid burns or serious injury, stay clear of the steam when lifting the Stainless Steel Cover.
8. Once bacon is done, use wooden or silicone utensils to remove the bacon.
NOTE: To avoid scratching the non stick surface, never use sharp or metal utensils to remove the bacon from the Cooking Plate.
NEVER touch the hot Cooking plate with your hands.
9. To cook additional bacon, remove the Drip Tray, discard the fat and repeat the above steps.
10. When finished, unplug the Bacon Maker from the wall outlet and allow to cool completely before cleaning.

CARE AND CLEANING

1. Discard the fat from the drip trip.
2. Wash the Stainless Steel Cover and the Drip Tray in warm soapy water or place in the dishwasher. Rinse and dry.
3. Clean the Cooking Plate with warm soapy water using a damp cloth.

IMPORTANT NOTES:

DO NOT IMMERSE THE BASE IN WATER OR ANY OTHER LIQUID

DO NOT use abrasive cleansers on any part of the unit.

4. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

****The original sales receipt is the only acceptable proof of purchase****

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Canada, at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Canada will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....

Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

SALTON CANADA
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660 (Ext. 226)
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com