



salton[®]

cordless electric
jug kettle



Instruction Booklet

Model JK1250





IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. **DO NOT** touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Salton for examination, repair or adjustment. See "Warranty" section. All servicing, other than cleaning, should be performed by an authorized service representative.
8. The use of accessories or attachments not recommended by Salton may result in fire, electric shock or personal injury.
9. **DO NOT** use outdoors.
10. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
11. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
13. **DO NOT** use appliance for other than intended use.
14. **DO NOT** leave unit unattended while in use.
15. Extreme caution must be used when moving an appliance containing hot liquids.





16. **NOTE:** Direct kettle spout away from cabinets, walls, etc. to prevent possible steam damage

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

BEFORE FIRST USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packaging.
3. Water boiled for the first time should be discarded.

INSTRUCTION FOR USE

1. The Filter has been installed on the Kettle before shipping. If it has been dislodged during shipping, check inside the Kettle or in the box for the Filter. Install before using the Kettle. (See Care and Cleaning section) **DO NOT REMOVE OR INSTALL THE FILTER WHEN THE KETTLE IS HOT.**

IMPORTANT NOTE: DO NOT USE THE KETTLE WITHOUT THE FILTER IN POSITION –

- this may allow water to spit out of the spout when boiling
- allow the kettle to remain in the boil cycle too long once the water has boiled
- the kettle may not shut off

2. Fill Kettle between the minimum and maximum levels shown on the Water Level Window.

NOTE: DO NOT attempt to fill while the Kettle is on the Power Base. **DO NOT** use for other than boiling water. Other liquids will contaminate the interior of the Kettle.





DO NOT fill past the MAX level indicated on the Water Level Window. Overfilling may cause water to spill out when boiling.

3. Place Kettle on Base making sure it is correctly engaged on its Base.
4. Plug Power Base cord into a 120V AC wall outlet.
NOTE: Never plug Power Base with empty Kettle into the electrical outlet.
5. Depress the On/Off Switch to the 'On' position. The Indicator Light will illuminate to indicate that the Kettle is in the boil cycle. Once the water has boiled, the On/Off Switch will automatically switch to the 'Off' position and the Indicator Light will go out.
NOTE: Direct kettle spout away from cabinets, walls, etc. to prevent possible steam damage.
6. If you want to use the Kettle again, allow the thermal safety switch to cool down for 15 – 20 seconds then depress the On/Off Switch to the 'On' position. If the On/Off Switch does not remain in the 'On' position, the Water is hot enough to use without reheating.
7. Unplug cord from wall outlet before lifting Kettle from Power Base. Grip the Kettle by the Handle only, as the surface and lid will be hot.
8. Return the Kettle to the Power Base or place on a heat resistant surface after use.
9. If the Kettle is accidentally switched on when empty, the thermostat will automatically shut it off to prevent the Kettle from overheating. If this situation occurs, unplug the Power Base and let the Kettle cool before refilling.
10. It is recommended that the power cord be disconnected from the wall outlet when not in use. **DO NOT** attempt to connect any other appliance to the Power Base or tamper with the connector in any way.

CARE AND CLEANING

Installing the Filter

Drop the filter into the spout with the smallest part towards the bottom of the spout. Gently push the top edge of the plastic filter frame against the kettle. You will hear the filter snap into position.

Removing the Filter

Gently push the filter out into the spout from the inside of the kettle.

IMPORTANT NOTE:

NEVER INSTALL OR REMOVE THE FILTER WHEN THE KETTLE IS HOT.





1. Unplug power cord from wall outlet. Empty out remaining water and allow Kettle to cool before cleaning.
2. If necessary, remove and clean the Aquascreen® Filter by rinsing under running water.
3. Under normal use, a deposit of scale may form on the inside of the Kettle and cause some discoloration. Scale, which has accumulated inside the Kettle, can be removed by boiling equal parts of white vinegar and water (2 cups / 500 ml of each is recommended). Once the water has boiled, allow mixture to stand several hours or overnight. Empty out mixture and fill Kettle to the MAX level with fresh water. Bring water to a boil and discard. For heavy scale build-up, repeat this process.
NOTE: This build-up can be delayed by pouring out old water and refilling before each use.
4. **DO NOT** USE ABRASIVE CLEANERS.
5. **DO NOT** ALLOW WATER TO ENTER THE POWER BASE.
6. **DO NOT** IMMERSE KETTLE OR POWER BASE IN WATER OR OTHER LIQUID.
7. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.





A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

****The original sales receipt is the only acceptable proof of purchase****

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Canada, at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.





TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Canada will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.



Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

SALTON CANADA
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660 (Ext. 226)
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com

