



salton[®]
electric
jug kettle



Instruction Booklet
Model JK1590



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
 2. **DO NOT** touch hot surfaces. Use handles or knobs.
 3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
 4. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
 5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
 6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
 7. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
 8. The use of accessories or attachments not recommended by Salton may result in fire, electric shock or personal injury.
 9. **DO NOT** use outdoors.
 10. **IMPORTANT NOTE: DO NOT USE THE KETTLE WITHOUT THE FILTER IN POSITION –**
 - this may allow water to spit out of the spout when boiling
 - allow the kettle to remain in the boil cycle too long once the water has boiled
 - the kettle may not shut off
 11. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
 12. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
- 
- 

- 
13. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
 14. **DO NOT** use appliance for other than intended use.
 15. **DO NOT** leave unit unattended while in use.
 16. Extreme caution must be used when moving an appliance containing hot liquids.
 17. **DO NOT** use Kettle without Lid in place.
 18. Scalding may occur if Lid is opened while the Kettle is hot.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

GROUNDING PLUG



To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.



BEFORE FIRST USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packaging.
3. The Aquascreen® Filter has been installed in the spout of the Kettle during production. If it has been dislodged during shipping, check inside the Kettle or in the box for the Filter. Install before using the Kettle. (See Care and Cleaning section)

IMPORTANT NOTES:

DO NOT REMOVE OR INSTALL THE FILTER WHEN THE KETTLE IS HOT.

DO NOT USE THE KETTLE WITHOUT THE FILTER IN POSITION –

- this may allow water to spit out of the spout when boiling
 - allow the kettle to remain in the boil cycle too long once the water has boiled
 - the kettle may not shut off
4. Water boiled for the first time should be discarded.

HOW TO USE

1. Open the Lid by holding the kettle handle with one hand and lifting up the Lid with the other. Fill the kettle through the lid opening with a minimum of 0.5 litres (2 cups) of water.
2. **DO NOT** attempt to fill the Kettle while it is plugged into the wall outlet. **DO NOT** use for other than boiling water. Other liquids will contaminate the interior of the kettle.
DO NOT fill past the MAX level indicated in the water level window. Overfilling may cause water to spit out when boiling.
3. Close the Lid.
4. Place Kettle on a level, dry, heat resistant surface.
5. Plug into a 120V AC wall outlet.

NOTE:

- Never plug kettle into an electrical outlet when the kettle is empty.
 - Direct kettle spout away from cabinets, walls, etc. to prevent possible steam damage.
6. Depress the On/Off Switch ('I'/'O') and the red indicator light will light up to indicate that the Kettle is in the boil cycle. Once the water has boiled, the On/Off Switch will move to the 'Off' ('O') position and the light will go out. **IMPORTANT: The kettle shuts off automatically only after the boiling cycle is complete. If the kettle is unplugged before the boiling cycle is complete then it will begin to heat as soon as it is plugged in again. To shut the kettle off before the boiling cycle is complete, lift the On/Off Switch to the 'Off' ('O') position.**
 7. The Lid should not be opened when the Kettle is hot.
 8. If you want to use the Kettle again, allow the thermal safety switch to cool down for 15 to 20 seconds then depress the On/Off Switch to the On ('I') position. If the On/Off Switch does not remain in the On position, the water is hot enough to use without reheating.
 9. Only grip the Kettle by the Handle as all other surfaces will be hot
 10. Unplug cord from wall outlet before pouring water from the Kettle.
 11. Return the Kettle to a heat resistant surface after use.
 12. **IMPORTANT:** If the Kettle is accidentally switched on when empty, the thermostat will automatically cycle on and off to prevent the Kettle from overheating. If this situation occurs, press the 'O' side of the On/Off switch and unplug the Kettle immediately. Let the Kettle cool before refilling.
 13. **DISCONNECT** the Power Cord from the wall outlet when not in use.



CARE AND CLEANING

All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.

1. Exterior

- Use a soft, damp cloth to clean the exterior.
- **DO NOT** use abrasive cleaners. Dry exterior thoroughly before use.
- **DO NOT** immerse kettle or power base in water or other liquid

2. Installing the Filter

The filter must be inserted so that the smallest part of the filter is facing down. Fit the notch in the filter onto the plastic support that runs vertically below the spout. Gently push on the left side of the filter so that it snaps into the horizontal slots on the left side of the spout. Repeat on the right hand side.

NOTE: NEVER REMOVE OR INSTALL THE FILTER WHEN THE KETTLE IS HOT.



3. Removing the Filter

To remove the Filter, gently pull one side out of the horizontal slots on either side of the spout, then pull out the other side. Lift the filter out of the kettle.



4. Descaling

Under normal use, a deposit of scale may form on the inside of the Kettle. This scale build-up can be delayed by pouring out old water and refilling before each use.

If descaling is required, follow the directions below:

- Unplug Power Cord from wall outlet and allow Kettle to cool completely.
- Open the Lid and remove the Filter as described above. Wash the Filter under running water.
- Scale which has accumulated inside the Kettle can be removed by boiling equal parts of white vinegar and water (2 cups of each is recommended). Once the water has boiled, allow the mixture to stand overnight. Empty out the mixture and fill the Kettle to the MAX level with fresh water. Bring water to a boil and discard. For heavy scale build-up, repeat this process.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

****The original sales receipt is the only acceptable proof of purchase****

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Canada, at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.



TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Canada will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.



Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

SALTON CANADA
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660 (Ext. 226)
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com

