



salton®

**chocolate
fountain**



Instruction Booklet

Model: SP1499

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Always use this appliance on a dry, level surface.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid. Do not place on a wet surface.
4. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety
6. Unplug from outlet when not in use before putting on or taking off parts and before cleaning.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to manufacturer for examination, repair or electrical or mechanical adjustment. See Warranty.
8. The use of accessories or attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Extreme caution must be used when moving an appliance containing hot liquids.
12. This appliance is for Household Use Only.
13. Do not use appliance for other than intended use.
14. Do not leave unit unattended while in use.
15. Always turn the appliance off and unplug from the outlet when left unattended or finished using.
16. Check to be sure that the switch is in the OFF position after each use. Make sure the motor is stopped before disassembling.
17. Do not touch moving parts. Make sure that the motor stops completely before disassembling.
18. Always make sure the fountain is fully assembled and the Auger and Tower are securely in position before the motor is turned on. Do not attempt to remove parts when the fountain is in operation.

19. Do not heat chocolate over 110°F (45°C) as warping of the Auger, Tower or Tiers may occur.
20. The heating element will get hot. Avoid contact until unit has completely cooled.
21. Keeps hands and foreign objects out of the fountain while it is operating.
22. Regularly check the Bowl to make sure that it is clear of chunks of fruit or other pieces of food, as they will clog the base of the Tower and the chocolate will not flow properly.
23. Do not place on or near a hot gas or electric burner, or in a heated oven.
24. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.

SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

DESCRIPTION OF PARTS

1. Tower
2. Tiers
3. Auger
4. Bowl
5. Indicator Light
6. Control Knob
7. Base

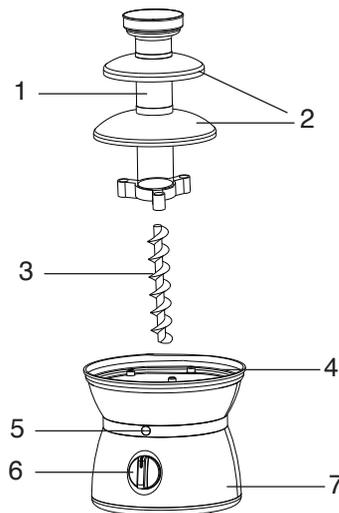

BEFORE FIRST USE

1. Remove all packaging.
2. Wash the Tower and Auger in warm soapy water. Rinse and dry.
3. Wipe the inside of the bowl and the base with a damp cloth.

NOTE: DO NOT use abrasive cleansers on any part of the unit.
DO NOT IMMERSE THE BASE IN WATER OR ANY OTHER LIQUID

HOW TO USE

1. In order for the Chocolate Fountain to work properly, place on a dry and level surface.
2. Ensure that the Auger and Tower are securely in place then plug into the wall outlet.
3. There are three settings on the Control Knob:
HEAT – Starts the heater and allows the unit to preheat
OFF – Stops operation
FLOW - Starts the motor for chocolate to flow over the Tower
4. Turn the Control Knob to the HEAT setting and let the unit preheat 3-5 minutes.
5. While the unit is preheating, melt chocolate either in microwave or in a double boiler on the stove.
NOTE: Use as little as 500g (1 lb.) and up to a maximum of 700g (1.5 lbs.) of white, milk or dark chocolate.
6. Once the chocolate is melted add approximately 1/4 cup of vegetable oil and stir thoroughly to combine. The oil will allow the chocolate to become the proper consistency to flow over the Tiers and create the “fountain” effect.
NOTE: Depending on the type of chocolate you are using you may need more or less oil to thin out the chocolate.
To test the consistency of the chocolate, dip a large spoon into the chocolate and allow it to run off the spoon. If it drips thickly from the spoon add more oil. The final consistency of the chocolate should run smoothly off the spoon.
7. Once the chocolate is ready, turn the Control Knob to the FLOW setting. Slowly add the ready chocolate mixture to the Bowl.
Chocolate will be drawn up the Tower by the Auger and begin to flow evenly over each Tier.
8. Your Chocolate Fountain is now ready for use.

IMPORTANT: Make sure to check the Bowl of the Chocolate Fountain frequently and make sure to remove any large pieces of food as this will clog the base of the Tower and chocolate will not flow properly.

NEVER PLACE ANY OBJECT OR YOUR FINGERS INSIDE THE CENTER OF THE TOWER WHILE THE CHOCOLATE FOUNTAIN IS IN USE.

CARE AND CLEANING

1. Unplug the unit from the wall outlet and allow it to cool.
2. Before the chocolate solidifies, remove the Tower and the Auger and wash in warm soapy water. Rinse and dry.
3. Carefully pour remaining chocolate from the Bowl in a container for future use or discard. **DO NOT** pour excess chocolate down the drain.
4. Wipe the inside of the bowl with a damp cloth.

DO NOT IMMERSE THE BASE IN WATER OR ANY OTHER LIQUID
DO NOT use abrasive cleansers on any part of the unit.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

****The original sales receipt is the only acceptable proof of purchase****

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Canada, at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Canada will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....

Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

SALTON CANADA
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660 (Ext. 226)
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com