



**salton®**

**2-in-1 single serve  
coffee maker**



## **Instruction Booklet**

Model: FC1952

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
8. The use of accessories or attachments not recommended by Salton may result in fire, electric shock or injury.
9. **DO NOT** use outdoors.
10. Place the Coffee Maker on a flat level surface. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
11. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
12. **DO NOT** use appliance for other than intended use.
13. Extreme caution must be used when moving an appliance containing hot liquids.
14. Scalding may occur during brewing process if Coffee Maker is not assembled or operated properly. Do not attempt to open the Top Lid during the brewing process or in the few seconds following the completion of brewing.
15. Any maintenance other than cleaning should be performed by an authorized service facility.

16. Fill the water reservoir of this appliance with water only. Do not fill with other liquids or foods, except when following the specific instructions in this guide for descaling or cleaning the machine.
17. To disconnect ensure that the Coffee Maker is off then remove the plug from the wall outlet. Always hold the plug, never pull the cord.

## SAVE THESE INSTRUCTIONS


### HOUSEHOLD USE ONLY

#### POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

#### DESCRIPTION OF PARTS

1. Water Reservoir
  - a) Water Reservoir Filter
2. Top Lid
  - a) K-Cup® Capsule Puncturing Mechanism
3. Brew Chamber Release Button
4. Interchangeable Brew Adaptor
  - a) K-Cup® Capsule Holder
  - b) Ground Coffee Filter Basket
5. Brew Spout
6. Removable Drip Tray
7. Removable Drip Tray Cover
8. Capsule Brew Button
9. Ground Coffee Brew Button

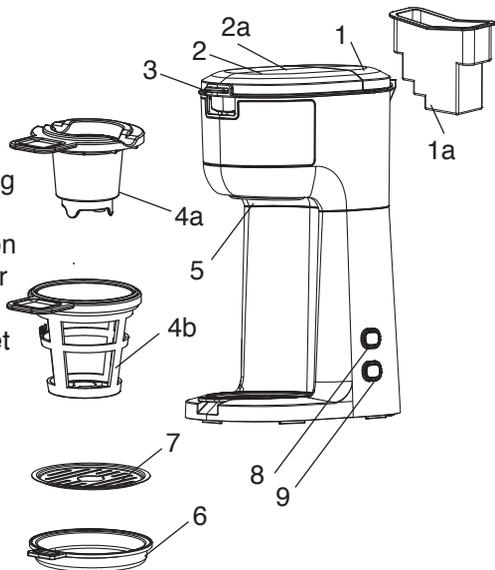

#### BEFORE FIRST USE

1. Carefully unpack the Coffee Maker and all parts. Remove any tape, labels or packaging materials.
2. Wash Water Tank Filter, Drip Tray, Drip Tray Cover, K-Cup® Capsule Holder and Ground Coffee Filter Basket with warm, soapy water.

Rinse well and dry thoroughly.

3. Wipe exterior surfaces of the product with a soft, moist cloth to remove dust particles collected during packing and handling.  
**NEVER IMMERSER THE COFFEE MAKER, CORD OR PLUG IN WATER OR ANY OTHER LIQUID.**
4. Place Coffee Maker on a solid, level, heat-resistant surface.

**CAUTION:** There are two (2) sharp needles that puncture the K-Cup® capsule. One is located in the Top Lid and the other is in the bottom of the K-Cup® Capsule Holder itself. To avoid risk of injury, do not put your fingers in or near the K-Cup® Capsule Assembly Housing.

**CAUTION:** There is extremely hot water in the K-Cup® Capsule Holder during the brewing process. To avoid risk of injury, do not press the Brew Chamber Release Button or open the Top Lid during the brewing process.

### **Cleaning the System:**

Before the first use, it is recommended to run a 14 oz cycle of water through the Coffee Maker.

1. Plug into a 120 Volt AC wall outlet.
2. Place the Water Tank Filter in the Water Tank.
3. Fill the Water Tank to the MAX level and close the Top Lid.
4. Place the Filter Basket in place. **DO NOT USE COFFEE GROUNDS OR CAPSULES WHEN CLEANING THE SYSTEM**
5. Close the Top Lid on the Coffee Maker.
6. Place a cup on the Drip Tray, beneath the Brew Spout.
7. Push the Ground Coffee Brew Button.
8. The Coffee Maker will heat and then dispense the water.
9. Once the Coffee Maker has finished dripping into the cup, the Coffee Maker will shut off and is now ready to use.

## **HOW TO USE**

### **Brewing Coffee Using a K-Cup® Capsule**

1. Place the Coffee Maker on a dry, level and heat-resistant surface.
2. Fill the Water Reservoir to the desired level from 8 to 10 ozs. of water according to the markings located on the Water Tank Filter. The recommended amount of water to brew a K-Cup® capsule is 8 to 10 ozs. **DO NOT place any liquid other than water in the Water Tank.**

3. Press the Brew Chamber Release Button on the front of the Coffee Maker to release the Top Lid and K-Cup® Capsule Puncturing Mechanism.
4. Insert a K-Cup® capsule into the Capsule Holder.  
**NOTE: Do not remove or puncture the foil top of the K-Cup® capsule before inserting into the Coffee Maker.**
5. Close the Top Lid making sure it is completely closed. The K-Cup® capsule will be punctured on the top and bottom allowing for the water to flow through the capsule during the brewing cycle.  
**NOTE: The Capsule Puncturing Mechanism will not lower and latch if the Top Lid is not properly closed.**
6. Place a cup on the Drip Tray directly under the Brew Spout.
7. Push the Capsule Brew Button and the brew cycle will begin. The Capsule Brew Button will flash while water heats. Once the Coffee Maker is ready to brew, the Capsule Brew Button will remain illuminated and stop flashing.  
**NOTE: To stop the brewing cycle at any time, press the Capsule Brew Button. Be sure to keep the cup in place until the end of the brew cycle so to catch any excess drips.**
8. When the brew cycle is complete, the Coffee Maker will shut off.
9. Wait for the Coffee Maker to cool before removing used capsules as they remain hot following the brew cycle. Press the Brew Chamber Release Button and carefully remove the used capsule and discard. Lower the Top Lid.

### **Brewing Coffee Using Ground Coffee**

1. Place the Coffee Maker on a dry, level and heat-resistant surface.
2. Fill the Water Tank to the desired level from 6 oz to 14 oz according to the markings located on the Water Tank Filter.  
**DO NOT place any liquid other than water in the Water Tank.**
3. Press the Brew Chamber Release Button on the front of the Coffee Maker to release the Top Lid.
4. Place coffee grounds into the Brew Basket. Never fill above the MAX marking of the Brew Basket.
5. Close the Top Lid of the Coffee Maker making sure it is completely closed.
6. Place a cup on the Drip Tray directly under the Brew Spout.
7. Push the Ground Coffee Brew Button and the cycle will begin. The Ground Coffee Brew Button will flash while water heats. Once the Coffee Maker is ready to brew, the Ground Coffee Brew Button will remain illuminated and stop flashing.

**NOTE: To stop the brewing cycle at any time, press the Ground Coffee Brew Button. Be sure to keep the cup in place until the end of the brew cycle so to catch any excess drips.**

8. When the brew cycle is complete, the Ground Coffee Brew Button will stop flashing and the Coffee Maker will shut off.
9. Wait for the Coffee Maker to cool before removing used coffee grounds as they remain hot following the brew cycle. Press the Release Button on the front of the Coffee Maker, carefully remove the coffee grounds and discard. Lower the Top Lid.

## **CARE AND CLEANING**

1. Unplug the Coffee Maker and allow it cool before cleaning.
2. It is recommended to check the Drip Tray regularly for excess water or coffee. Empty the Drip Tray and wipe it clean using a damp cloth. Use extra care when removing or emptying the Drip Tray to prevent spilling.
3. Remove used coffee capsules or coffee grounds from the Chamber.
4. Wipe the outside surfaces of the Coffee Maker with a damp cloth, then dry thoroughly.  
**NEVER** use harsh chemicals or abrasive cleaning pads.  
**NEVER** immerse the Coffee Maker in water or any other liquid.
5. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.

## **Descaling**

Over a period of time, minerals and calcium found in water will accumulate in your Coffee Maker and may affect optimal operation. The appliance should be cleaned approximately every three (3) months, depending on water conditions. Use distilled vinegar in the following manner to remove the mineral deposits:

1. Fill the Water Reservoir to the maximum Water Line (14 oz) with equal parts of white vinegar and cold water. Close the Top lid.
2. Place a large cup on the Drip Try beneath the Brew Spout.  
**NOTE: ENSURE THERE IS NO GROUND COFFEE OR CAPSULES IN THE BREW CHAMBER WHEN DESCALING.**
3. Press the Capsule Brew & Ground Coffee Brew Buttons at the same time. Both Buttons will illuminate. The Coffee Maker will begin pumping water with intermittent pauses in between cycles. There are 5 cycles of approximately 30 seconds each. Once all 5 cycles are completed the Coffee Maker will turn OFF.
4. Allow the unit to rest. Discard the liquid from the coffee cup. Use extreme caution as the contents may be hot.

5. Fill the Water Reservoir with 14 oz of Fresh Water and run a regular brew cycle by pressing either the Ground Coffee Brew Button or Capsule Brew Button.
6. Repeat the above step to rinse away any residual taste of vinegar. Repeat a total of 3 cycles.

### **HELPFUL HINTS**

1. Regularly clean the Coffee Maker to ensure great tasting coffee. Follow the directions in the Care & Cleaning Section.
2. Store unused ground coffee in a cool dry place. After opening a package of ground coffee reseal it tightly and store in the refrigerator to maintain its freshness.
3. For optimum coffee taste buy whole coffee beans and grind them just before brewing.

\*K-Cup® is a registered trademark of Keurig Green Mountain Inc. Salton is not affiliated with Keurig Green Mountain Inc.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

#### **LIMITED WARRANTY**

**\*\*The original sales receipt is the only acceptable proof of purchase\*\***

Salton Appliances (1985) Corp. warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Appliances (1985) Corp., at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

**TO OBTAIN PROMPT WARRANTY SERVICE:**

Contact one of our many Service Centers found on our website  
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Appliances (1985) Corp. will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....

Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_ Prov/State \_\_\_\_\_ Postal/Zip Code \_\_\_\_\_

Daytime Phone No. \_\_\_\_\_ Email \_\_\_\_\_

Product defect: \_\_\_\_\_

Type of payment      Cheque/Money Order       Visa       MasterCard

Name on card \_\_\_\_\_ Expiry Date \_\_\_\_\_ CSV No \_\_\_\_\_

Card No. \_\_\_\_\_

To contact our Customer Service Department:

Salton Appliances (1985) Corp.  
81A Brunswick,  
Dollard-des-Ormeaux, Quebec H9B 2J5  
Canada

Telephone: 514-685-3660 (Ext. 226)  
E-mail: service@salton.com  
Fax: 514-685-8300  
www.salton.com