




**salton®**

**cordless electric  
glass kettle**  
1.5 liters

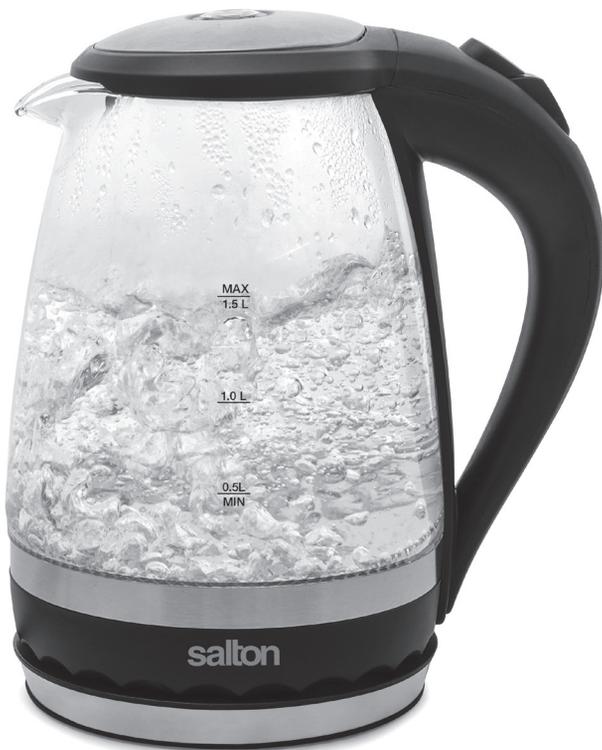

## **Instruction Booklet**

Model: GK1831

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
8. The use of accessories or attachments not recommended by Salton may result in fire, electric shock or personal injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Do not leave unit unattended while in use.
15. Extreme caution must be used when moving an appliance containing hot liquids.

16. Do not use Kettle without the Lid in place.

17. Scalding may occur if the Lid is opened while the Kettle is hot.

# SAVE THESE INSTRUCTIONS

## HOUSEHOLD USE ONLY

### GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

### BEFORE FIRST USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packaging.
3. The Aquascreen® Filter has been installed in the spout of the Kettle during production. If it has been dislodged during shipping, check inside the Kettle or in the box for the Filter. Install before using the Kettle (see Care & Cleaning section).
4. Plug the Power Base into a 120V AC wall outlet.
5. Fill the Kettle with 1 liter (4 cups) of cold tap water, place on the Power Base and press the On/Off Switch to the On position and bring to a boil.
6. Once water has boiled, open the cover and add 500 ml (2 cups) of white vinegar. Let stand for at least 1 hour or overnight. Discard water and vinegar solution.
7. Fill the kettle to the MAX fill line with cold tap water. Bring to a boil and discard. Repeat.
8. The kettle is now ready to use.

### IMPORTANT NOTES:

- **DO NOT remove or install the filter when the Kettle is hot.**
- **DO NOT use the kettle without the filter in position:**
  - This may allow water to spit out when boiling
  - The kettle may remain in the boil cycle too long once the water has boiled
  - The kettle may not shut off

## HOW TO USE

1. Open the Lid by pressing the button at the top of the handle. Fill the kettle through the lid opening with a minimum of 500 ml (2 cups) of water.
2. **DO NOT** attempt to fill the Kettle while it is plugged into the wall outlet. **DO NOT** use for other than boiling water. Other liquids will contaminate the interior of the kettle.  
**DO NOT** fill past the MAX level indicated on the glass. Overfilling may cause water to spit out when boiling.
3. Close the Lid. Ensure that it snaps tightly into place.
4. Ensure that the kettle is correctly engaged on the Base.
5. Plug into a 120V AC wall outlet.

**NOTE:** Never plug kettle into an electrical outlet when the kettle is empty.

6. Direct kettle spout away from cabinets, walls, etc. to prevent possible steam damage.
7. Press the On/Off Switch to the ON ('I') position. The blue lights inside the Kettle will illuminate to indicate that the Kettle is in the boil cycle. Once the water has boiled, the On/Off Switch will automatically switch to the OFF ('O') position and the blue lights will go out.

### **IMPORTANT:**

- a) The kettle shuts off automatically after the boiling cycle is complete.
  - b) To remove the Kettle from the Base before the boiling cycle is complete, press the On/Off Switch to the OFF position ('O'). If the Switch is not in the OFF position the boil cycle will restart when the Kettle is replaced on the Base.
8. The Lid should not be opened when the Kettle is hot.
  9. If you want to use the Kettle again, allow the thermal safety switch to cool down for 15 to 20 seconds then depress the On/Off Switch to the ON ('I') position. If the On/Off Switch does not remain in the ON position, the water is hot enough to use without reheating.
  10. Unplug cord from wall outlet before lifting Kettle from Power Base. Only grip the Kettle by the Handle as all other surfaces will be hot.
  11. Return the Kettle to the Base or a heat resistant surface after use.
  12. **IMPORTANT:** If the Kettle is accidentally switched on when empty, the thermostat will automatically cycle on and off to prevent the Kettle from overheating. If this situation occurs, press the On/Off switch to the OFF ('O') position and unplug the Kettle immediately. Let the Kettle cool before refilling.
  13. It is recommended that the Power Cord be disconnected from the wall outlet when not in use.
  14. **DO NOT** attempt to connect any other appliance to the Power Base or tamper with the connector in any way.

## CARE AND CLEANING

1. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
2. Unplug Kettle from wall outlet. Empty the Kettle and allow it to cool before cleaning.

### Exterior


- Use a soft, damp cloth to clean the exterior.
- **DO NOT** use abrasive cleaners. Dry exterior thoroughly before use.
- **DO NOT** immerse kettle or power base in water or other liquid.

### Removing the Filter

1. Locate the two slots (b) on each side of the Filter Holder.
2. Use a small screwdriver or pointed tool in one of the slots (b) to release the Filter from the Filter Holder.

### Installing the Filter

1. Place one of the small round tabs (a) into the slot (b) on one side of the filter holder.
2. Then snap the opposite tab (a) into position while moving the filter upward into position. The center post (c) should be positioned so that it is through the middle hole (d) in the top edge of the Filter.

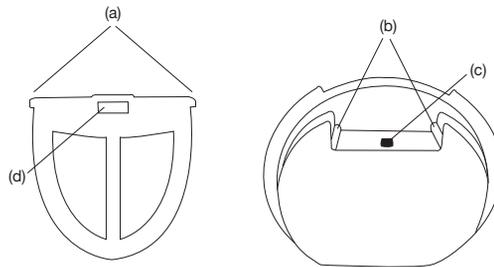

### Descaling

Under normal use, scale build-up will form on the inside of the kettle and will coat the stainless steel plate. Scale, which has accumulated inside the kettle must be removed.

1. Boil equal parts of white vinegar and water (500 ml/ 2 cups of each is recommended).
2. Once the water has boiled, allow the mixture to stand several hours or overnight.
3. Empty out mixture and fill kettle to the MAX level with fresh water.
4. Bring water to a boil and discard.
5. For heavy scale build-up, use a solution of pure vinegar, and let stand overnight.
6. Empty out vinegar and fill kettle to the MAX level with fresh water.

7. Bring water to a boil and discard.

**This descaling process should be repeated once a month**

**NOTE:** Scale build-up can be delayed by pouring out water after use then refilling the kettle when required.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

**LIMITED WARRANTY**

\*\*The original sales receipt is the only acceptable proof of purchase\*\*

Salton Appliances (1985) Corp. warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Appliances (1985) Corp., at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

**TO OBTAIN PROMPT WARRANTY SERVICE:**

Contact one of our many Service Centers found on our website  
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Appliances (1985) Corp. will not be held responsible for in-transit damage or for packages that are not received

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....

Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_ Prov/State \_\_\_\_\_ Postal/Zip Code \_\_\_\_\_

Daytime Phone No. \_\_\_\_\_ Email \_\_\_\_\_

Product defect: \_\_\_\_\_

Type of payment      Cheque/Money Order       Visa       MasterCard

Name on card \_\_\_\_\_ Expiry Date \_\_\_\_\_ CSV No \_\_\_\_\_

Card No. \_\_\_\_\_

To contact our Customer Service Department:

Salton Appliances (1985) Corp.  
81A Brunswick,  
Dollard-des-Ormeaux, Quebec H9B 2J5  
Canada

Telephone: 514-685-3660 (Ext. 226)  
E-mail: service@salton.com  
Fax: 514-685-8300  
www.salton.com