



TREATS
salton[®]

**gummy candy
maker**



Instruction Booklet

Model: GM1707

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. DO NOT touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Do not allow children to operate this appliance. Close supervision is necessary when any appliance is used by or near children. Children should not play with this appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to manufacturer for examination, repair or adjustment. See Warranty section.
8. The use of accessories or attachments not recommended by the manufacturer may cause hazards.
9. DO NOT use outdoors.
10. DO NOT let cord hang over edge of table or counter, or touch hot surfaces.
11. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot liquids.
13. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to OFF, then remove plug from wall outlet.
14. This appliance is for Household Use Only. DO NOT use appliance for other than intended use.
15. NEVER leave the appliance unattended while in use.
16. To avoid personal injury, always position your gummy maker well back from the edge of the counter or table. Always use your gummy maker on a dry flat, stable, heat resistant surface.
17. During use, the appliance gets very hot and remains hot for some time after being turned OFF. DO NOT touch hot surfaces like the inside of the heated base.

18. Keep hands and face away from the opening of the pot.
19. DO NOT put fingers or plastic utensils into the hot mixture.

SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

DESCRIPTION OF PARTS

1. Handles
2. Heating Pot
3. Heated Base
4. On/Off Switch
5. Silicone Molds
6. Interlocking Ice Trays

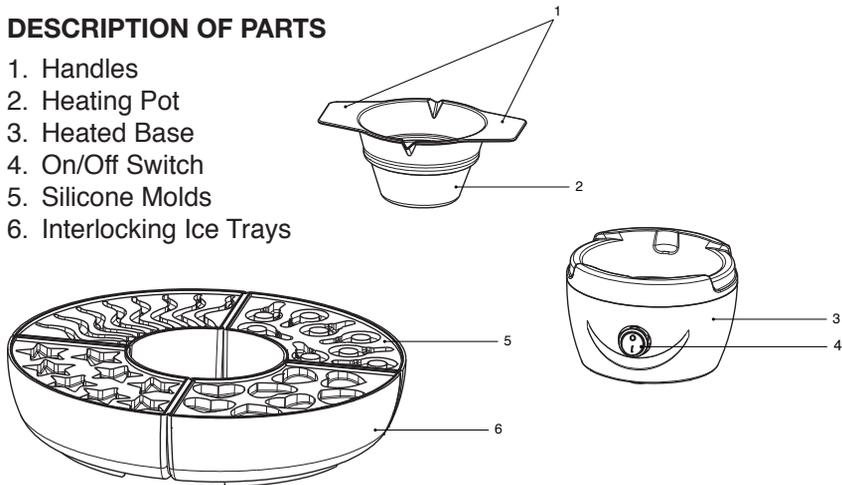

BEFORE FIRST USE

1. Remove all packaging.
2. Wash the Heating Pot, Silicone Molds and Interlocking Ice Trays with a soft cloth in warm soapy water.
3. Dry thoroughly with a soft cloth.
4. Wipe outside and inside of Heated Base with a damp cloth and dry.
IMPORTANT: Never immerse Heated Base, cord or plug in water or any other liquid.

HOW TO USE

1. Assemble the Interlocking Ice Trays by connecting them into a circle.
2. Add ice to each Interlocking Tray to $\frac{3}{4}$ full.

NOTE: DO NOT overfill with ice or the Silicone Molds will not fit properly over the ice.

3. Place the Silicone Molds over the Interlocking Ice Trays.
4. Slide the Heated Base power cord underneath the Interlocking Ice Trays then place the Heating Pot in the center of the circle.
5. Plug the unit into a 120V wall outlet.
6. Press the On/Off Switch on the Heated Base to the On (I) position and preheat.
7. Use your own recipe or follow one of the recipes in this instruction manual and add the ingredients in the Heating Pot.
8. **IMPORTANT: Be very careful not to fill past the MAX marking inside the Heating Pot.**

NOTE: Maximum capacity of the Heating Pot is 1 cup.

9. Place the Heating Pot inside the Heated Base and heat for 5-10 minutes until the gelatin has dissolved and mixture is runny. Stir mixture occasionally.

IMPORTANT:

- NEVER leave the unit unattended while in use.
 - DO NOT let mixture boil over, as this could cause burns.
10. Once the mixture is ready, press the On/Off Switch on the Heated Base to the Off (O) position and unplug the cord from the wall outlet.
 11. Grab the Heating Pot by the Handles and carefully pour the mixture into the Silicone Molds using the spout on the Heating Pot.
 12. Let the gummies cool for approximately 15 minutes.
 13. Once the gummies have solidified, remove from the Silicone Molds and enjoy or store in an airtight container in the fridge for about 1 week.

CARE AND CLEANING

1. Unplug the cord from the wall outlet and allow the Heated Base and Heating Pot to cool.
2. Wash the Heating Pot, Silicone Molds and Interlocking Ice Trays with a soft cloth in warm soapy water.

NOTE: The Silicone Molds can be washed in the dishwasher on the TOP RACK ONLY.

NOTE: DO NOT use steel wool or abrasive cleaners on any part of your appliance.

3. Dry thoroughly with a soft cloth.
4. Wipe outside and inside of Heated Base with a damp cloth and dry.
IMPORTANT: Never immerse Heated Base, cord or plug in water or any other liquid.
5. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.

RECIPES

BASIC GUMMIES

3 oz (85 g)	your favorite flavor gelatin
1 tbsp (15 mL)	unflavored gelatin
1/2 cup (125 mL)	warm water

Add all ingredients to the Heating Pot and follow the instructions in the “HOW TO USE” section.

SUGAR-FREE GUMMIES

0.3 oz (10.3 g)	your favorite sugar-free gelatin
1 tbsp (15 mL)	unflavored gelatin
1/2 cup (125 mL)	warm water

Add all ingredients to the Heating Pot and follow the instructions in the “HOW TO USE” section.

FRUITY GUMMIES

1 tbsp (15 mL)	honey
2 tbsp (30 mL)	unflavored gelatin
1/2 cup (125 mL)	your favorite fruit juice

Add all ingredients to the Heating Pot and follow the instructions in the “HOW TO USE” section.

REAL FRUIT GUMMIES

1 tbsp (15 mL)	honey
2 tbsp (30 mL)	unflavored gelatin
1/2 cup (125 mL)	your favorite pureed fruit

Add all ingredients to the Heating Pot and follow the instructions in the “HOW TO USE” section.

SOUR GUMMIES

Follow the BASIC, SUGAR-FREE, FRUITY or REAL FRUIT GUMMIES recipe above.

After removing the gummies from the Silicone Mold, toss in citric acid and shake off excess.

BUBBLY GUMMIES

1 tbsp (15 mL) honey
2 tbsp (30 mL) unflavored gelatin
1/2 cup (125 mL) your favorite carbonated drink

Add all ingredients to the Heating Pot and follow the instructions in the “HOW TO USE” section.

ENERGY GUMMIES

1 tbsp (15 mL) honey
2 tbsp (30 mL) unflavored gelatin
1/2 cup (125 mL) your favorite energy drink

Add all ingredients to the Heating Pot and follow the instructions in the “HOW TO USE” section.

CHOCOLATE GUMMIES

1 tsp (5 mL) vanilla
1 tbsp (15 mL) unsweetened cacao powder
2 tbsp (30 mL) honey
2 tbsp (30 mL) unflavored gelatin
1/2 cup (125 mL) coconut milk

Add all ingredients to the Heating Pot and follow the instructions in the “HOW TO USE” section.

WINE GUMMIES

2 tbsp (30 ml) sugar
2 tbsp (30 ml) unflavored gelatin
1/2 cup (125 ml) your favorite red, white or rosé wine

Add all ingredients to the Heating Pot and follow the instructions in the “HOW TO USE” section.

BEER GUMMIES

2 tbsp (30 ml) sugar
2 tbsp (30 ml) unflavored gelatin
1/2 cup (125 ml) your favorite beer

Add all ingredients to the Heating Pot and follow the instructions in the “HOW TO USE” section.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

The original sales receipt is the only acceptable proof of purchase

Salton Appliances (1985) Corp. warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Appliances (1985) Corp., at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Appliances (1985) Corp. will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....

Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

Salton Appliances (1985) Corp.
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660 (Ext. 226)
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com