



**TREATS**  
**salton**<sup>®</sup>  
hot dog toaster



## **Instruction Booklet**

Model: HD1911

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. **DO NOT** touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
8. The use of accessories or attachments not recommended by the manufacturer may cause hazards.
9. **DO NOT** use outdoors.
10. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
11. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "Off", then remove plug from wall outlet.
13. Always unplug the appliance when not in use before cleaning to avoid accidental electric shock.
14. Always unplug the appliance from the outlet and allow to cool before cleaning.
15. **DO NOT** use appliance for other than intended use.
16. **DO NOT** leave unit unattended while in use.
17. Only operate the Hot Dog Toaster on a dry, flat non-slip surface.
18. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.

19. A fire may occur if the Hot Dog Toaster is covered or touching flammable material, including curtains, draperies, walls and the like, when in operation. Do not operate under wall cabinets.
20. **DO NOT** attempt to dislodge food when the Hot Dog Toaster is plugged in.
21. **DO NOT** place any bread or object on top of the Hot Dog Toaster. This will block airflow and cause fire or damage to the toaster.
22. This appliance is strictly intended for the use of regular sized hot dogs and buns. Do not attempt to cook any other food in this Hot Dog Toaster.

## SAVE THESE INSTRUCTIONS


### HOUSEHOLD USE ONLY

#### POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

#### DESCRIPTION OF PARTS

1. Cooking Level Knob
2. Carriage Control Lever
3. Hot Dog Slot
4. Hot Dog Basket
5. Hot Dog Bun Slot
6. Tongs
7. Crumb Tray
8. Cancel Button

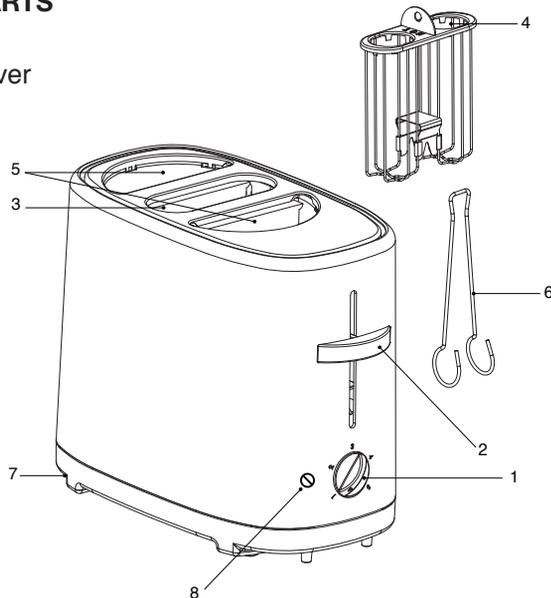

## **BEFORE FIRST USE**

1. Remove all packaging.
2. Read all instructions carefully and keep them for future reference.
3. Ensure that the Crumb Tray is locked in position on the bottom of the Hot Dog Toaster.
4. Plug the power cord into a 120 V AC wall outlet.
5. Operate the Hot Dog Toaster once or twice without bread on the highest browning level to burn off any residue left from the manufacturing process. Any smoke or smells produced during this procedure are normal.

## **HOW TO USE**

1. Plug power cord into a 120V AC wall outlet.
2. Place the Hot Dog Toaster on a stable, flat, heat resistant surface.
3. Ensure that the Crumb Tray is in position on the bottom of the Hot Dog Toaster.
4. Place two hot dogs into the Hot Dog Basket and place the Basket into the Hot Dog Slot.
5. Place two regular sized opened hot dog buns, and insert into the Hot Dog Bun Slots.
6. Select the degree of cooking:  
**Lowest** – setting 1  
**Highest** – setting 5  
**IMPORTANT: If the toaster is not plugged in, the Carriage Control Lever will not lock.**
7. Push the Carriage Control Lever down until it locks.
8. When the toasting cycle is complete, the Hot Dog Basket and buns with the carriage Control Lever will pop-up automatically.
9. To remove hot dogs and buns, use the tongs provided
10. If you wish to raise the carriage control lever before the end of the toasting cycle, press the Cancel Button.

## **HELPFUL HINTS**

1. When your Hot Dog Toaster is heated for the first time, it may emit slight smoke or odor. This is normal and does not affect the safety of the appliance.
2. Ensure to cook at least one hot dog and one hot dog bun. Follow the How to Use section.
3. For better results allow hot dogs and buns to reach room temperature before cooking them in the Hot Dog Toaster.  
**DO NOT COOK FROZEN HOT DOGS IN THE HOT DOG TOASTER**
4. Cooking times may need to be adjusted as some hot dogs and buns may require additional time to cook.
5. Some hot dogs and buns may require more time to cook, adjust the cooking time accordingly.

## **CARE AND CLEANING**

1. Unplug the power cord from wall outlet. Allow the Hot Dog Toaster to cool before cleaning.
2. Do not use abrasive cleansers. Simply wipe the exterior with a clean damp cloth and, if necessary, a mild soap. Dry thoroughly.
3. To remove crumbs, pull the latch to unlock and release the crumb tray. Wipe the Crumb Tray with a damp cloth. Stubborn spots can be removed with a plastic mesh pad. Dry thoroughly. Place Crumb Tray back into position.
4. Never operate the Hot Dog Toaster without the Crumb Tray locked securely into position.
5. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.

**IMPORTANT:** Remove crumbs from the Crumb Tray regularly. A large build-up of crumbs could become a fire hazard. To remove any pieces of bread remaining in the Hot Dog Toaster, unplug the Hot Dog Toaster then turn upside down and shake gently. Never insert any hard or sharp instrument into the slots as this could damage the Hot Dog Toaster and cause a safety hazard.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

**LIMITED WARRANTY**

\*\*The original sales receipt is the only acceptable proof of purchase\*\*

Salton Appliances (1985) Corp. warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Appliances (1985) Corp., at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

**TO OBTAIN PROMPT WARRANTY SERVICE:**

Contact one of our many Service Centers found on our website  
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Appliances (1985) Corp. will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....

Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_ Prov/State \_\_\_\_\_ Postal/Zip Code \_\_\_\_\_

Daytime Phone No. \_\_\_\_\_ Email \_\_\_\_\_

Product defect: \_\_\_\_\_

Type of payment      Cheque/Money Order       Visa       MasterCard

Name on card \_\_\_\_\_ Expiry Date \_\_\_\_\_ CSV No \_\_\_\_\_

Card No. \_\_\_\_\_

To contact our Customer Service Department:

Salton Appliances (1985) Corp.  
81A Brunswick,  
Dollard-des-Ormeaux, Quebec H9B 2J5  
Canada

Telephone: 514-685-3660 (Ext. 226)  
E-mail: service@salton.com  
Fax: 514-685-8300  
www.salton.com