




salton®

electric
food slicer

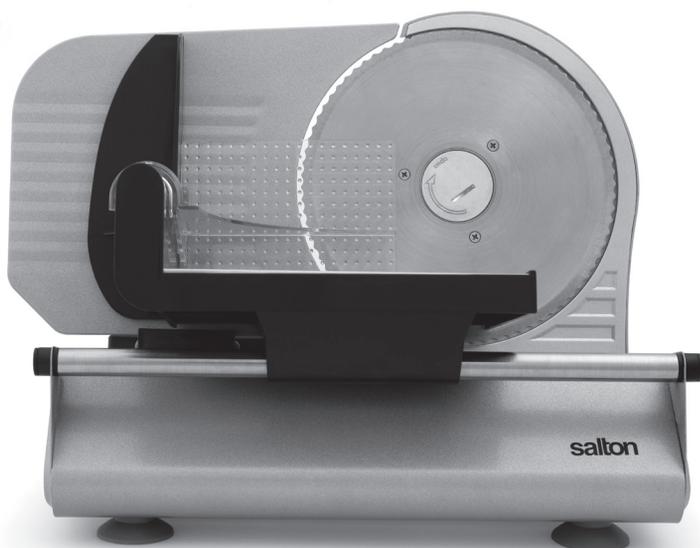

Instruction Booklet

Model: SL1991

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. **DO NOT** IMMERSE APPLIANCE IN WATER OR OTHER LIQUID.
3. **DO NOT** use the Food Slicer without the Food Pusher and the Blade Guard secured into place.
4. **BLADE IS EXTREMELY SHARP. HANDLE VERY CAREFULLY.**
5. Close supervision is necessary when any appliance is used by or near children. Do not allow children to play with the appliance.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Unplug from outlet when not in use, when removing or putting on parts, and before cleaning.
7. Avoid contacting moving parts.
8. Never attempt to feed food by hand. Always assemble Slicer completely before use; with Food Pusher, Food Platform and Guide in place.
9. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance has been damaged in any manner. Return appliance to Salton for examination, repair or adjustment. See Warranty.
10. To avoid damaging the cord, do not squeeze, bend it on sharp edges. Keep it away from hot surfaces and open flames as well. Do not let the rotating blade touch the power cord.
11. The use of accessories or attachments not recommended by Salton may cause hazards.
12. **DO NOT** use outdoors.
13. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
14. The Blade is very sharp. Handle with care when cleaning.
15. **NEVER PUT YOUR FINGERS NEAR THE BLADE WHILE IT IS IN OPERATION**
16. Never put the unit near a hot burner, in an oven, or in a dishwasher.
17. Do not operate the appliance with wet hands or while standing on a wet floor. Do not touch the power plug with wet hands.
18. Keep the appliance away from any hot surfaces and open flames. Always operate the appliance on a level, stable, clean and dry surface. Protect the appliance against heat, dust, direct sunlight, moisture, dripping and splashing water.

19. Do not place heavy objects on top of the appliance. Do not place objects with open flames, e.g. candles, on top of or beside the appliance. Do not place objects filled with water, e.g. vases, on or near the appliance.
20. This appliance is for Household Use Only.
21. **DO NOT** use appliance for other than its intended use.
22. Do not pull the power plug out of the electrical outlet by the power cord and do not wrap the power cord around the appliance.
23. Never place hand behind Sliding Food Platform.

SAVE THESE INSTRUCTIONS




HOUSEHOLD USE ONLY

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

DESCRIPTION OF PARTS

1. Adjustable Thickness Knob
2. Adjustable Guide
3. On/Off Safety Switch
4. Sliding Food Platform
5. Food Pusher
6. Food Platform Track
7. Stainless Steel Blade
8. Blade Cover
9. Non-slip Suction Feet

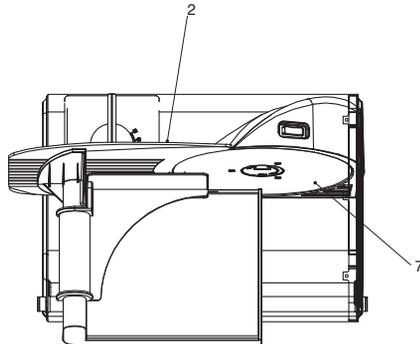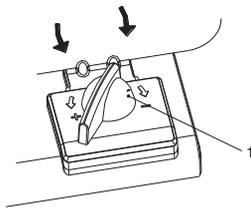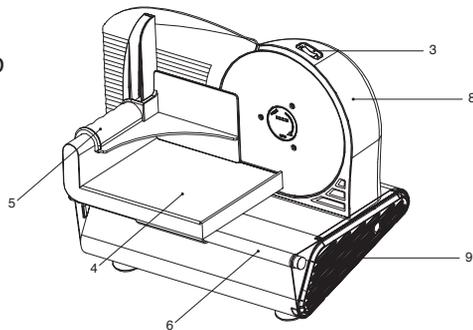

BEFORE FIRST USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packing material or labels on the product.
3. Wipe the Sliding Food Platform, Food Pusher and Blade with a clean damp cloth.

HOW TO USE

1. Place Slicer on a smooth, dry, flat surface. The suction cups underneath the appliance will help secure the Slicer to the surface.
2. Check that the Food Platform moves smoothly back and forth on the Food Platform Track.
3. Place the Food Pusher onto the Sliding Food Platform.
NOTE: Food should not be larger than 11 x 11 x 9 cm (4.3 x 4.3 x 3.5”).
4. Set the Adjustable Thickness Knob to desired setting, turning clockwise for thinner slices and counter-clockwise for thicker slices. The Thickness Knob can adjust from 0 mm - 15mm (1/16” – 9/16”).
5. Plug it into a 120 Volt AC outlet.
6. Position food on the Sliding Food Platform and place hands so that your fingers align with the grooves on the Food Pusher.
7. For continuous slicing grasp the Food Pusher with the right hand. Press the On/Off Switch to Position I, the blade will rotate continuously until the On/Off Switch is switched to the OFF position. Slide the Food Platform toward the Blade while applying gentle but steady pressure with the Pusher.
8. For intermittent slicing grasp the Food Pusher with the right hand. Press and hold the On/Off Switch in Position II. Slide the Sliding Food Platform toward the Blade while applying gentle but steady pressure with the Food Pusher. Release the On/Off Switch to stop the Blade from turning. Repeat for additional slices.
NOTE: For intermittent slicing the Slicer will only operate if the On/Off Switch is held in Position II.
9. The Slicer can be operated continuously for 10 minutes after which it should be turned off and allowed to cool for 30 minutes.
10. Unplug when not in use.
11. For safety reasons, always reset the Adjustable Guide to the “O” position after use.

HELPFUL HINTS

Deli Meats

1. Do not slice anything containing bones, large seeds or other extremely hard materials.
2. Remove all wrapping material from food before slicing.

3. Use a constant, gentle pressure to obtain uniform slices.
4. Do not attempt to slice without using both the Sliding Food Platform and the Food Pusher.
5. To obtain wafer thin slices of meats, chill for 2-4 hours before slicing.

Hot Roasts, Beef, Pork, Lamb

1. When slicing boneless roasts, remove from the oven and allow to cool for 15-20 minutes before slicing so the meat will retain its natural juices and slice without crumbling.
2. Remove thick rinds from slabs of bacon before slicing.
3. If needed, cut the roast to fit on the Sliding Food Platform
4. To allow for easy cleanup, place aluminum foil on the Sliding Food Platform to catch any juices or crumbs.
5. For meats with string, remove strings one at a time as the strings become closer to the blade (ensure the motor is off).

Cheeses

1. To avoid cheese from sticking, turn the Slicer off and moisten the Blade with warm water and a damp cloth.
2. Chill hard cheeses before slicing.
3. Before serving, allow cheese to reach room temperature. This will enhance the natural flavors.
4. Some hard cheeses such as cheddar will not slice.

Fruits and Vegetables

1. Slice potatoes for thick or thin homemade chips.
2. Slice cabbage for coleslaws.
3. Slice carrots lengthwise in very thin strips. Soak in ice water to curl.
4. Slice zucchini, eggplant and squash.
5. Slice peeled and cored pineapple for pineapple slices.

Breads, Cakes and Cookies

1. Fresh bread should be cooled to room temperature before slicing.
2. Slice breads, pound cakes and fruit cakes.

CARE AND CLEANING

1. Unplug and clean Slicer after each use.
2. Remove Food Pusher from the Slicer.
3. Wipe the Sliding Food Platform and Blade with a clean damp cloth.
4. It is recommended to occasionally clean the Blade.
To clean the Blade:
 - Align the Adjustable Guide with the Blade.
 - Ensure the Sliding Food Platform is to the left side of the Slicer.

- Place a coin in the depression found in the middle of the Blade and follow the direction of the arrow (clockwise).
 - Carefully remove the Blade
 - CAUTION:** The Blade is very sharp. Handle with care.
 - Wipe the Blade with a damp cloth and soapy water. Use a clean damp cloth to rinse. **DO NOT WASH BLADE IN THE DISHWASHER**
 - After cleaning, coat the Blade with vegetable oil to keep lubricated.
 - To replace the Blade, ensure the plastic tabs are lined up and return the Blade in place. Place a coin in the depression found in the middle of the Blade and turn counter-clockwise.
5. Make sure all parts are dry before re-assembling and storing the Slicer.
 6. **NOTE: DO NOT** immerse in water or other liquids.
 7. If there is any dirt or grease build-up on the Non-slip Suction Feet, it can be cleaned with rubbing alcohol.
 8. When storing the Slicer, ensure the Blade and Adjustable Guide is aligned to ensure safety and proper blade protection.
 - IMPORTANT NOTES:**
 - **DO NOT** use abrasive cleansers to clean any part of the Slicer.
 - **DO NOT** place any parts in the dishwasher
 - The motor is concealed in the Slicer housing, **NEVER** immerse in water or any other liquid.
 - The motor does not need to be oiled.
 9. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

****The original sales receipt is the only acceptable proof of purchase****

Salton Appliances (1985) Corp. warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Appliances (1985) Corp., at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Appliances (1985) Corp. will not be held responsible for in-transit damage or for packages that are not received

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....

Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

Salton Appliances (1985) Corp.
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660 (Ext. 226)
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com