



salton®

**temperature
control kettle**
cordless - 1.7 L



Instruction Booklet

Model: GK1967

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
8. The use of accessories or attachments not recommended by Salton may result in fire, electric shock or personal injury.
9. **DO NOT** use outdoors.
10. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
11. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
13. **DO NOT** use appliance for other than intended use.
14. **DO NOT** leave unit unattended while in use.
15. Extreme caution must be used when moving an appliance containing hot liquids.
16. **DO NOT** use Kettle without the Lid in place.
17. Scalding may occur if the Lid is opened while the Kettle is hot.
18. Direct Kettle spout away from cabinets, walls, etc. to prevent possible steam damage.

19. **DO NOT** use the Kettle if water is below the 0.5 L (MIN) or above the 1.7 L (MAX) markings.
20. It is recommended that the power cord be disconnected from the wall outlet when not in use.
21. **DO NOT** attempt to connect any other appliance to the Power Base or tamper with the connector in any way.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

IMPORTANT – HIGH ALTITUDE LOCATIONS

Water boils at lower temperatures at high altitudes. For every 152 meters (500 feet) above sea level, the boiling point of water will be 0.5°C (1°F) lower than the boiling point of 100°C (212°F) at sea level. This Kettle has been calibrated to automatically shut-off when water boils for approximately 30 – 40 seconds, regardless of the requested temperature.


The temperature settings below the boil temperature of 100°C (212°F) will not be affected by high altitude.

GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

DESCRIPTION OF PARTS

- 1) Spout
- 2) Aquascreen® Filter
- 3) Lid
- 4) Lid Opener
- 5) Handle
- 6) Control Panel
 - a. Keep Warm
 - b. Temperature Display
 - c. Temperature Selection Icon (°C/°F)
 - d. Power Icon
- 7) Base
- 8) Cord Wrap (not shown)

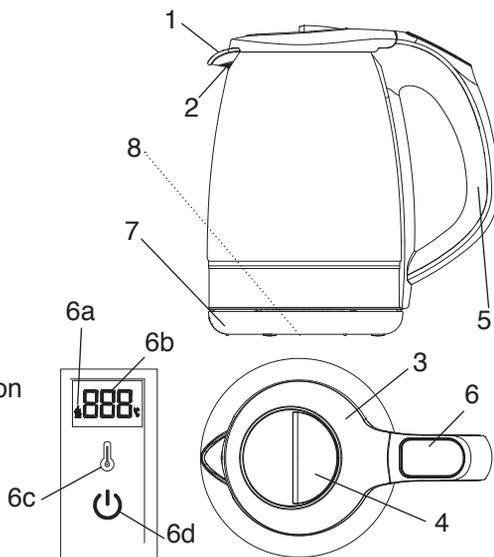

BEFORE FIRST USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packaging.
3. The Aquascreen® Filter has been installed in the spout of the Kettle during production. If it has been dislodged during shipping, check inside the Kettle or in the box. Install the Filter before using the Kettle. See the Care and Cleaning section.

IMPORTANT NOTES:

- **DO NOT remove or install the Filter when the Kettle is hot.**
 - **DO NOT use the kettle without the Filter in position:**
 - This may allow water to spit out when boiling
 - The Kettle may remain in the boil cycle too long once the water has boiled
 - The Kettle may not shut off
4. Open the Kettle by lifting the Lid Opener. Fill the Kettle with 1 L (4 cups) of cold tap water. Close Lid and follow the directions in the 'Control Panel Display' and 'To Use the Boil Setting' sections.
 5. Open the Lid and add 500 mL (2 cups) of white vinegar and let stand for at least 1 hour or overnight. Discard.
 6. Fill the Kettle to the MAX fill line with cold tap water. Close Lid and bring water to a boil and discard. Repeat.
 7. The Kettle is now ready to use.

HOW TO USE

FILLING THE KETTLE

1. Open the Lid by lifting the Lid Opener. Fill the Kettle with water between the MIN and MAX markings.
2. Close the Lid. Ensure that it snaps into place.
3. Place Kettle and Base on a flat, level, dry, heat resistant surface. Ensure that it is correctly engaged on the Base.
4. Plug into a 120V AC wall outlet.
5. Follow the instructions to either boil water or set the variable temperature settings on page 5.

Important:

- Never plug the Kettle into an electrical outlet when the Kettle is empty.
- **DO NOT** attempt to fill the Kettle while it is plugged into the wall outlet.
- **DO NOT** use for other liquids besides water. Other liquids will contaminate the interior of the Kettle.
- **DO NOT** fill past the MAX level indicated on the Kettle. Overfilling may cause water to spit out when boiling.
- Direct Kettle spout away from cabinets, walls, etc. to prevent possible steam damage.

CONTROL PANEL DISPLAY

Turning On the Control Panel:

Ensure that there is water in the Kettle between the MIN and MAX markings. Press the finger indent on the Control Panel at the top of the Handle and the display will light up. The display will show the current water temperature.

Choosing Celsius or Fahrenheit

The default temperatures are in Celsius. To switch to Fahrenheit, press and hold the Temperature icon  for 3 seconds and the Kettle will switch between °C and °F temperatures.

To Use the Boil Setting

1. Fill the Kettle with water (see instructions on page 4)
2. Turn on the Control Panel Display (see instructions above)
3. Tap the Power Icon  once and the Kettle automatically sets to the default temperature of 100°C. The lights will come on inside the Kettle to indicate that it is in the heating cycle. The temperature will flash 3 times then will switch to the current water temperature. The Temperature Display will increase until it reaches 100°C or 212°F.
4. When the water has boiled the Kettle will shut off.

IMPORTANT: This Kettle has a Keep Warm feature than can be used with the Variable Temperature settings. The maximum temperature for this setting is 90°C/194°F. If this feature has accidentally been set (icon shows on the left side of the temperature display) then you will not be able to set the Kettle to 100°C/212°F. Simply lift the Kettle off the Power Base and start at #3 above.

To Use the Variable Temperature Settings

1. Fill the Kettle (see instructions on page 4)
2. Turn on the Control Panel (see instructions above)
3. Tap the Temperature Icon  to change the temperature from the 100°C default temperature. The display will show the temperatures starting from 40°C to 100°C in 10°C increments with each tap of the Temperature Icon .

NOTE:

- a) the temperatures only go up. To set a temperature less than 100°C you need to tap the Temperature Icon  past 100°C and the temperatures will start over from 40°C.
- b) Do not hold the Temperature Icon  to change the temperature as this will switch the Kettle between °C and °F temperatures. Quick taps of the Temperature Icon  will change the temperature.

4. Tap the Power icon  and the lights will come on inside the Kettle to indicate that the Kettle is in the heating cycle. The display will flash the chosen temperature 3 times then will display the current water temperature.
5. The temperature will increase in the display until it reaches the chosen temperature then the Kettle will shut off.
6. To use the Keep Warm function follow the instructions below.

IMPORTANT NOTES

- The Kettle shuts off automatically after the heating cycle is complete.
- If the Kettle is removed from the base before the boiling cycle is complete the heating cycle will be cancelled.
- To turn the Kettle off before the boiling cycle is complete turn on the Control Panel Display and press the Power Icon .
- The Lid should not be opened when the Kettle is hot.
- If you want to use the Kettle again, allow the thermal safety switch to cool down for 15 to 20 seconds then follow the directions in the How to Use the Boil Setting or How to Use the Variable Temperature Setting on page 5.
- Only grip the Kettle by the Handle as all other surfaces will be hot.
- Return the Kettle to the Base or a heat resistant surface after use.
- If the Kettle is accidentally switched on when empty, the thermostat will automatically cycle on and off to prevent the Kettle from overheating.

Setting the Keep Warm Function

The Keep Warm setting can be used at all temperatures except boil. The maximum temperature for Keep Warm is 90°C/194°F.

To use the Keep Warm function press and hold the power icon  for 3 seconds instead of tapping the icon – see #4 in the “To Use the Variable Temperature Settings” section on page 5. When the Keep Warm setting has been set the Icon will be displayed on the left hand side of the Temperature Display.

The Keep Warm function will remain active for 2 hours if the Kettle remains on the base. If the Kettle is lifted off the base the Keep Warm setting is cancelled.

KETTLE TEMPERATURE AND COLOUR GUIDE

The Kettle light colours correspond to the following temperatures:

Temperature	Kettle Light Colours
Below 50°C / 122°F	light blue
50°C / 122°F	green
60°C / 140°F	dark blue
70°C / 158°F	purple
80°C / 176°F	yellow
90°C / 194°F to boil	red

The following is a general guide for brewing different types of tea. Brand and freshness of tea including each individuals taste and preference differs.

If your tea box/container has brewing instructions, follow those as they are probably ideal for that specific tea.

Type of Tea	Water Temperature	Steep Time
Black tea	100°C / 212°F	3-5 minutes
Herbal tea	100°C / 212°F	5-8 minutes
Oolong	90°C / 194°F	3-5 minutes
Green tea	80°C / 176°F	1-3 minutes
White tea	80°C / 176°F	4-8 minutes
Matcha tea	70°C / 158°F	follow package directions

Your Kettle can also be used for bringing the water to the perfect temperature for the following. Please remember that these are guidelines only.

Others:	Water Temperature
Baby formula preparation	40°C / 104°F (water should have been previously boiled)
Hot Chocolate	80°C / 176°F
Instant soup mixes	90°C / 194°F
Oatmeal	90°C / 194°F

CARE AND CLEANING

1. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
2. Unplug Kettle from wall outlet. Empty the Kettle and allow it to cool before cleaning.

Kettle Exterior

1. Wipe the exterior with a soft, damp cloth. **DO NOT** use abrasive cleaners or immerse the Kettle or Power Base in water or other liquid.
2. Dry exterior thoroughly before use.

Kettle Interior – Descaling

Under normal use, scale build-up will form on the inside of the Kettle and will coat the stainless steel plate. Scale, which has accumulated inside the Kettle must be removed. Follow either of the 2 methods below:

A) For light scale build-up:

Fill the Kettle with 1 L (4 cups) of cold tap water and bring to a boil.

Add 500 mL (2 cups) of white vinegar and let stand overnight.

Discard.

Fill the Kettle to the MAX fill line with cold tap water. Bring to a boil and discard. Repeat.

B) For heavier scale build-up:

Use a commercial scale remover and follow its manufacturer's instructions.

The Kettle is ready to use.

IMPORTANT:

- The descaling process should be repeated periodically.
- Scale build-up can be delayed by pouring out water after use then refilling the Kettle with clean water before re-using.

Filter

The Aquascreen® Filter can be removed for cleaning. Grasp the top plastic portion of the Filter, above the center plastic divider, between your thumb and forefinger. **DO NOT** grasp the metal portion of the Filter. Push the Filter to the left as much as possible and pull down on the right side of the Filter to release. Wash the Filter in warm soapy water. Rinse

Replace by inserting the left side of the Filter first then pushing up on the right side until the Filter snaps into place.

IMPORTANT NOTES:

- **DO NOT remove or install the filter when the Kettle is hot.**
- **DO NOT use the Kettle without the filter in position:**
 - This may allow water to spit out when boiling
 - The Kettle may remain in the boil cycle too long once the water has boiled
 - The Kettle may not shut off

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

****The original sales receipt is the only acceptable proof of purchase****

Salton Appliances (1985) Corp. warrants that this appliance shall be free from defects in material and workmanship for a period of three (3) years from the date of original purchase. Salton Appliances (1985) Corp., at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Appliances (1985) Corp. will not be held responsible for in-transit damage or for packages that are not received

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....

Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

Salton Appliances (1985) Corp.
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660 (Ext. 226)
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com