



portable blender



Instruction Booklet

Model: BL2045BL & BL2045RD

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or any other liquid.
3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
5. Unplug from outlet when not charging or when taking off parts and before cleaning.
6. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty
7. Avoid contacting moving parts.
8. **DO NOT** attempt to open blender when in use
9. Blades are sharp. Handle carefully.
10. This product contains lithium-ion batteries that are not replaceable. **DO NOT** attempt to dismantle this appliance or replace the batteries to avoid serious injury or death.
11. Always operate the blender with the cover in place.
12. **DO NOT** use hot liquids.
13. The use of accessories or attachments, not recommended or sold by the manufacturer may cause fire, electric shock or injury.
14. **DO NOT** charge outdoors.
15. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
16. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
17. Always attach magnetic USB charging cable to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.

18. This appliance is for Household Use Only. **DO NOT** use appliance for other than intended use.
19. **DO NOT** leave unit unattended while in use.

SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

POWER SUPPLY

This personal blender requires a 5V 1A charging adaptor (not included)

DESCRIPTION OF PARTS

1. Lid and Motor Assembly
2. Carry Strap
3. Blending Cup
4. Magnetic Charging Port
5. On/Off Button
6. Indicator Light

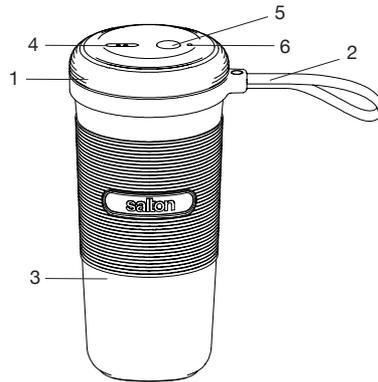

BEFORE FIRST USE

1. Remove any packaging.
2. Read all instructions carefully and keep them for future reference.
3. Wash Blending Cup in warm soapy water.
4. Wipe the Lid and Motor Assembly using warm water and a soft sponge or cloth. **NOTE:** Be careful as blades are sharp.
5. Do not fully immerse the Lid and Motor Assembly.

HOW TO USE

1. Using the magnetic USB cable provided, fully charge the blender. The Indicator Light will be red while charging. When the battery is fully charged, the Indicator Light will turn blue.
2. Prepare any fruits and vegetables by cutting them into 1cm cubes prior to blending.
3. Add fruits and/or vegetables and water or your preferred liquid to the blending cup. **NOTE:** The combined amount of food and liquid should not exceed the 300ml maximum capacity of the Blending Cup.

4. Screw the Lid and Motor Assembly onto the Blending Cup and double-click the On/Off button to begin blending. The Indicator Light will turn blue and flash 6 times to indicate that the Lid is in the correct position. **NOTE:** If the Indicator Light turns red and flashes six times, or if the blender does not start, ensure that the lid is correctly positioned and double-click the On/Off button.
5. Hold blender upside down during operation and shake gently to blend food and liquid. The blending cycle will stop automatically after 40 seconds.
6. Return to upright position and shake. If desired consistency is not achieved, repeat steps 1-5.
7. Once blending is complete, the blender's lid can be removed and the blending cup can be used to directly consumer your juice, smoothie, etc.
NOTE: Should you wish to stop the blending cycle at any time, press the On/Off button once.

CARE AND CLEANING

1. Clean the Blending Cup in warm soapy water. Use a soft sponge or cloth and soapy water to wipe down the Lid and Motor Assembly.
2. Thoroughly rinse Blending Cup and Lid and Motor Assembly. **DO NOT** immerse Lid and Motor Assembly in water.
3. Wipe dry all parts or allow to air dry before storing the blender.
NOTE: Handle with care as the blades are sharp.
4. Ensure blender is clean and completely dry before storing in a dry, ventilated area away from direct sunlight.

Rapid Clean

Add water to the blending cup. Do not exceed 300ml. Double-click the On/Off button, turn the blender upside down and allow blender to complete one blending cycle.

LIMITED WARRANTY

****The original sales receipt is the only acceptable proof of purchase****

Salton Appliances (1985) Corp. warrants that this appliance shall be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. Salton Appliances (1985) Corp., at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Appliances (1985) Corp. will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....

Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

Salton Appliances (1985) Corp.
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660 (Ext. 226)
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com