


 **salton**®

egg bite maker

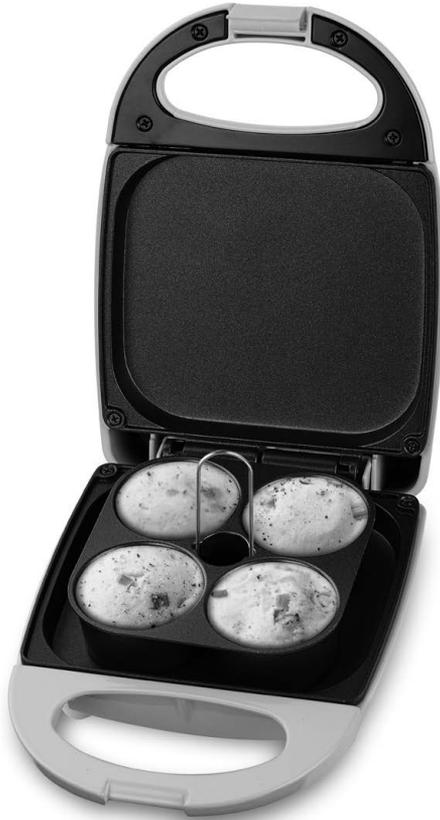

Instruction Booklet

Model: SP2042

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. **DO NOT** touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, **DO NOT** immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
8. The use of accessories or attachments not recommended by Salton may cause hazards.
9. **DO NOT** use outdoors.
10. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
11. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. **DO NOT** move the unit when it is still hot.
14. Prior to connecting or disconnecting plug from wall outlet, turn any control to 'Off'.
15. Always unplug appliance immediately after using. Allow to cool before cleaning and storing.
16. Always place appliance on a heat resistant surface.
17. **CAUTION:** This appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, fires or other damage to property caused by touching the sides or top while in use or during cooling.

18. **DO NOT** use appliance for other than intended use.
19. **DO NOT** leave appliance unattended while in use.
20. **DO NOT** touch the metallic parts of the unit while the appliance is operating. These can become very hot.

SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

DESCRIPTION OF PARTS

1. Heating Plates
2. Indicator Light (not shown)
3. Egg Cups
4. Removal Tool
5. Carrying Handles
6. Locking Clip

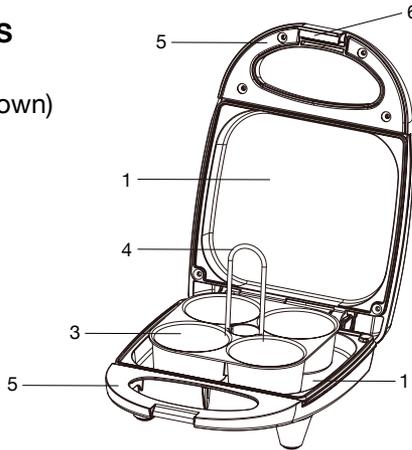

BEFORE FIRST USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packaging.
3. Clean the Heating Plates by wiping with a sponge or cloth dampened in warm water.
DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ONTO THE COOKING SURFACE.
4. Clean the Egg Cups by washing in warm soapy water with a sponge or cloth.
5. Dry all parts and accessories with a cloth or paper towel.

HOW TO USE

The use of oil, butter or cooking spray is optional. Your Egg Cups have a non-stick surface to ensure easy release of Egg Bites once cooked. Should you find your Egg Bites do not release easily from the Egg Cups you may add oil or cooking spray inside each Egg Cup before filling with egg mixture.

1. Before cooking the non-stick Egg Cups must be “seasoned”. Brush a small amount of vegetable oil or use a non-stick cooking spray on the Egg Cups and wipe off any excess with a paper towel. Your Egg Bite Maker is now ready to use.
2. Fill one Egg Cup with water and pour onto the lower Heating Plate.
3. Prepare your eggs and mix in any ingredients.
4. Fill Egg Cups $\frac{3}{4}$ full with egg mixture and place Egg Cups on Heating Plate.
5. Close Lid. **NOTE: DO NOT** close the locking clip. Your Egg Bites require space to expand during the cooking process.
6. Plug unit into a 120V AC outlet. The indicator light will illuminate to indicate the appliance is heating. The indicator light will cycle on and off with the thermostat. This indicates the unit is maintaining the correct temperature during use. This is normal. **NOTE:** Preheating the unit is not necessary.
7. Check Egg Bites after approximately five minutes, or when the water has evaporated from the cooking surface. The Egg Bite Maker may be opened during the cooking process to check your progress. Egg Bites are ready within 5-10 minutes, when the desired consistency is reached. **NOTE:** Cooking time will vary based on ingredients used and personal preference.
8. The exterior of the appliance is designed to stay cool to the touch. Care must be used when opening and closing the lid, as internal parts, including Egg Cups will be hot and steam may escape when opening the lid. **NOTE:** Always use the removal tool provided to remove the Egg Cups from the Heating Plate to avoid risk of injury or burns.

HELPFUL HINTS

- Five large eggs will yield approximately two batches in your Egg Bite Maker.
- If you find your eggs are sticking in the Egg Cups you may use oil, butter or cooking spray for easy release once cooking is complete.
- Egg Bites may be prepared and stored in your fridge for a convenient snack. Simply allow to cool before storing in an airtight container in your fridge.

CARE AND CLEANING

1. Unplug the Egg Bite Maker and allow it to cool.
2. Wipe the Heating Plates with a cloth dampened with warm soapy water. **DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ONTO THE COOKING PLATES.**
3. Clean the Egg Cups by washing in warm soapy water with a sponge or cloth.
4. Dry the Heating Plates and the Egg Cups with a cloth or paper towel.
5. **DO NOT** use steel wool pads or other abrasive cleansers on the Heating Plates or the Egg Cups as they may damage the non-stick coating.
6. Wipe the outside of the Egg Bite Maker with a soft cloth dampened in warm soapy
7. Rinse by wiping with a dampened clean cloth. Dry.
8. All servicing, other than cleaning, should be performed by an authorized service representative.

RECIPES

Cheddar and Broccoli Egg Bites

5 eggs
2 tbsp.(30 ml) shredded sharp Cheddar cheese
pinch of salt
pinch of freshly ground pepper
2 florets cooked broccoli

Whisk eggs, Cheddar cheese, salt and pepper until well combined. Cut broccoli florets into small pieces and place in bottom of Egg Cups. Pour egg mixture into Egg Cups until they are $\frac{3}{4}$ full. Makes approximately 8-10 Egg Bites.

Tomato Basil Egg Bites

5 eggs
3 leaves fresh basil (coarsely chopped)
 $\frac{1}{4}$ (60 ml) cup finely diced tomatoes
2 tbsp.(30 ml) crumbled feta cheese

Whisk eggs, basil, tomatoes and feta until well combined. Pour egg mixture into egg cups, one at a time until Egg Cups are $\frac{3}{4}$ full. Gently stirring egg mixture before filling each Egg Cup ensures ingredients are evenly distributed between Egg Bites. Makes approximately 8-10 Egg Bites.

Cheesy Bacon Egg Bites

5 eggs

2 bacon slices, cooked and crumbled

2 tbsp.(30 ml) shredded Cheddar cheese

1 tbsp.(30 ml) shredded Monterey Jack cheese

pinch of salt

pinch of pepper

Whisk eggs, Cheddar, Monterey Jack and salt and pepper until well combined. Add crumbled bacon to bottom of Egg Cups. Pour egg mixture into Egg Cups until they are $\frac{3}{4}$ full. Makes approximately 8-10 Egg Bites.

Spinach and Feta Egg Bites

5 eggs

$\frac{1}{4}$ (60 ml) cup chopped spinach

$\frac{1}{4}$ (60 ml) cup crumbled feta cheese

pinch of freshly ground pepper

Whisk eggs, spinach, feta and pepper until well combined. Pour egg mixture into Egg Cups until they are $\frac{3}{4}$ full. Makes approximately 8-10 Egg Bites.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

****The original sales receipt is the only acceptable proof of purchase****

Salton Appliances (1985) Corp. warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Appliances (1985) Corp. at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Appliances (1985) Corp. will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....

Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

Salton Appliances (1985) Corp.
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660 (Ext. 226)
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com